



FF Installation manual

Bearing plate system

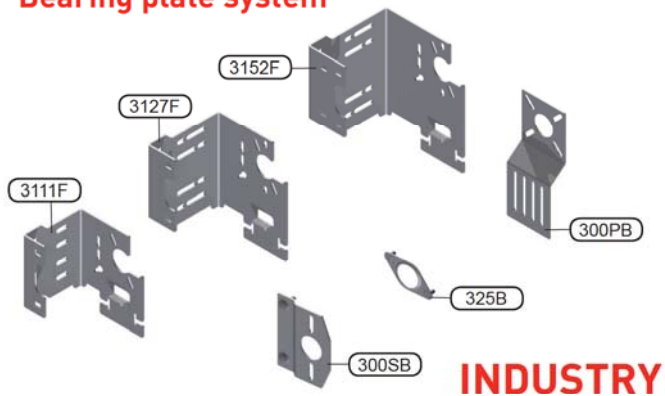

01 106 992 rev. 12-12-2016

1

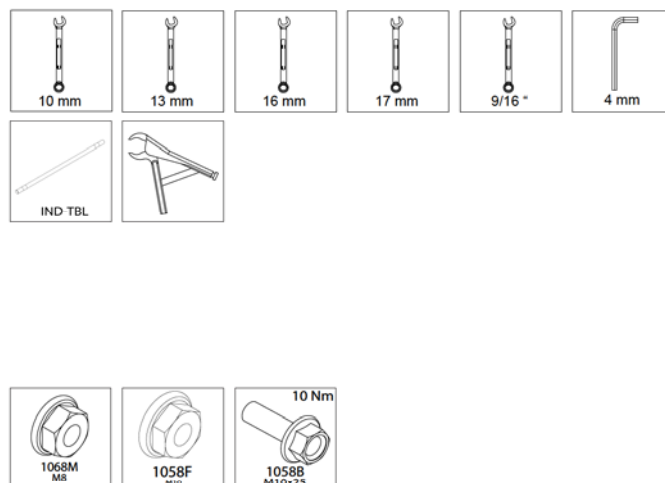

01 106 992 rev. 12-12-2016

2


X	111	127	152
Y	92	133	158

NL	FFNL12	FFNL32-125
	FFNL18	
HL	FFHL54	FFHL164
	FFHL120	FFHL164-125
VL	FFVL11	FFVL18
		FFVL18-125

106AS-51

01 106 992 rev. 12-12-2016


3

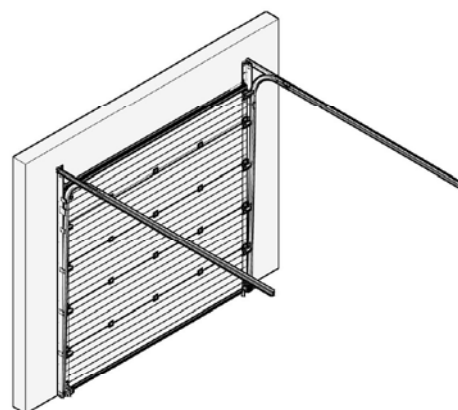

106AS-49

01 106 992 rev. 12-12-2016


4

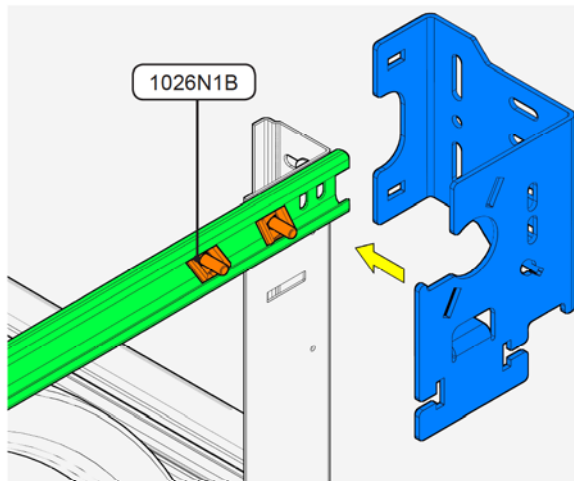

106AS-3

01 106 992 rev. 12-12-2016


5

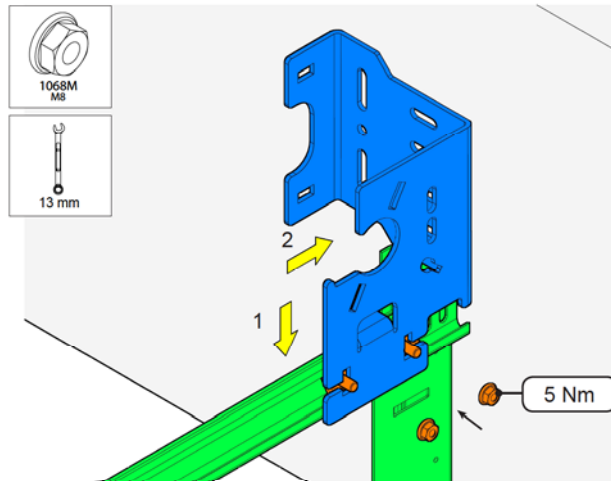

106AS-2

01 106 992 rev. 12-12-2016


6

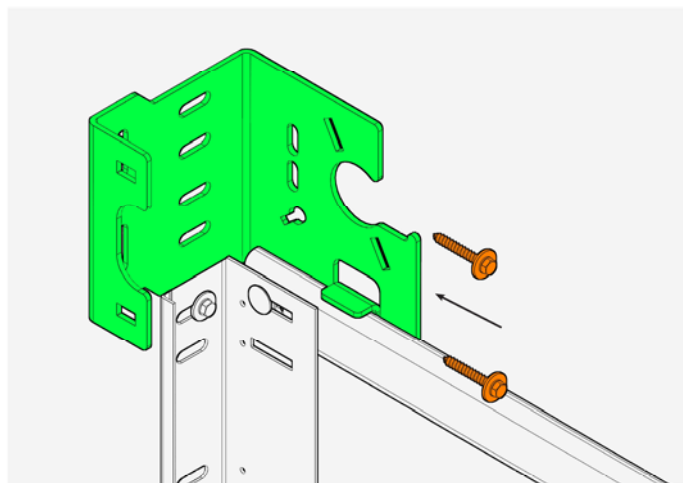

106AS-4

01 106 992 rev. 12-12-2016

7

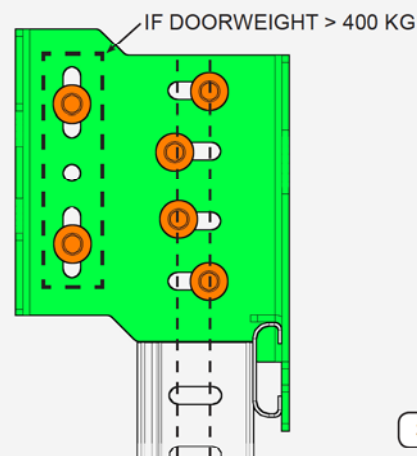

106AS-26

01 106 992 rev. 12-12-2016

8

