


FF Installation manual













SolidStep

40mm finger safe panels with:




- multi point lock (MPL)
- or single point lock (SPL)

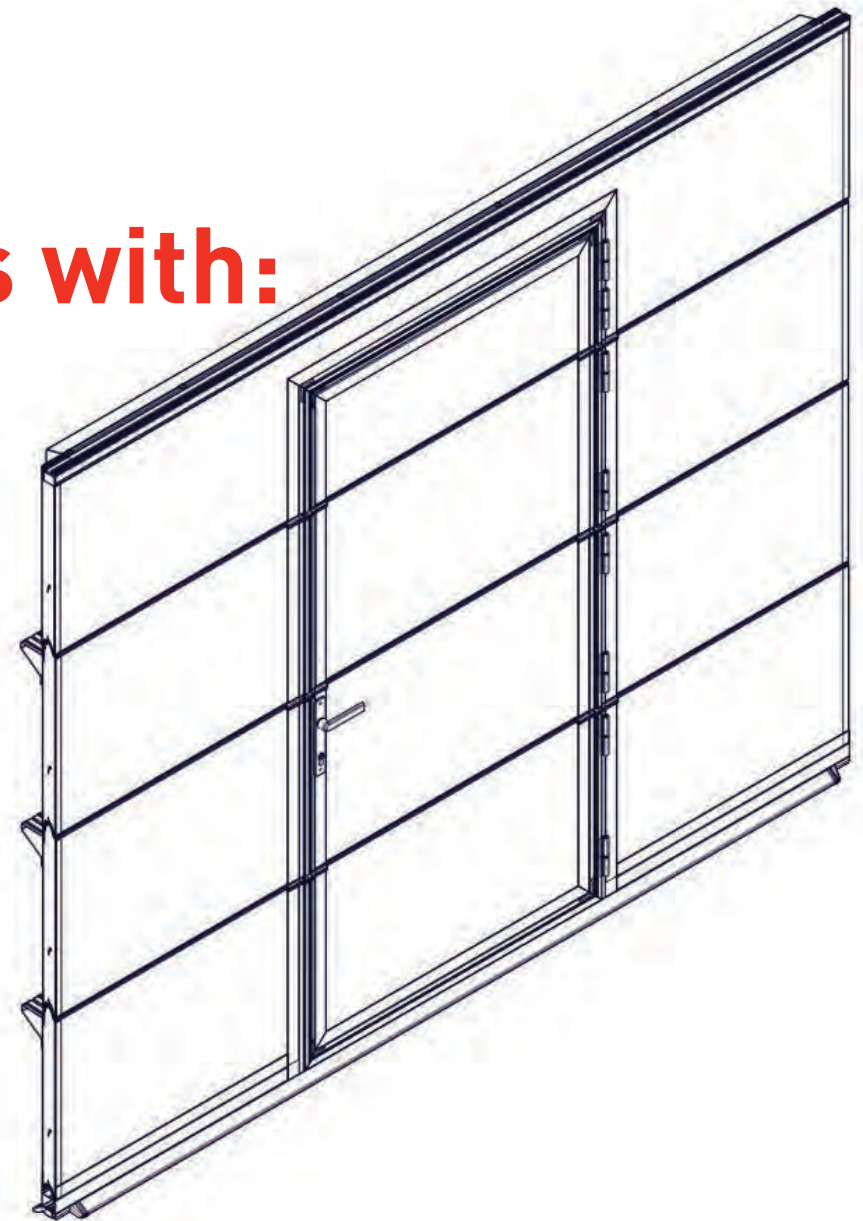

Needed tools

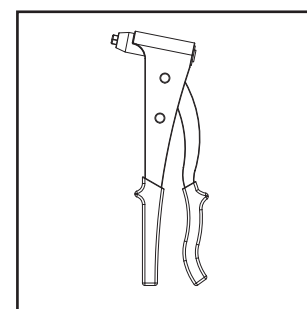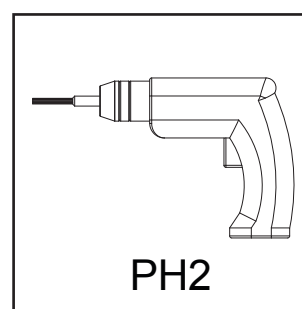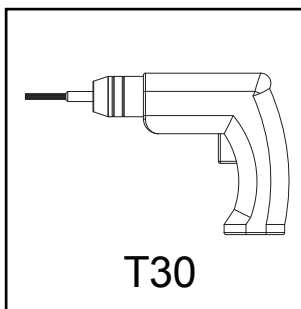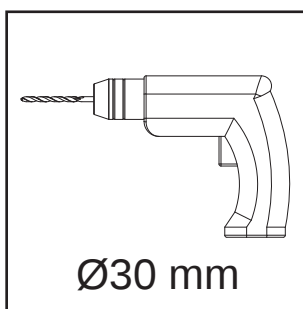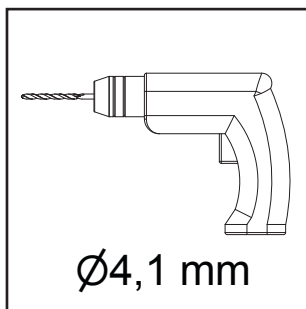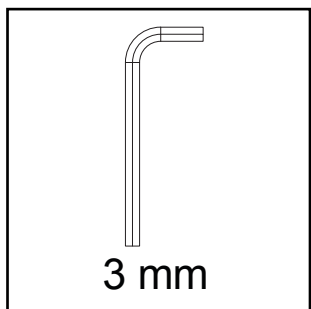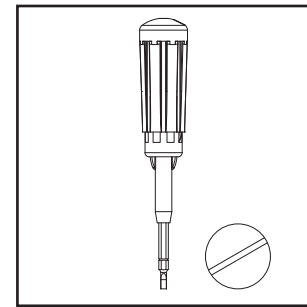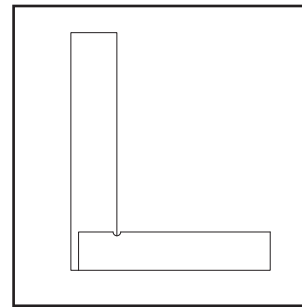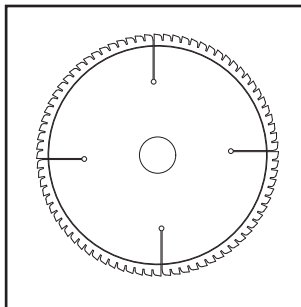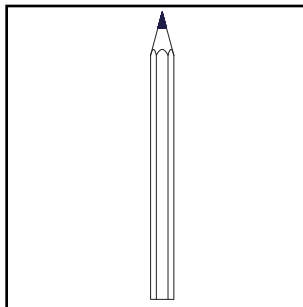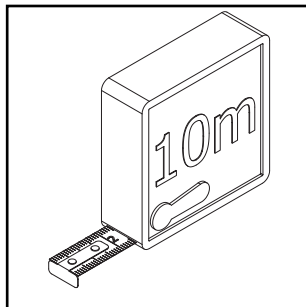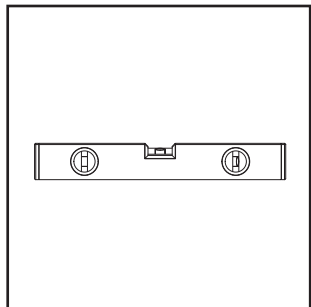


Needed fixing materials

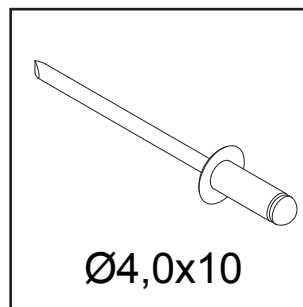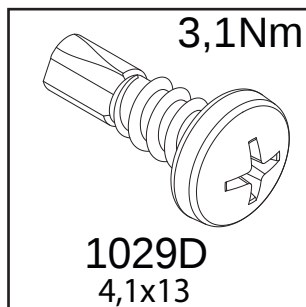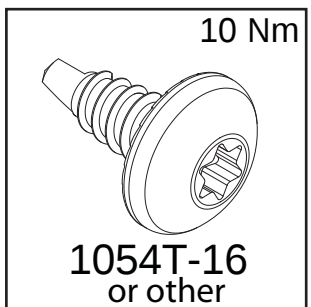


Used symbols



TANGENT - lines and/or surfaces are tangent with each other

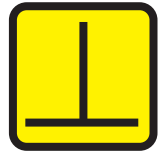

PERPENDICULAR - lines and/or surfaces are at a 90° angle with each other

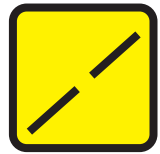

INLINE - lines and/or surfaces are inline with each other




PARALLEL - lines and/or surfaces are parallel with each other




EQUAL - lines and/or surfaces are equal to each other

This manual is based on a MULTI POINT LOCK
RIGHT HANDED DOOR!
(width 905 mm)



RIGHT HANDED DOOR

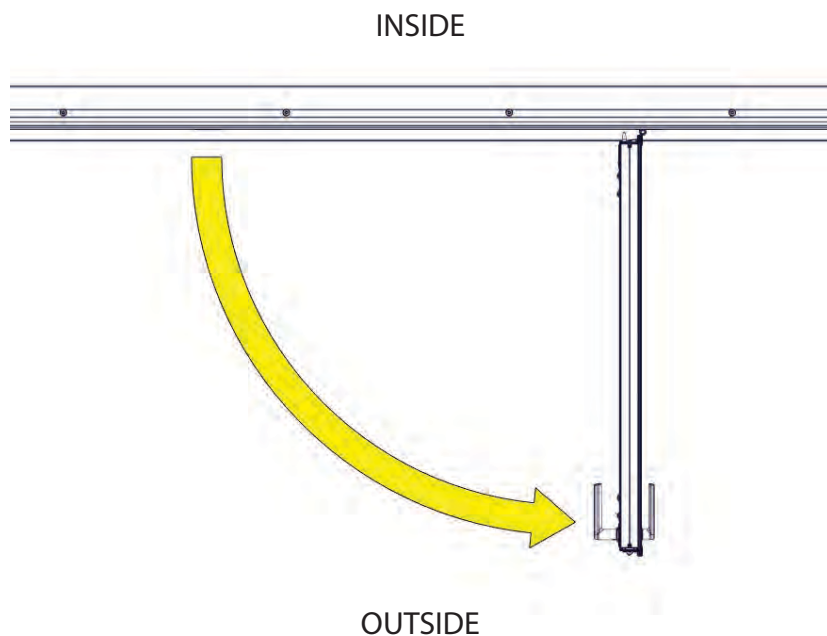



LEFT HANDED DOOR

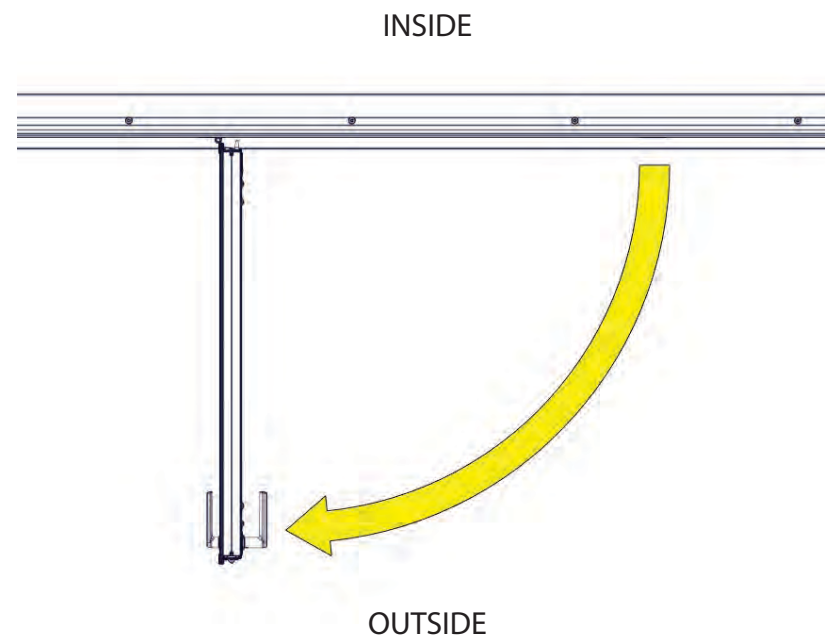


System dimensions

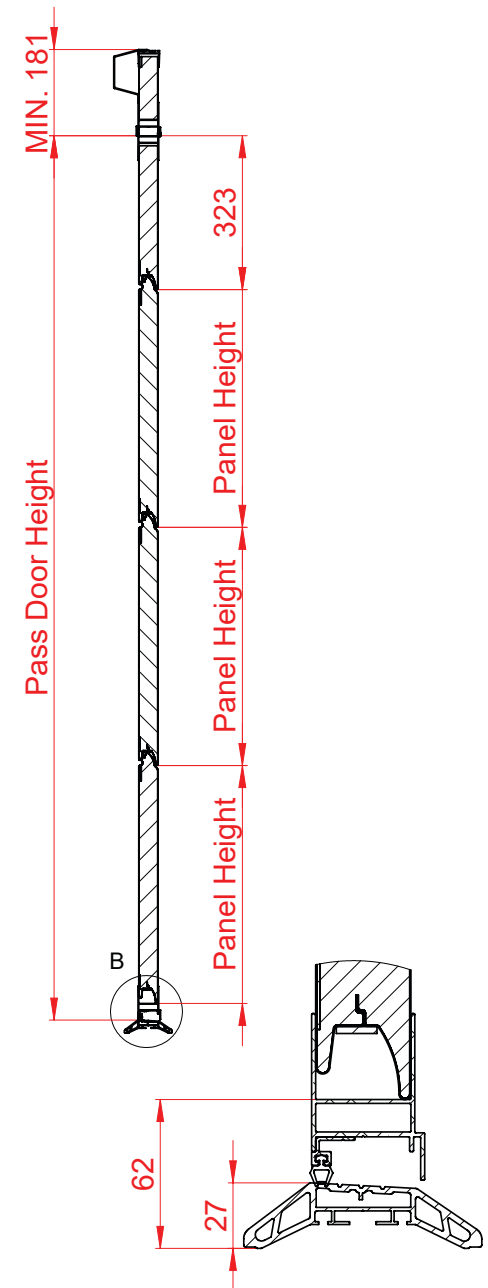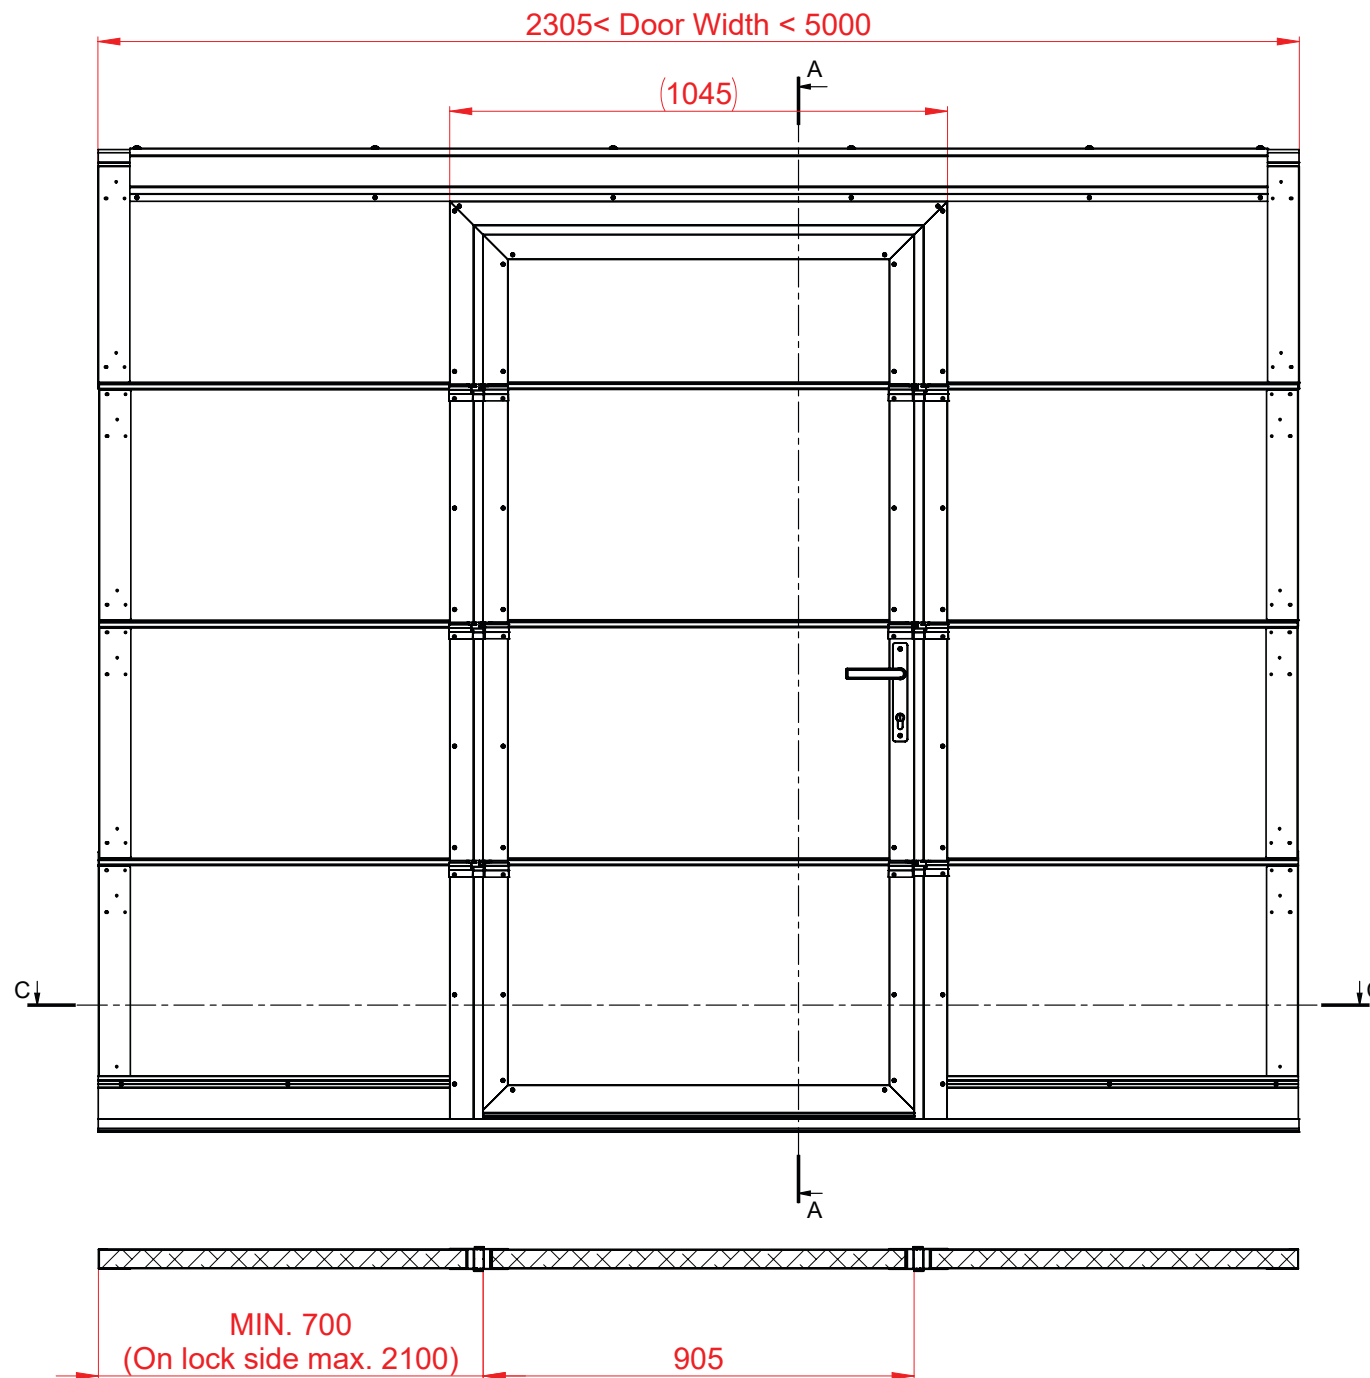

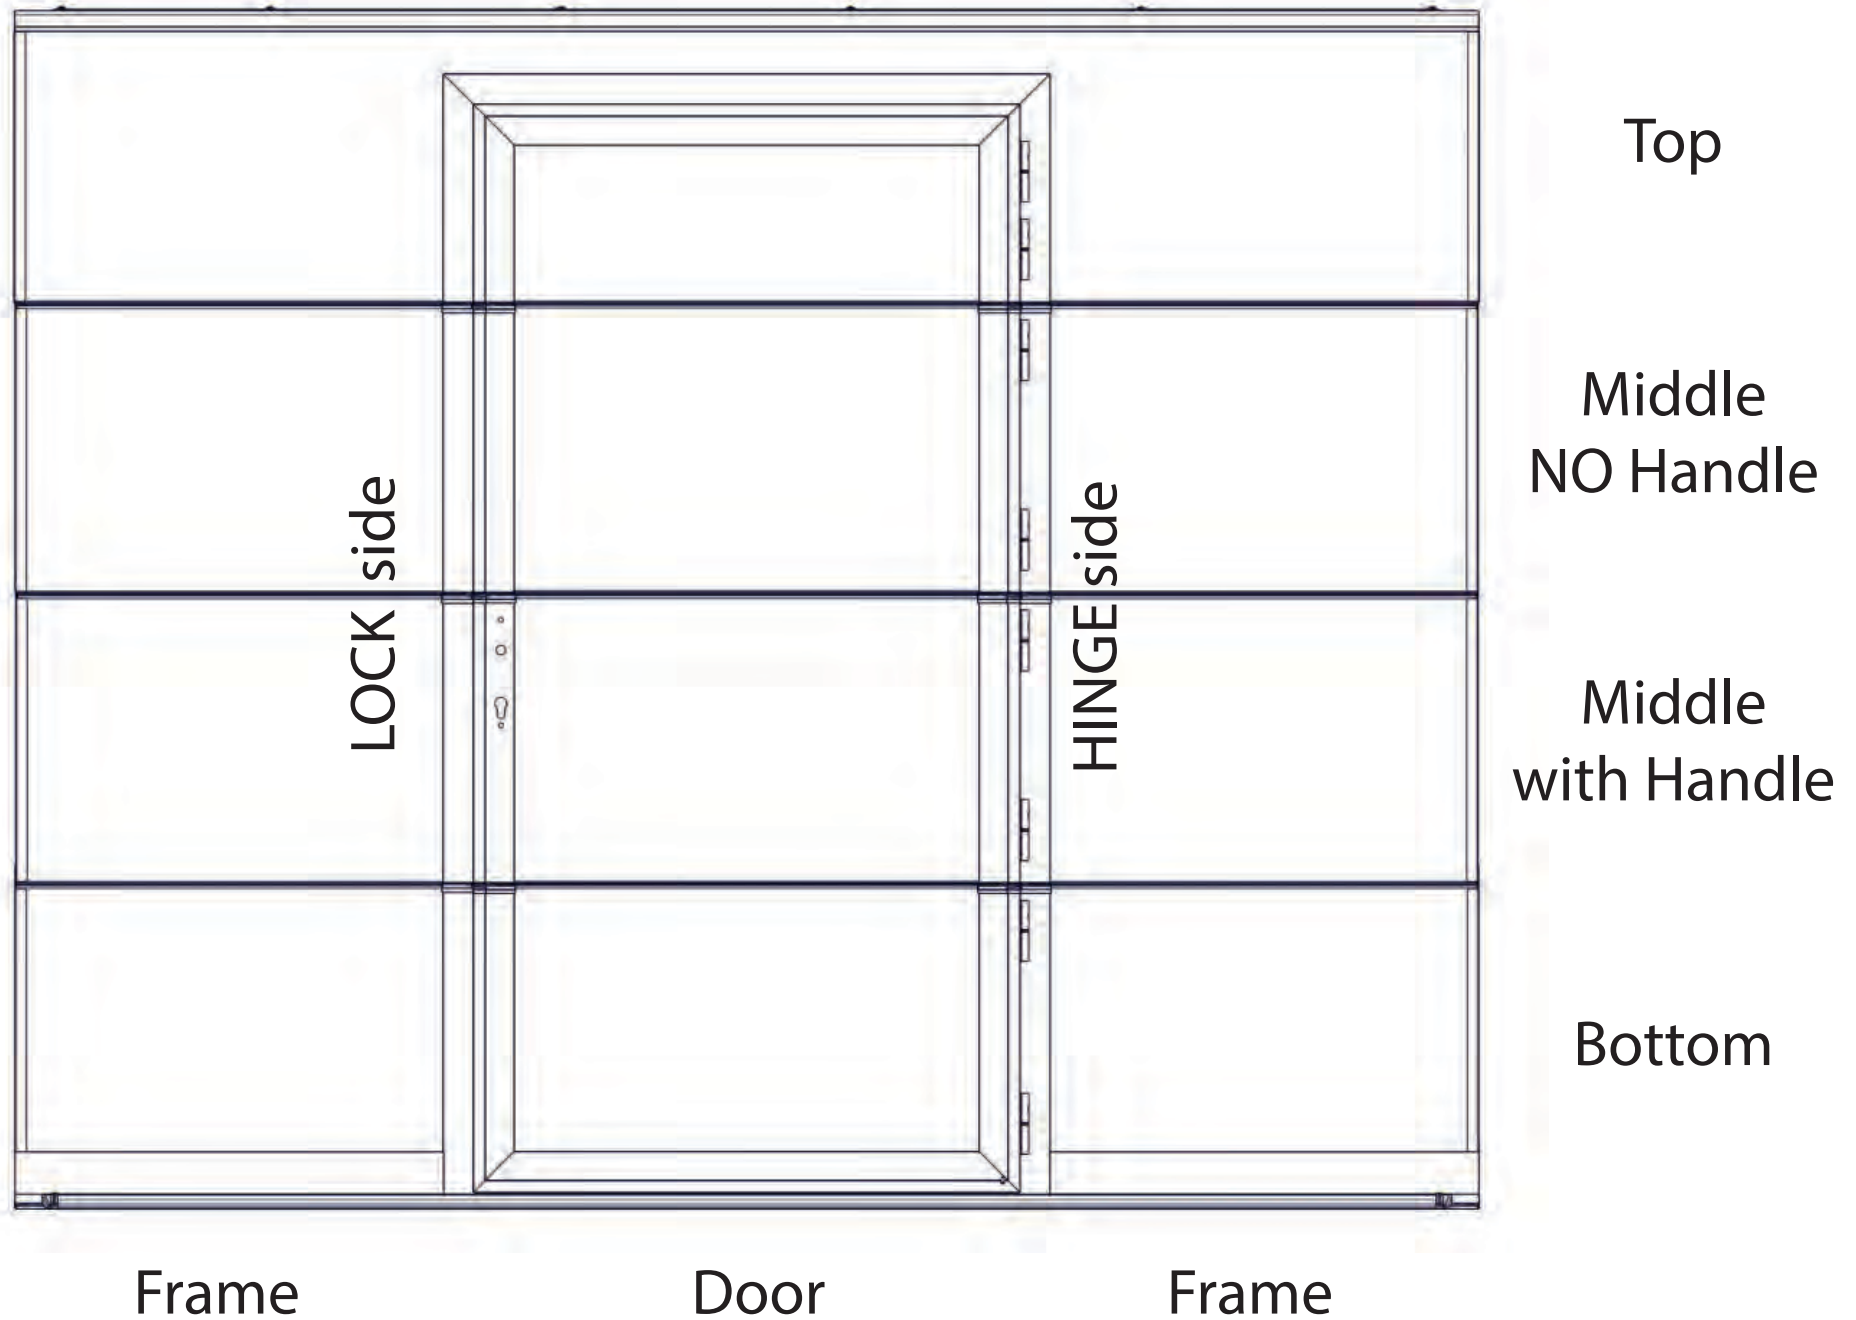


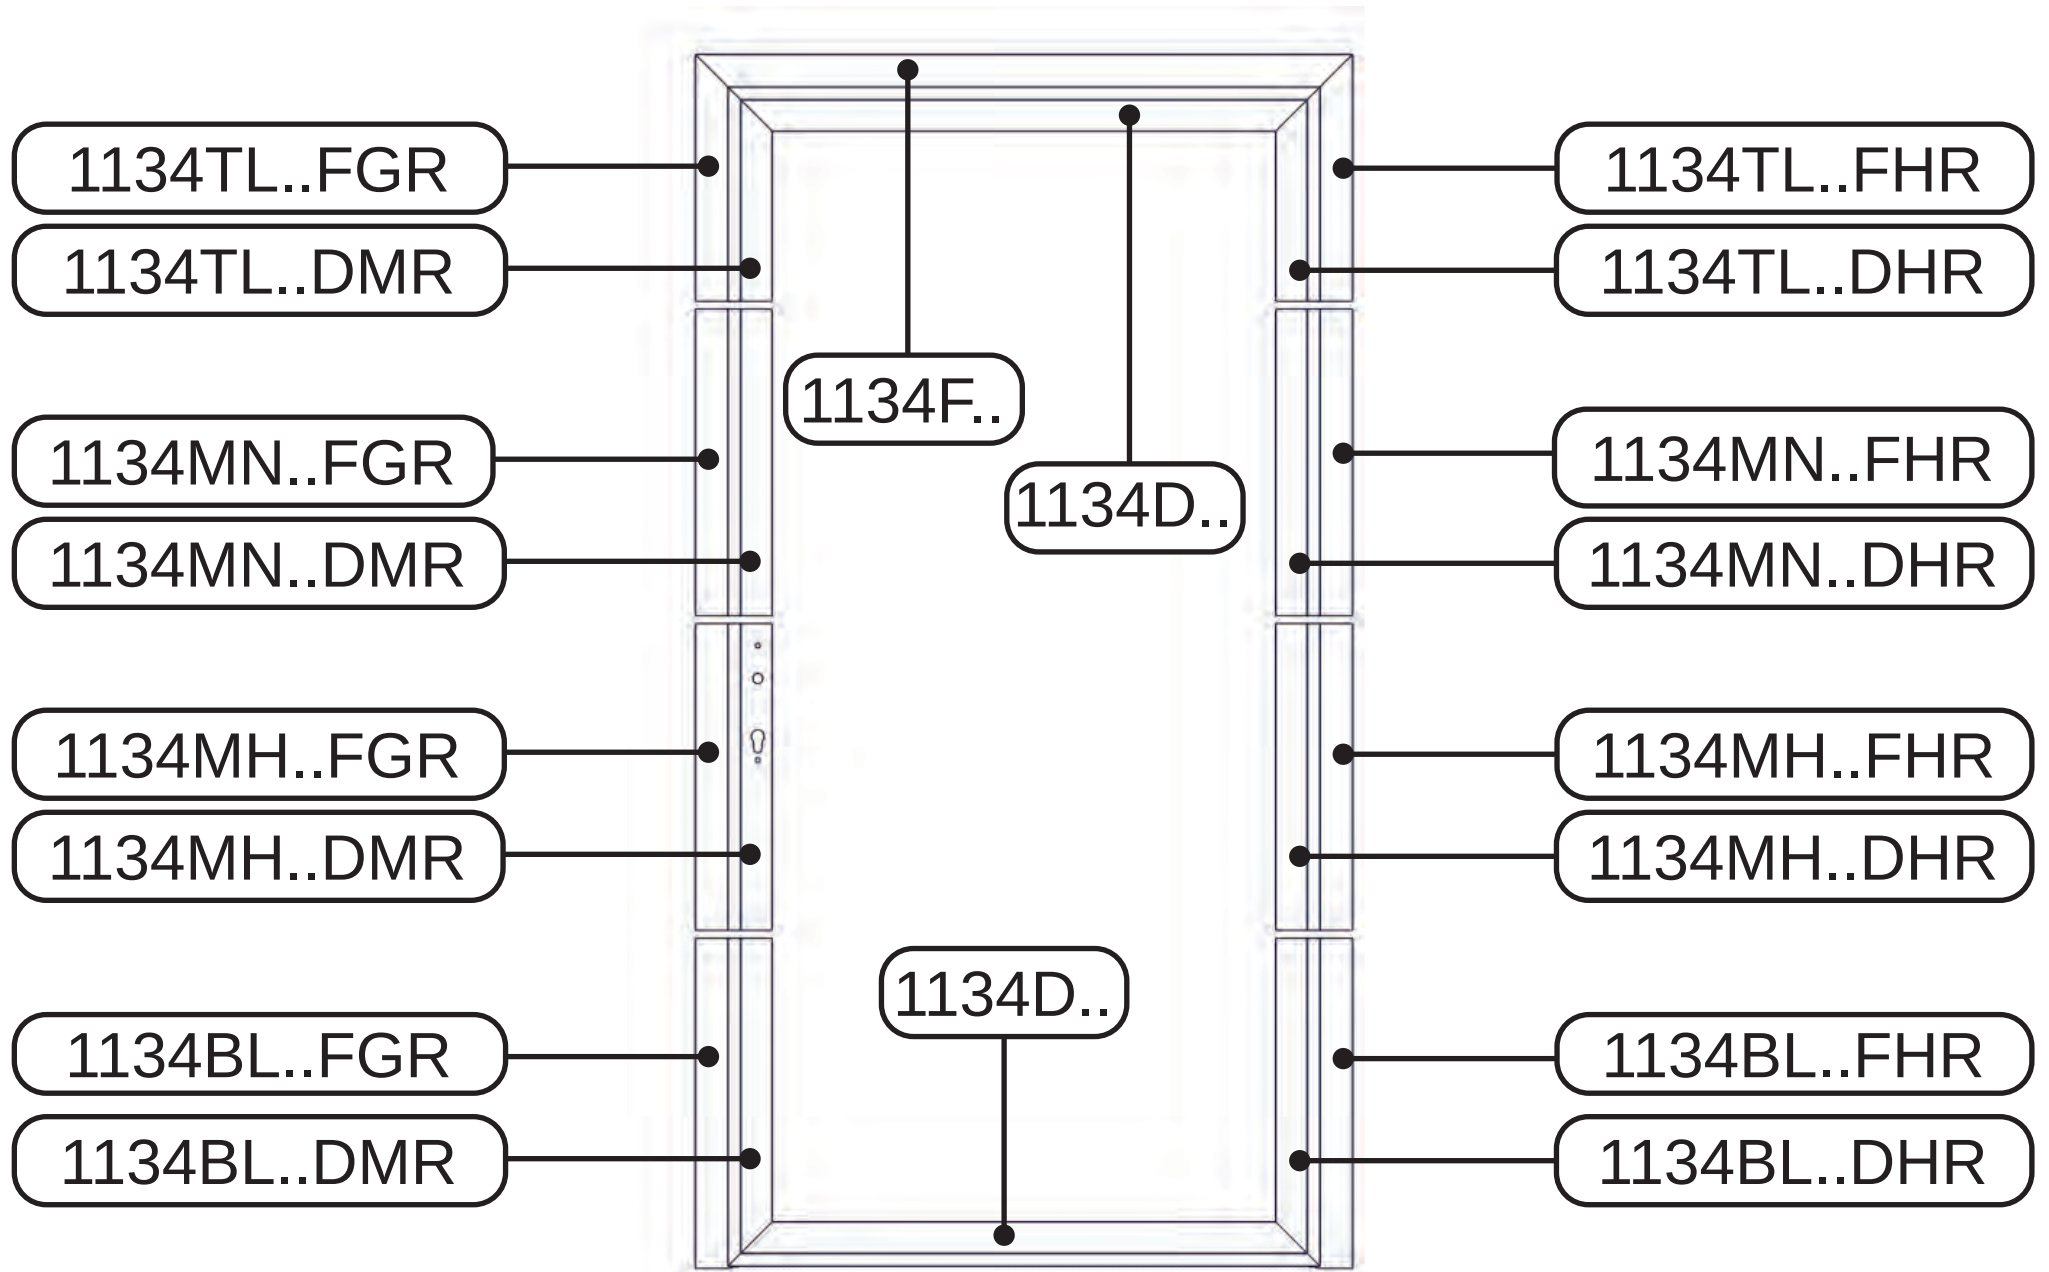


MPL
Multi Point Lock

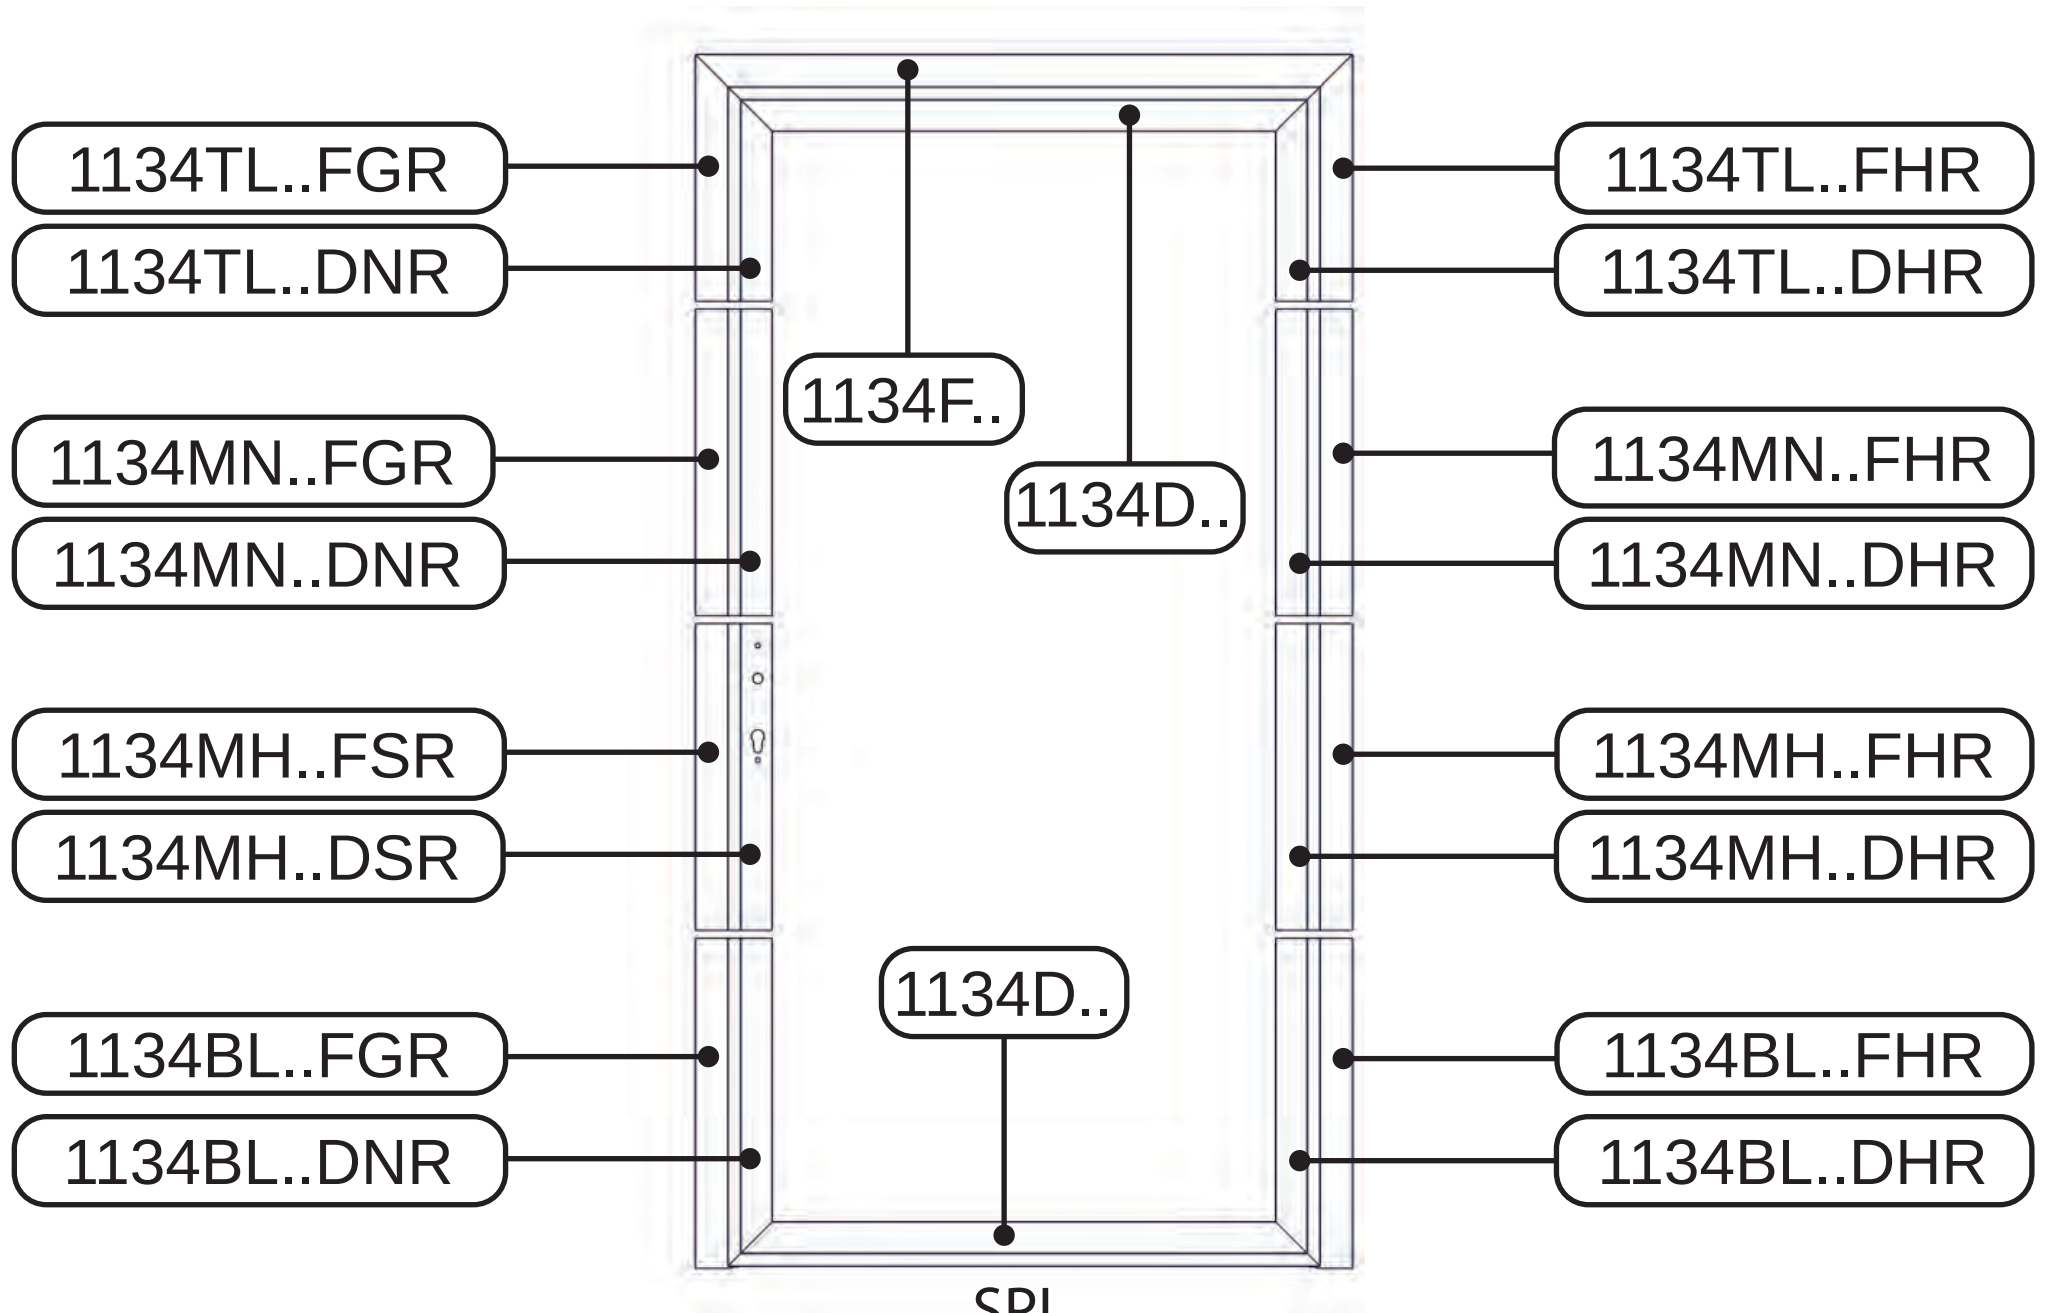


SPL
Single Point Lock

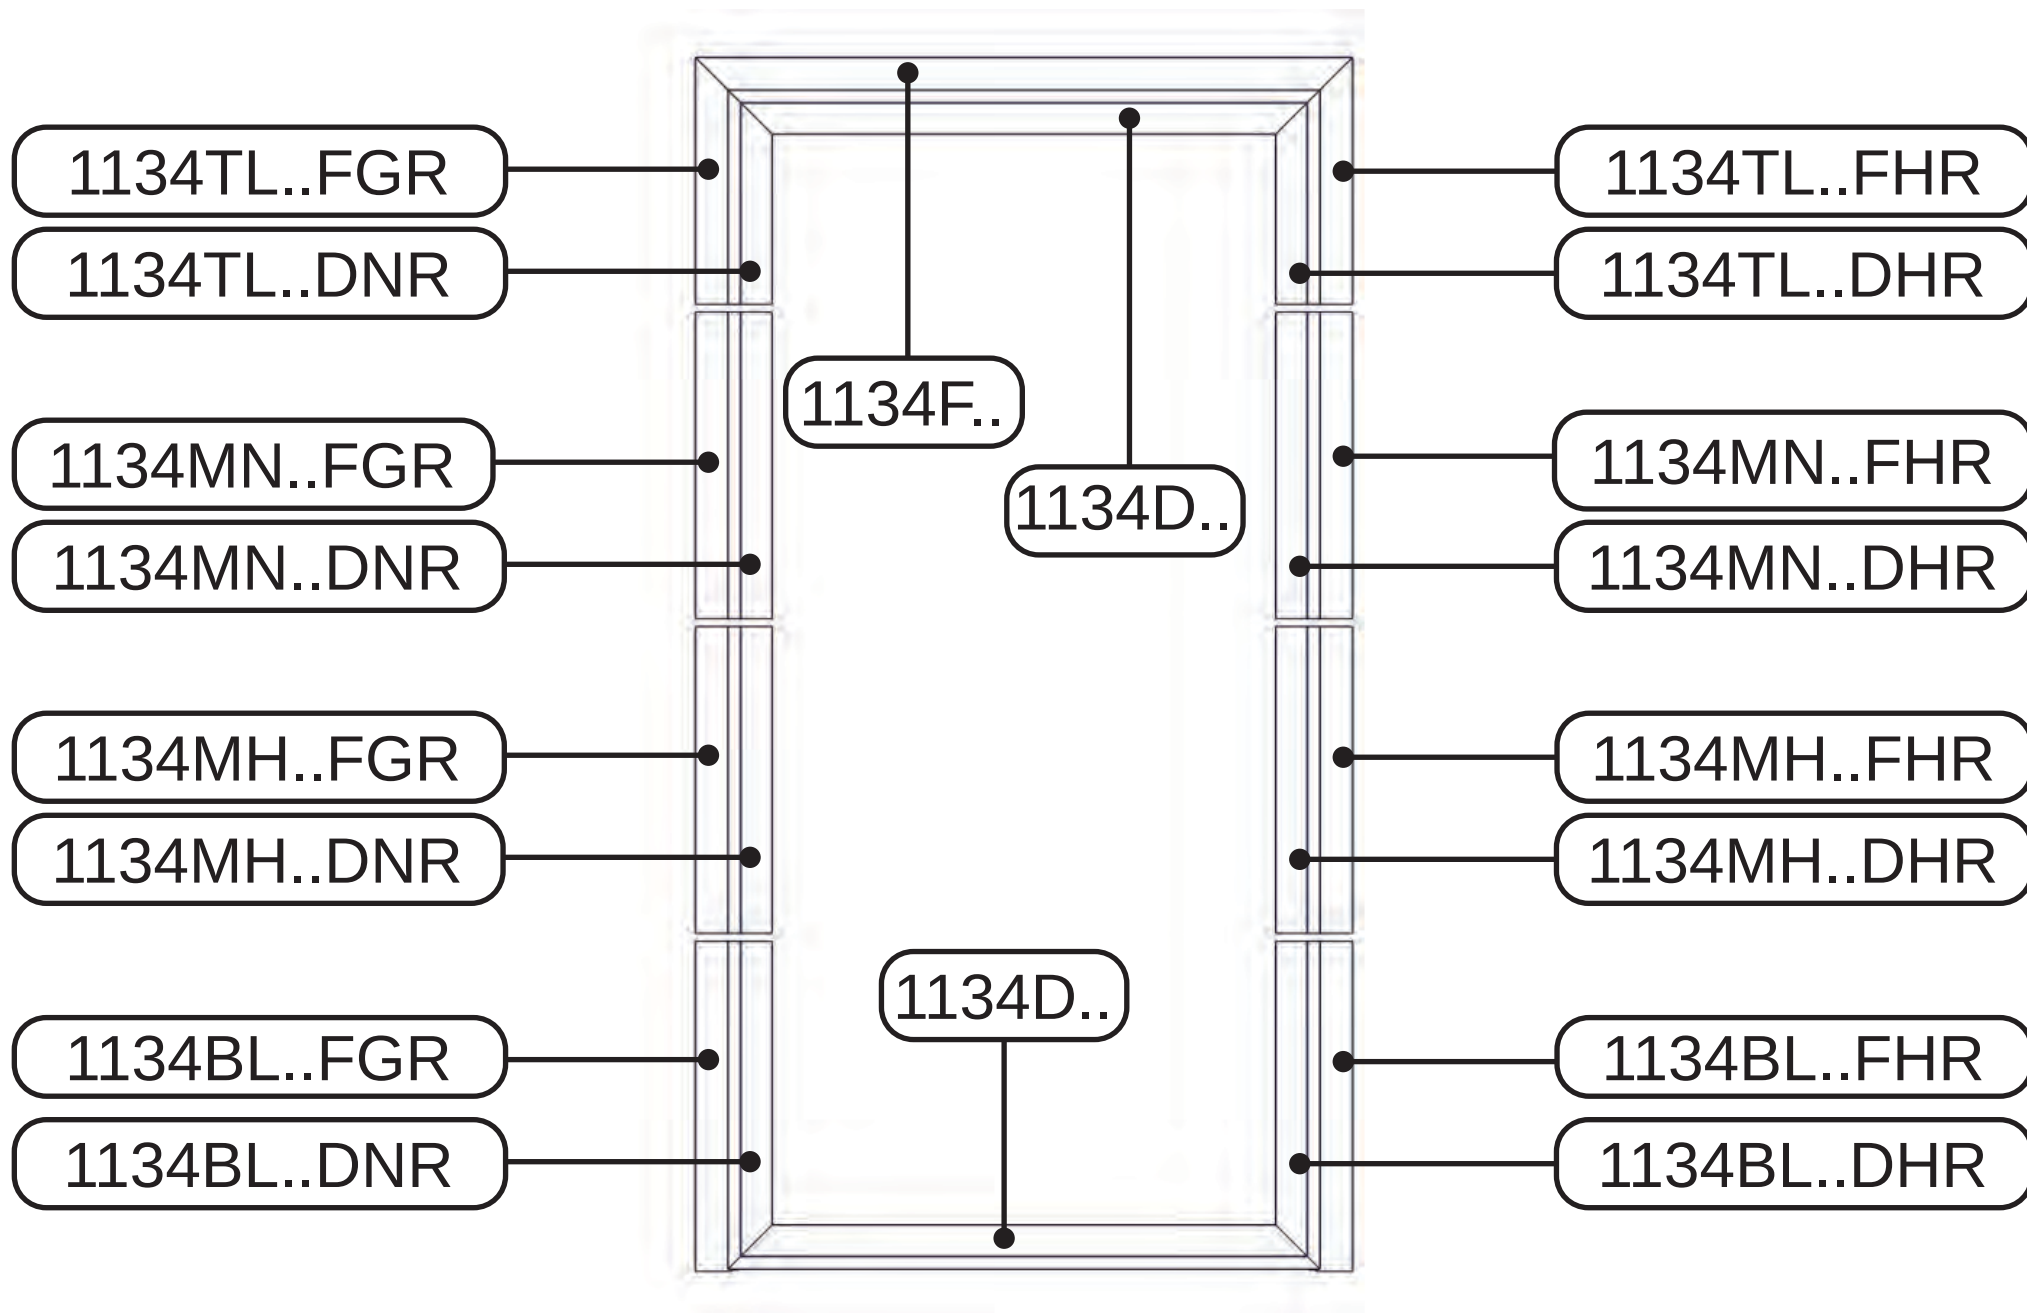


No Lock

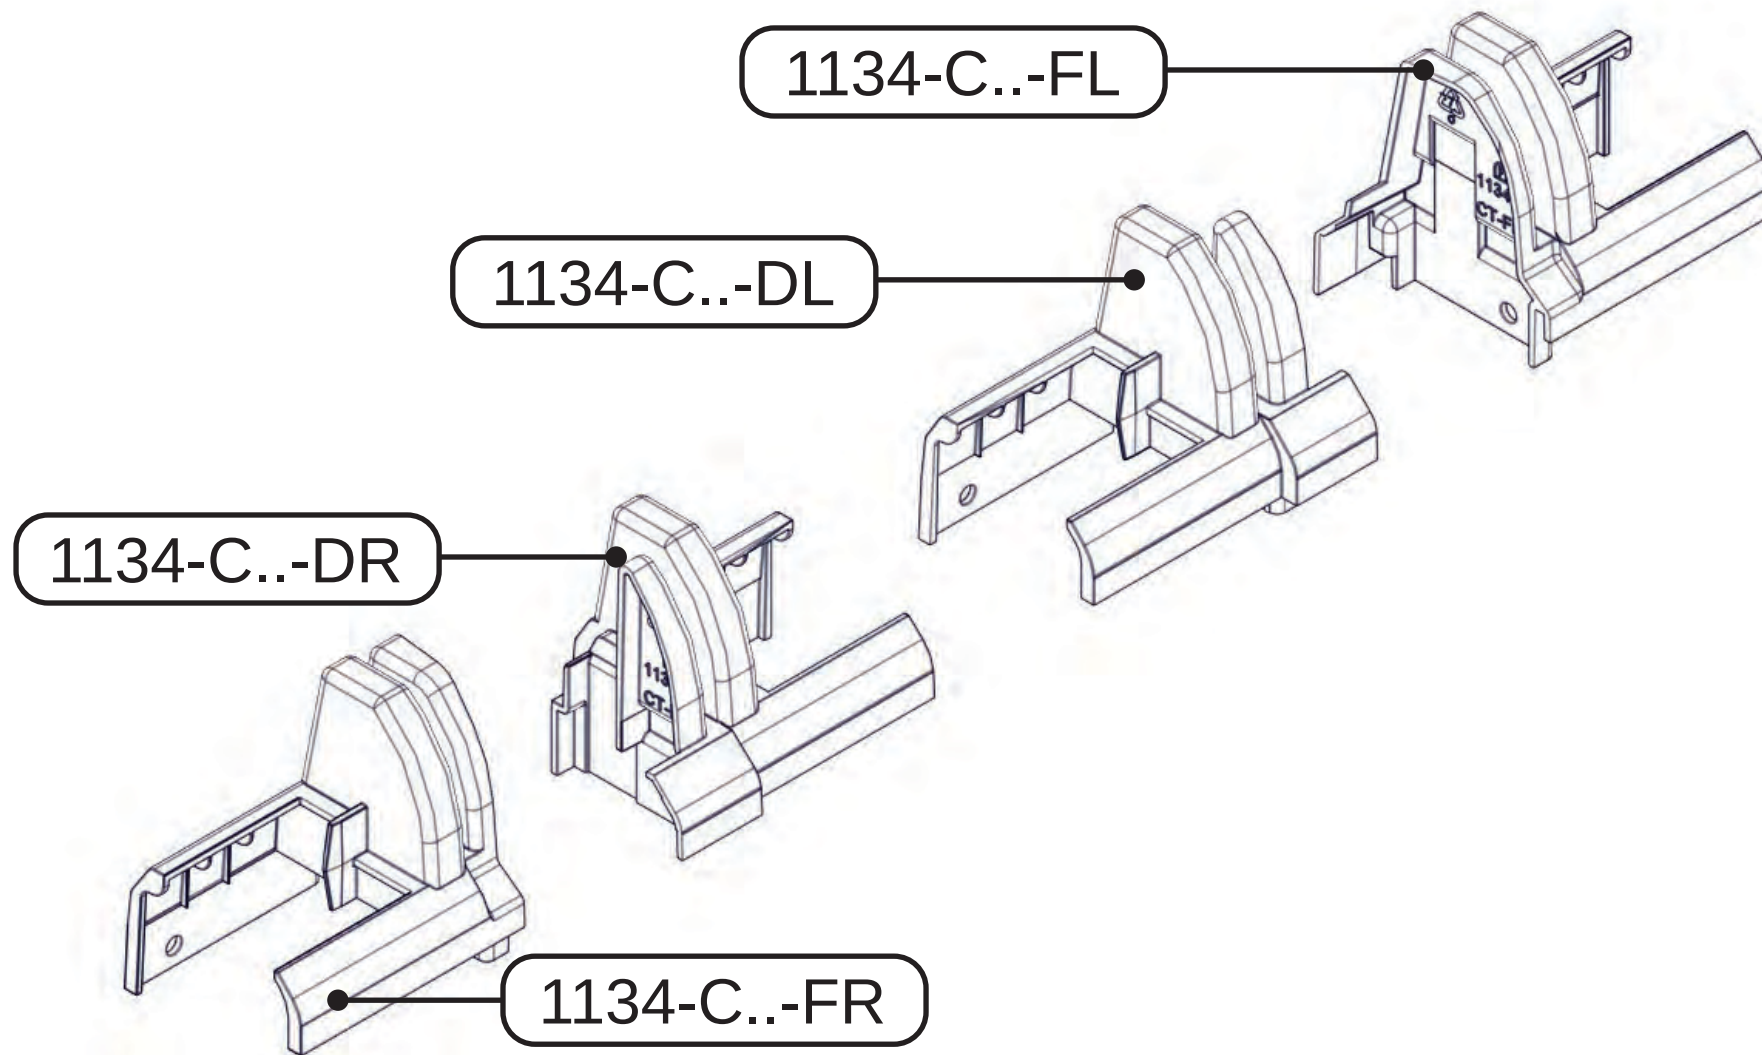

1134-CT-..	Tecsedo
1134-CEK-..	Epco/Kingspan
1134-CM-..	Metecno/ Italpannelli

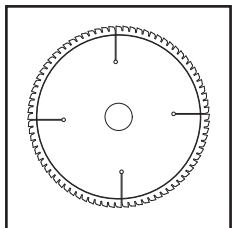



Sawing instructions

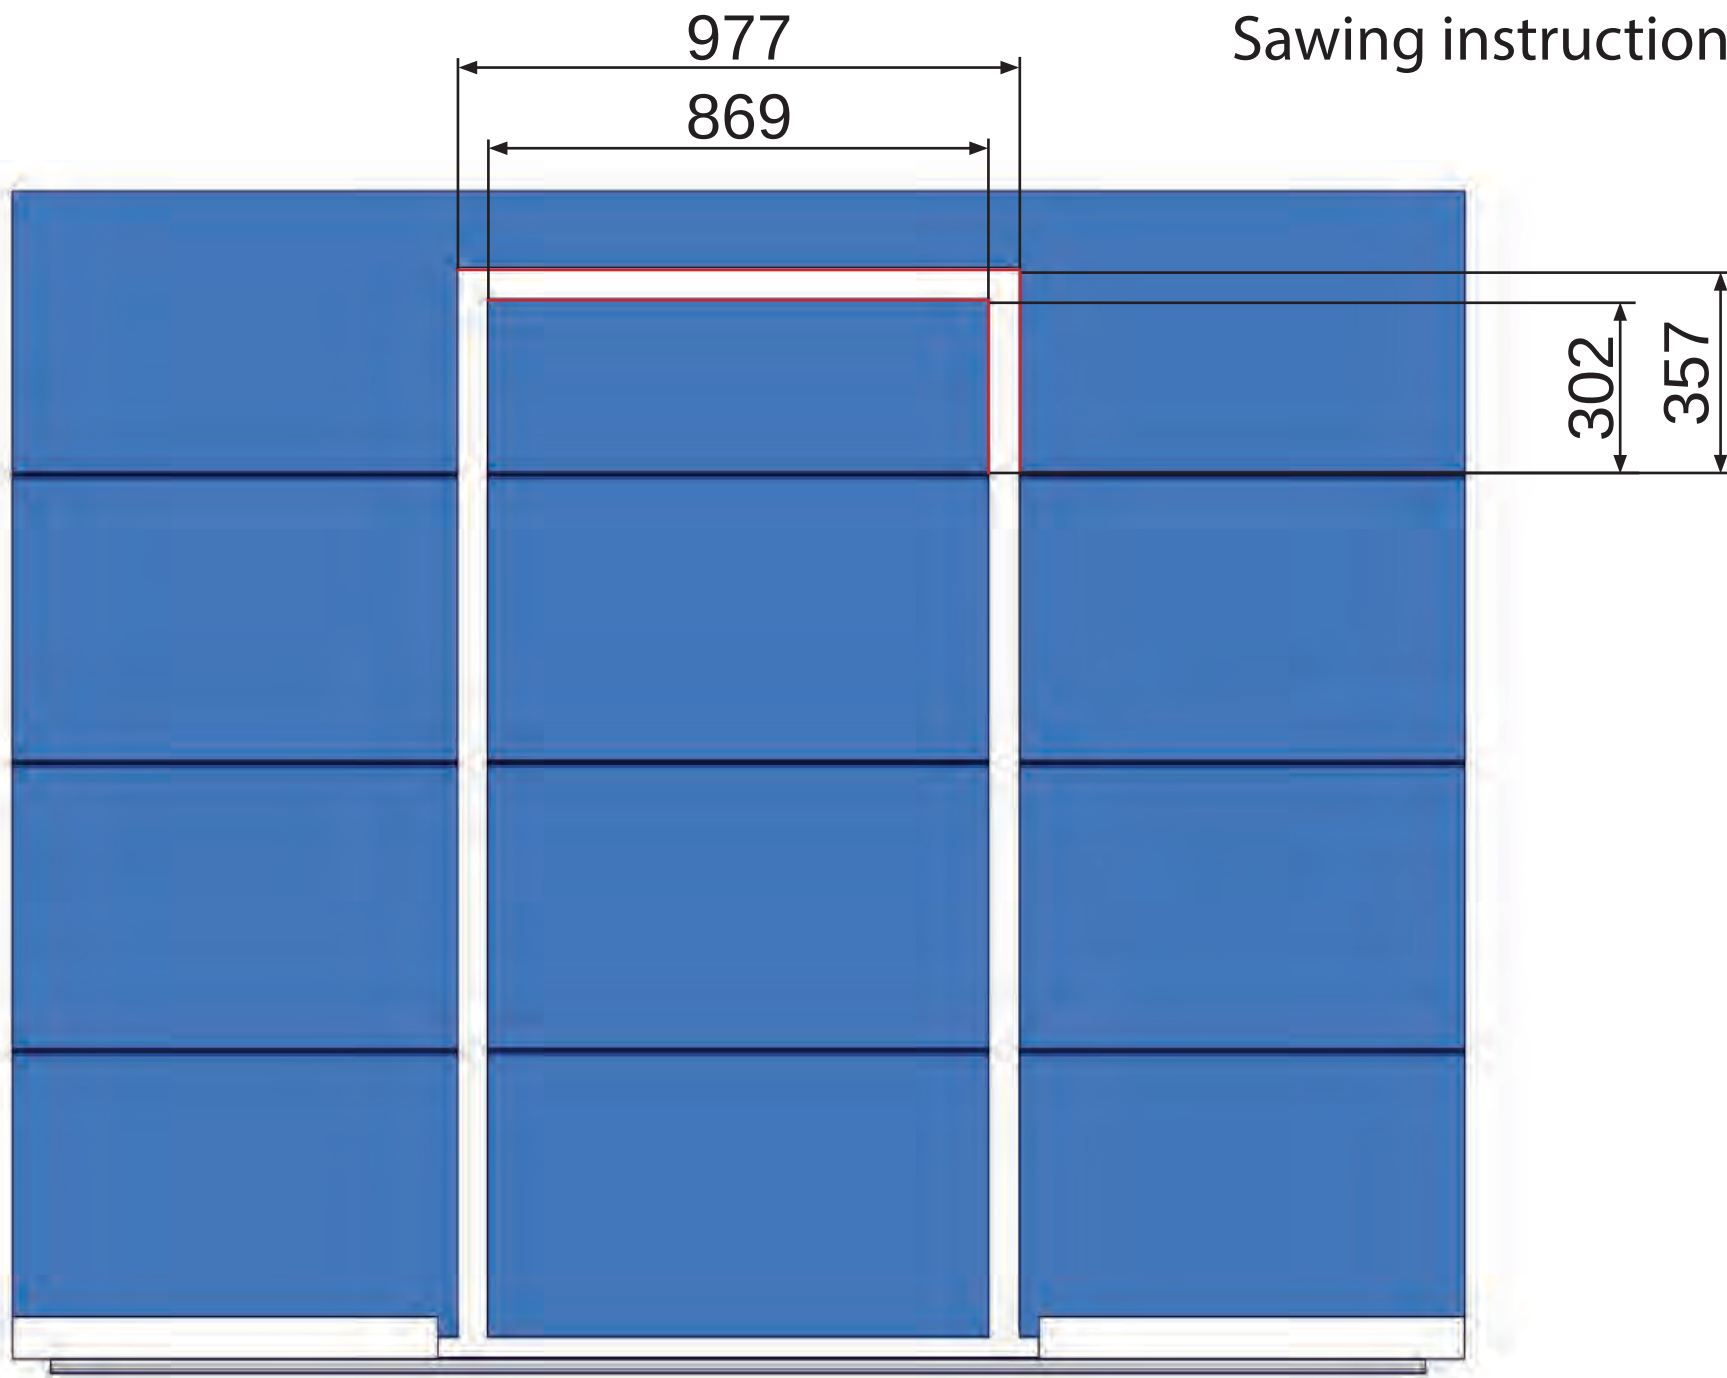


FF Installation manual









Frame bottom section assembly instructions





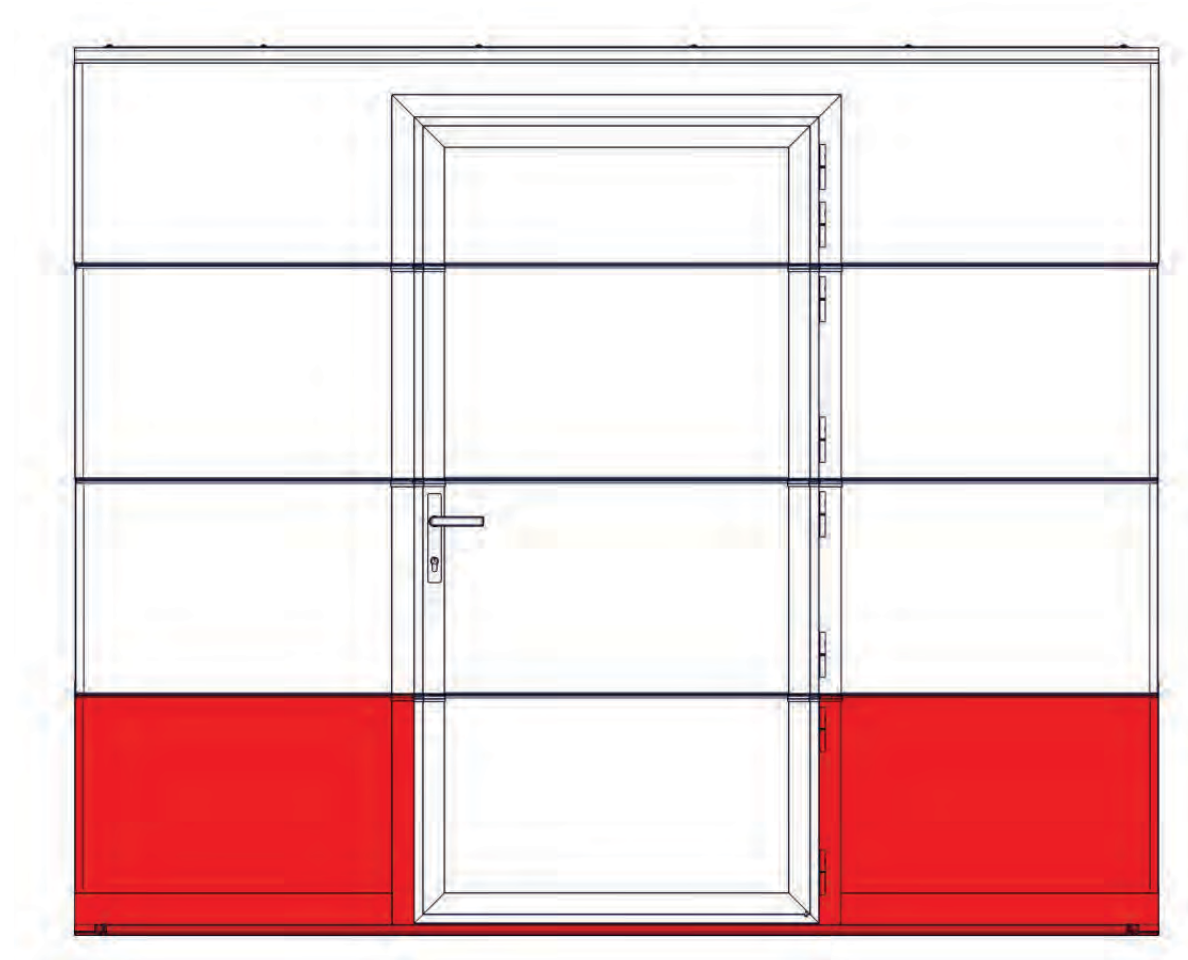




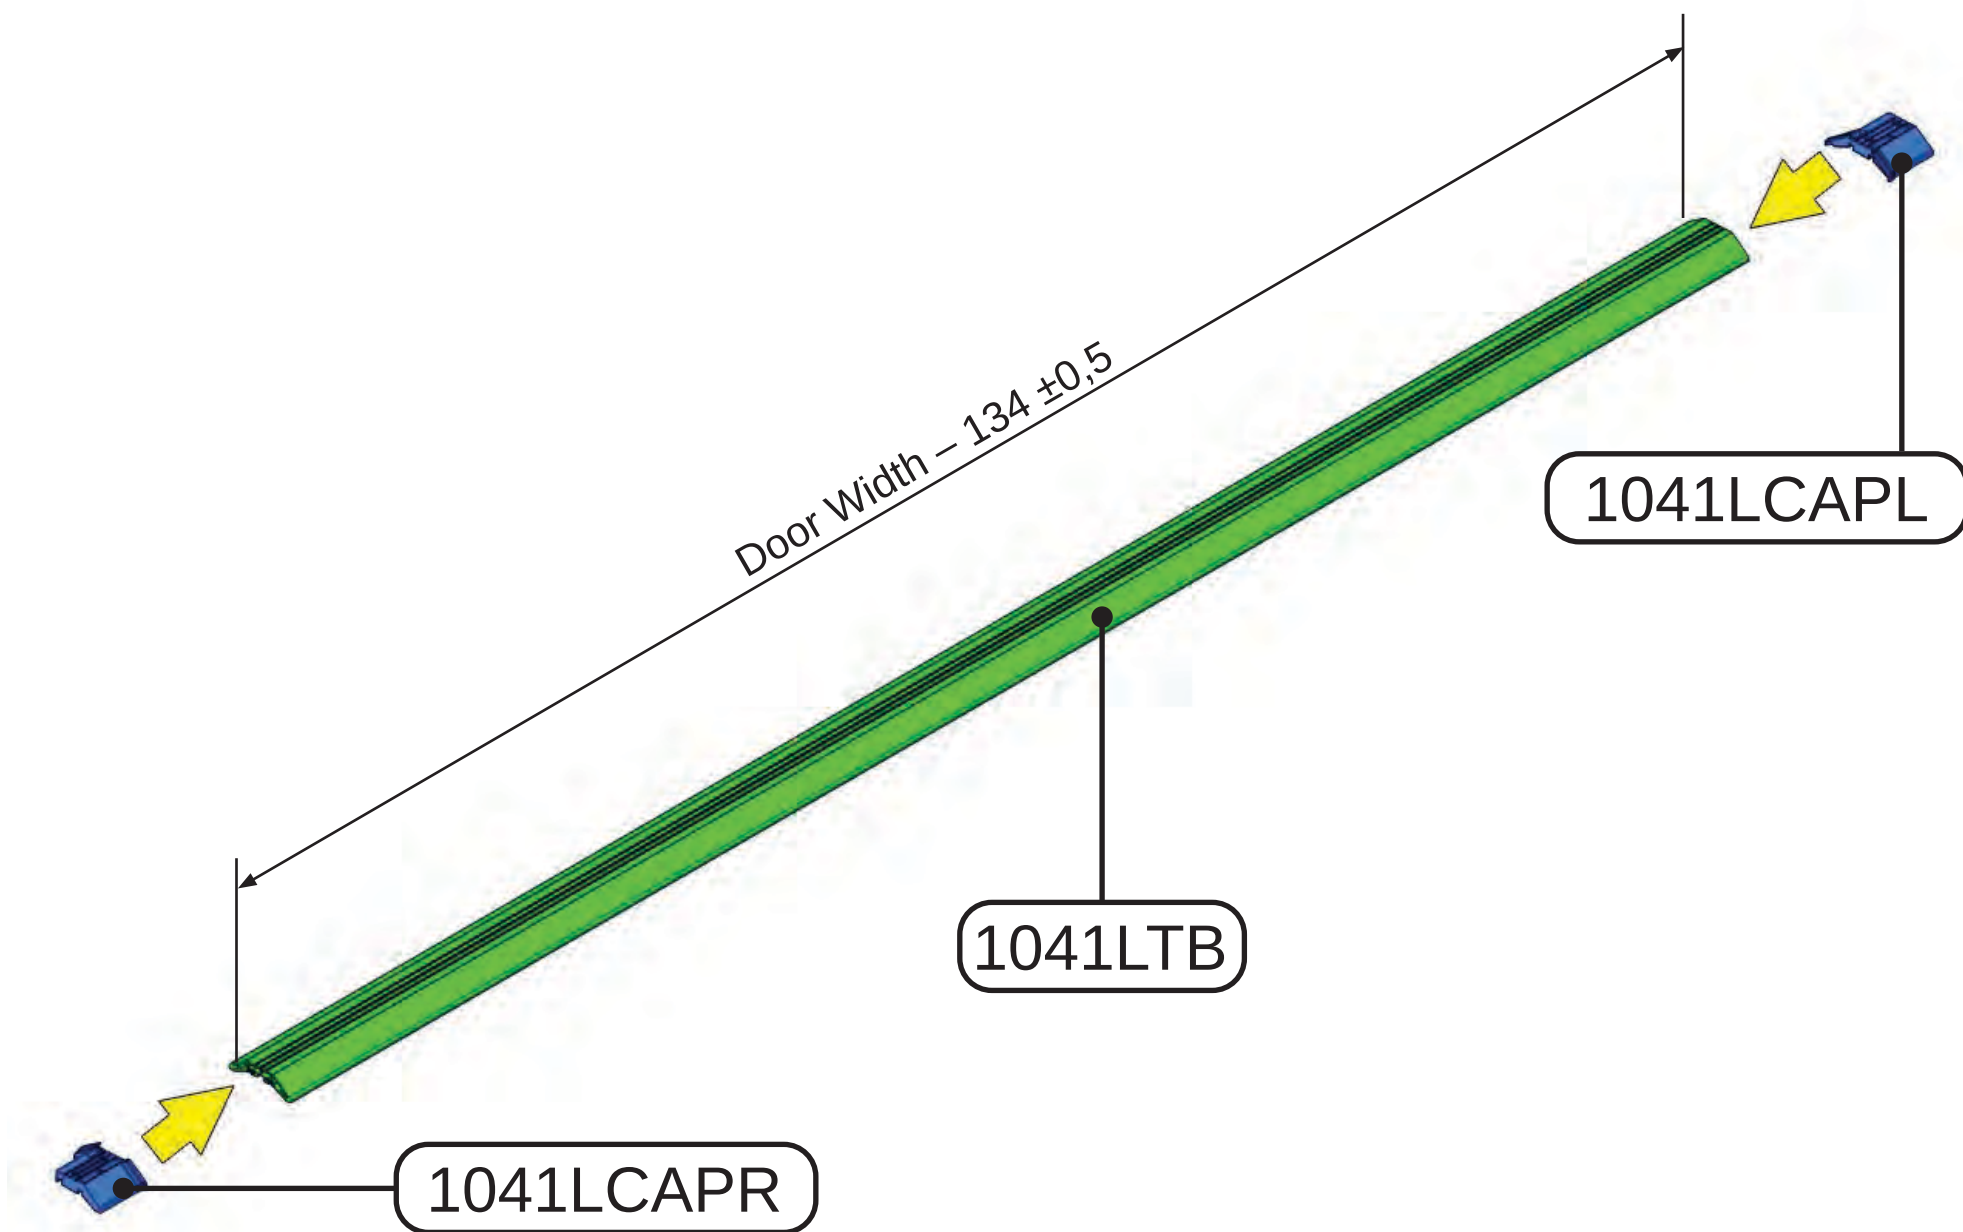



- * If the pass door is not positioned in the middle of the door.
The lengths for the 1134T change.


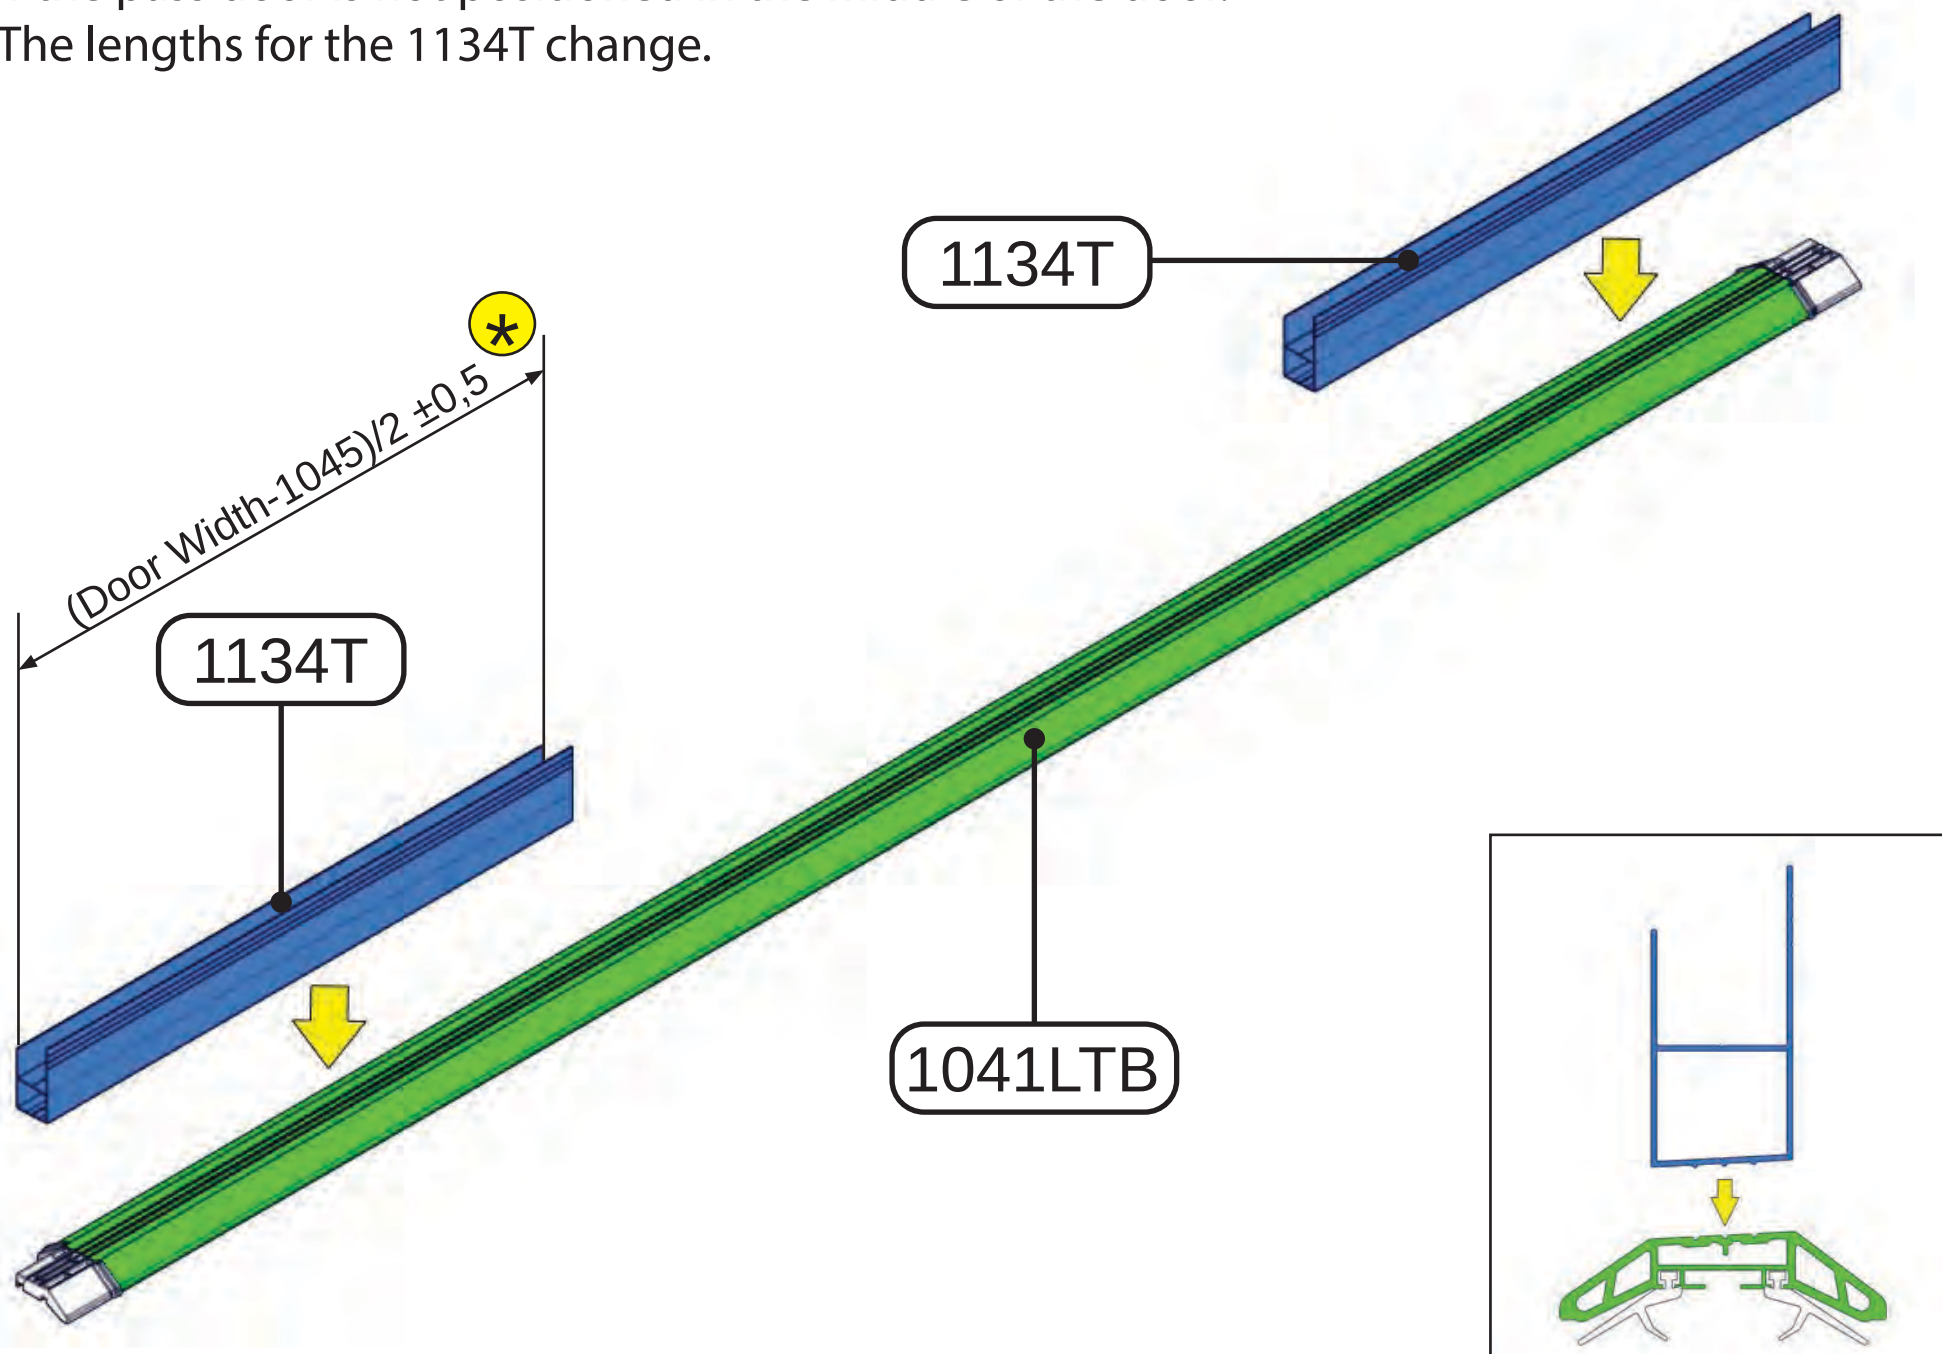


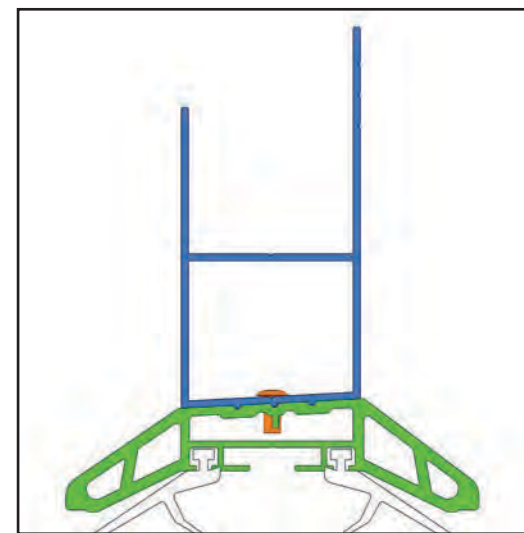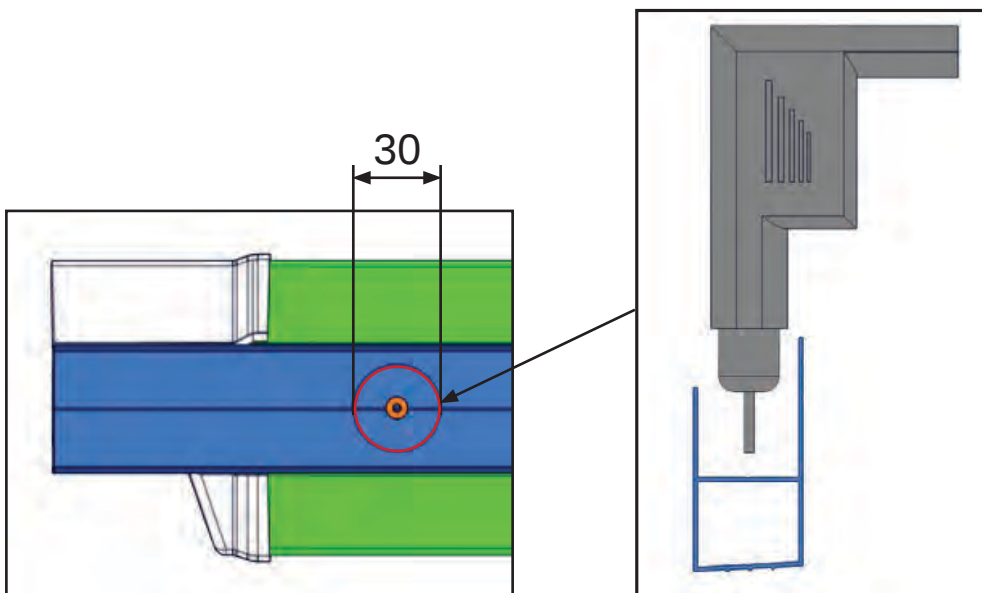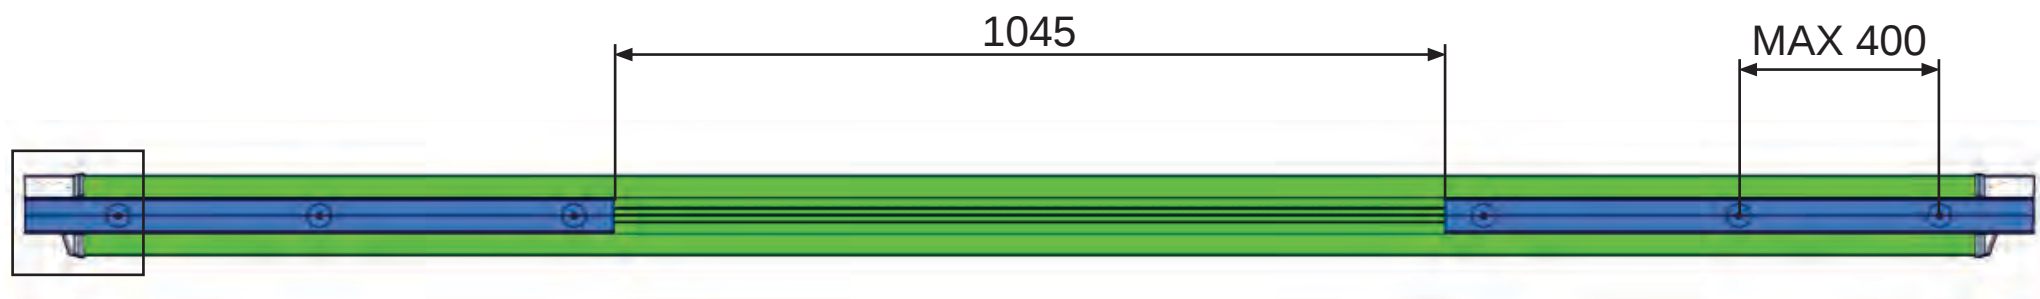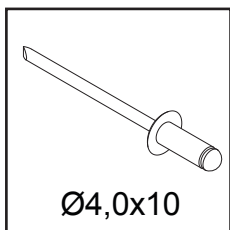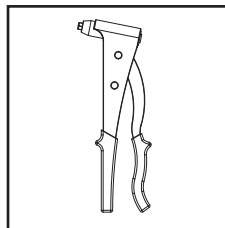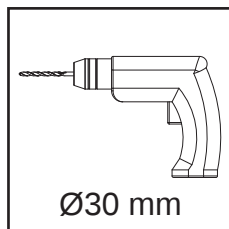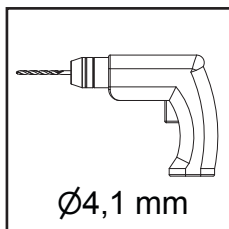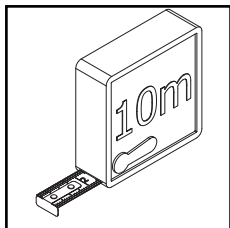


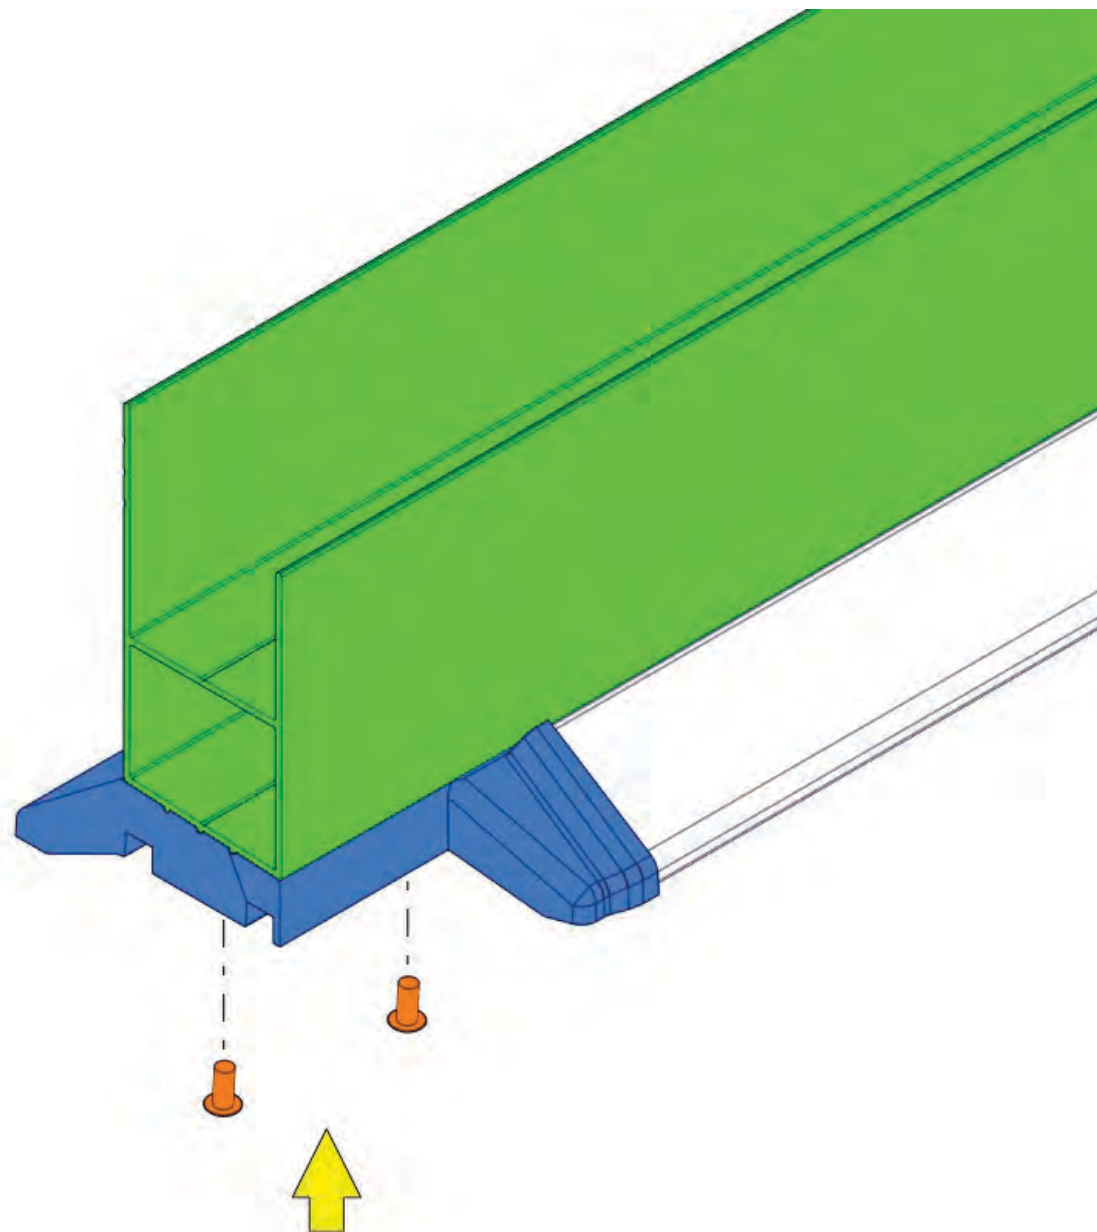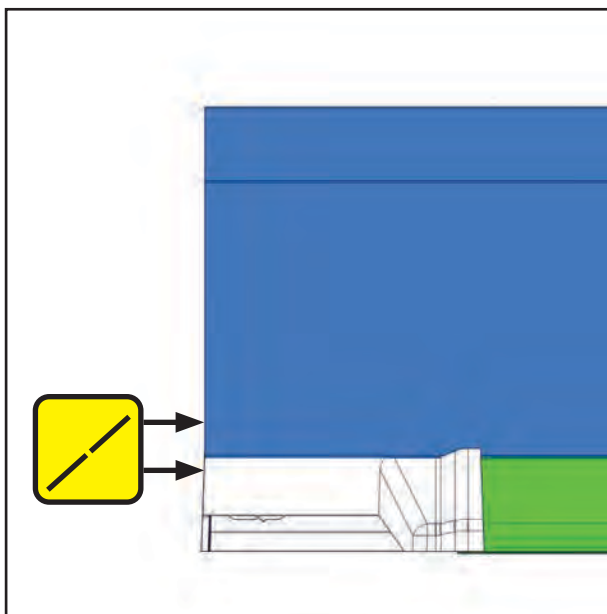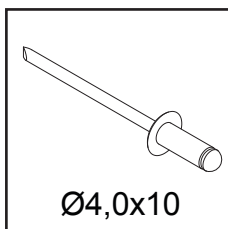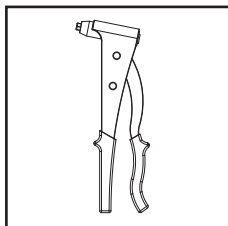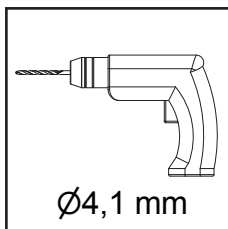


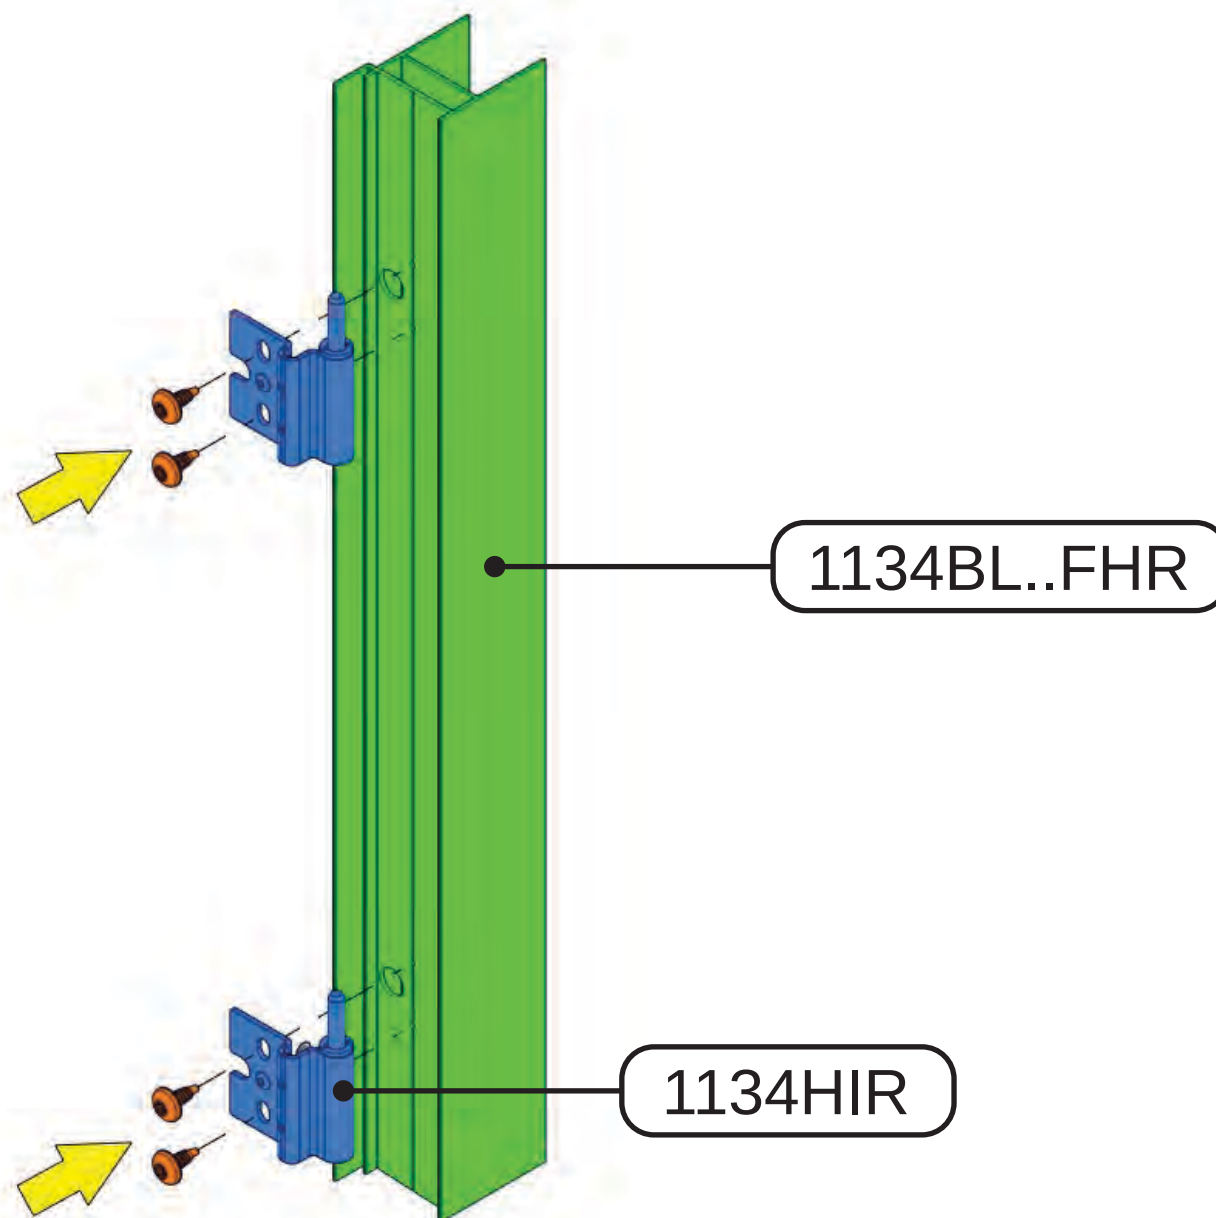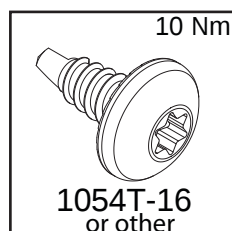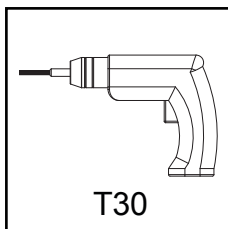

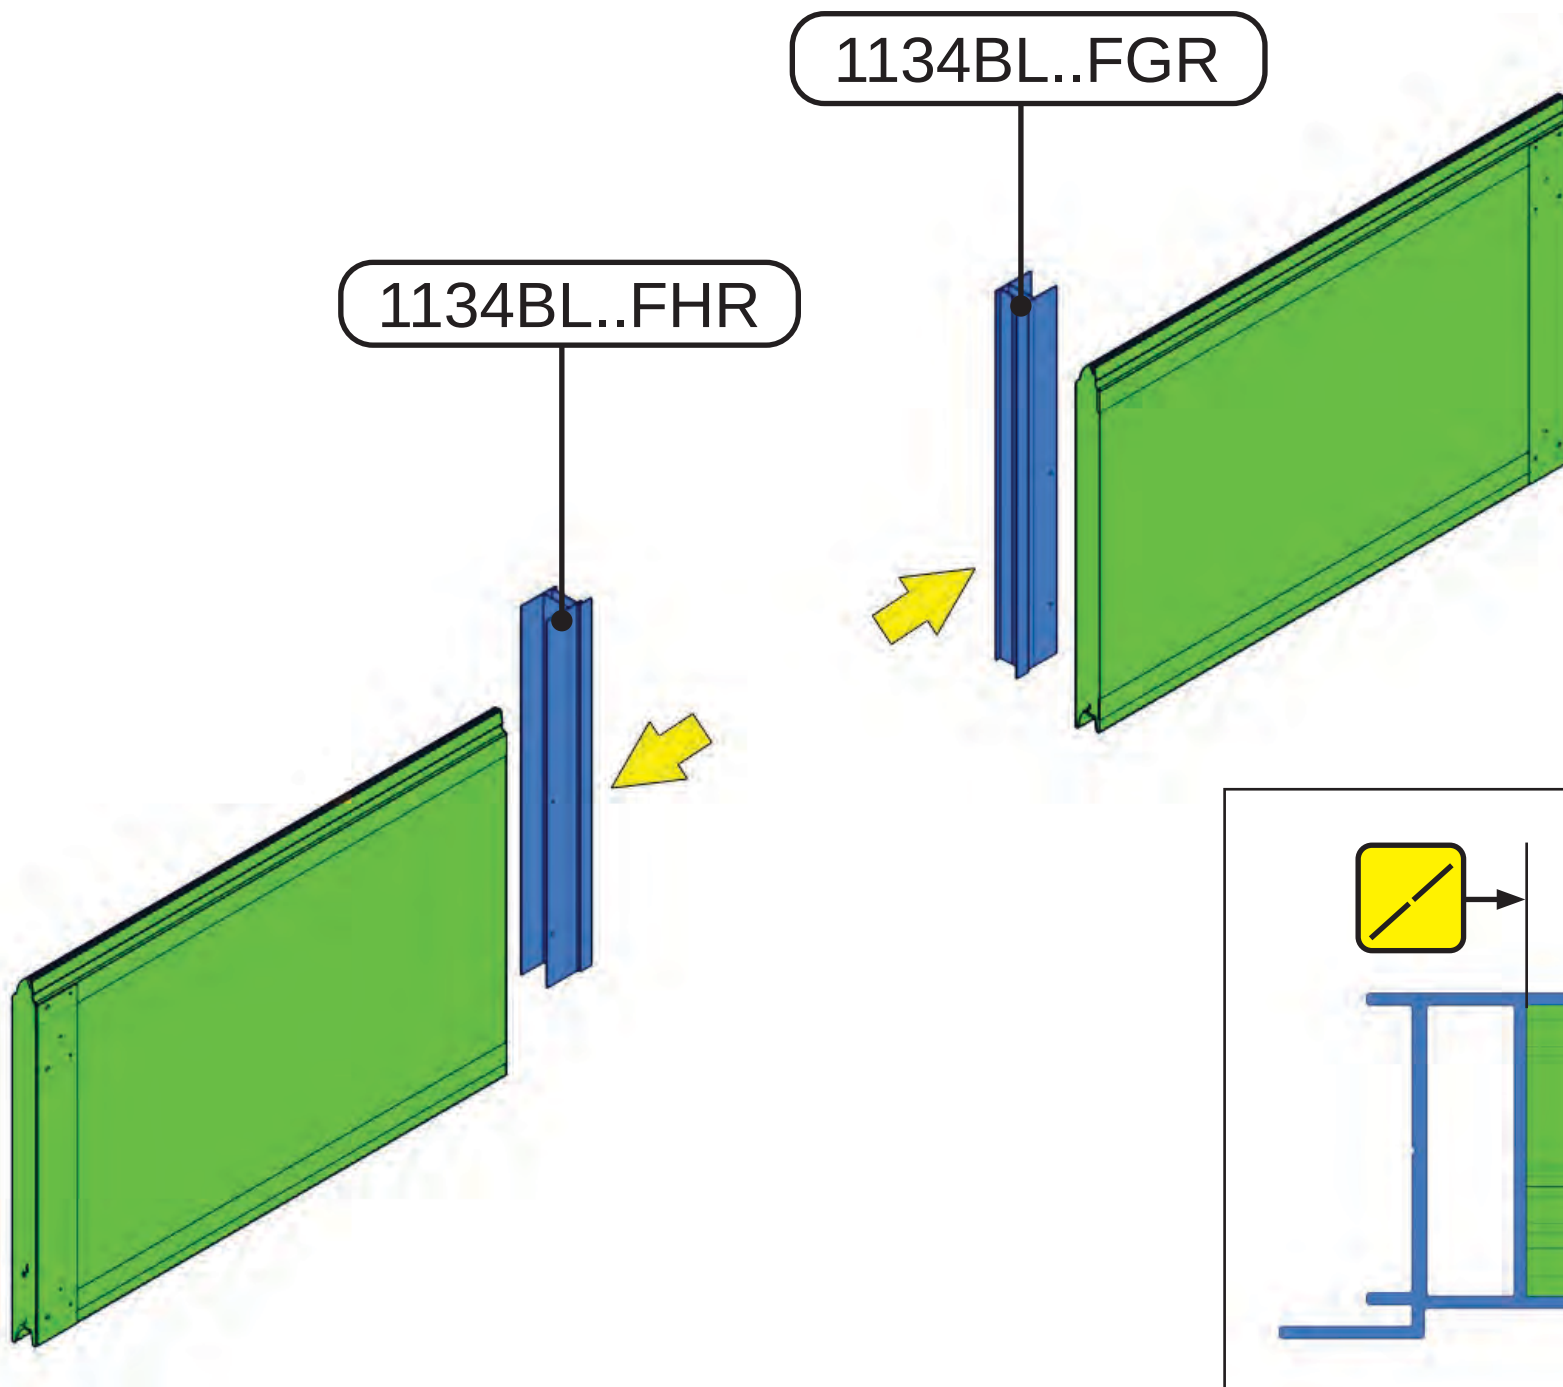

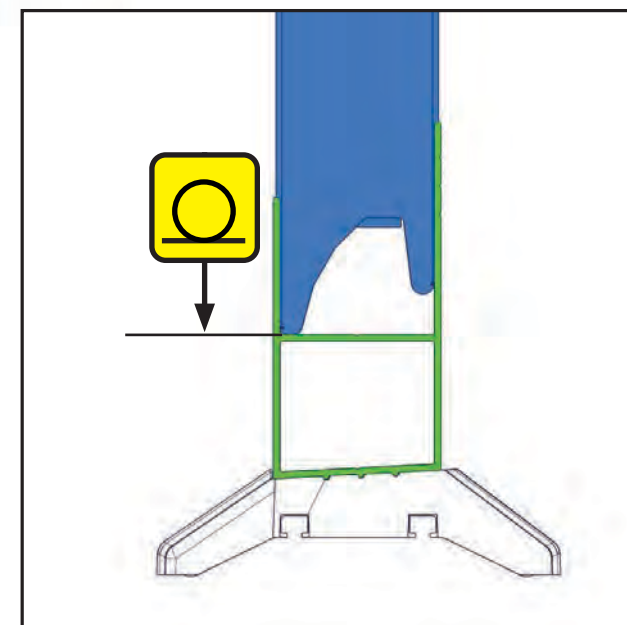
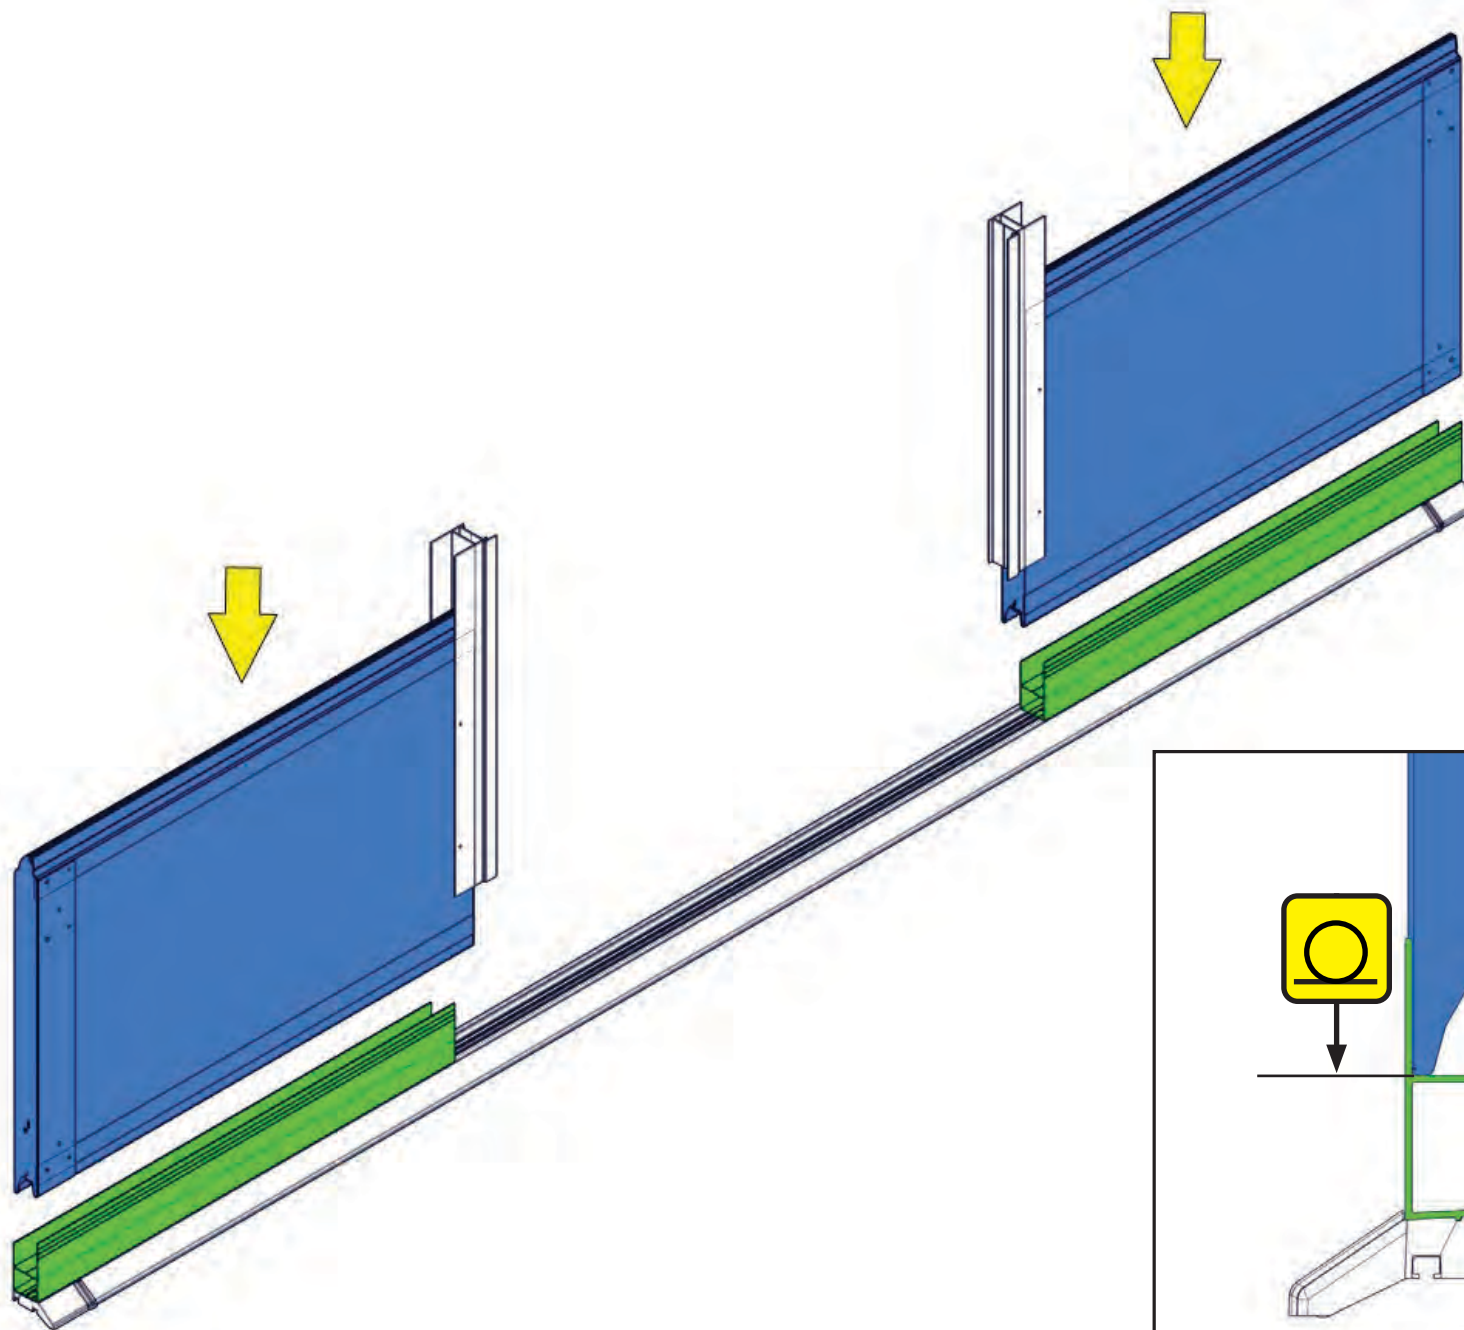




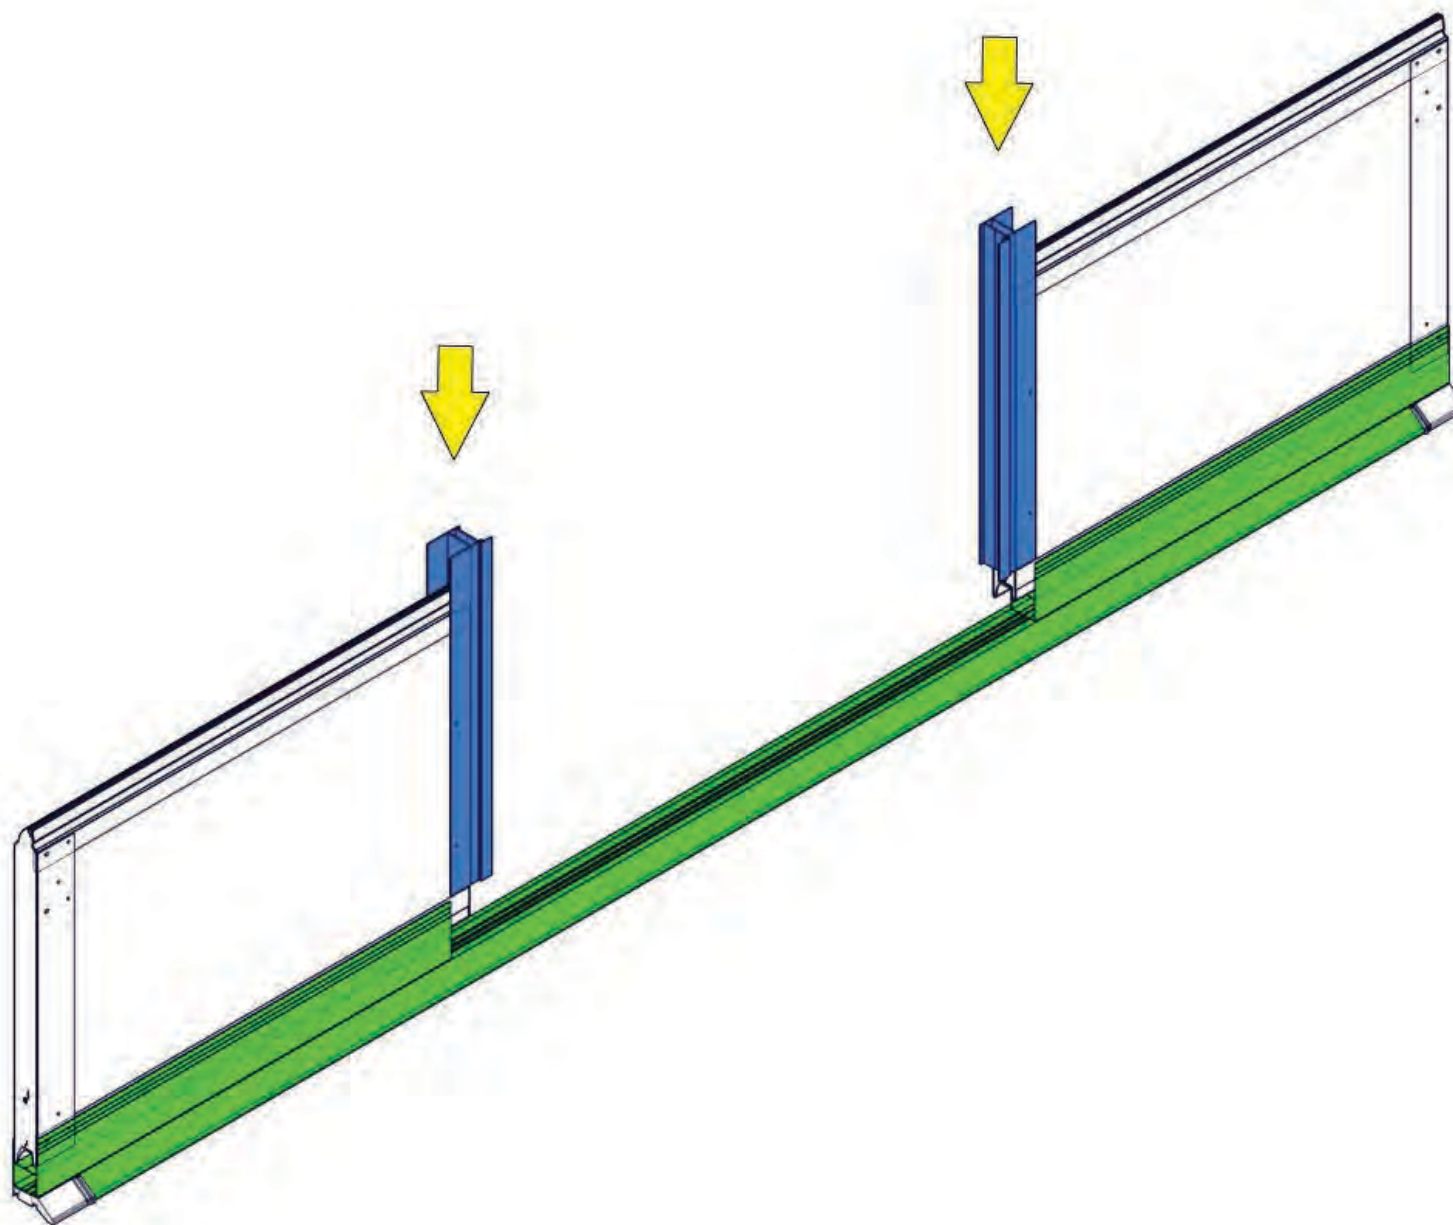






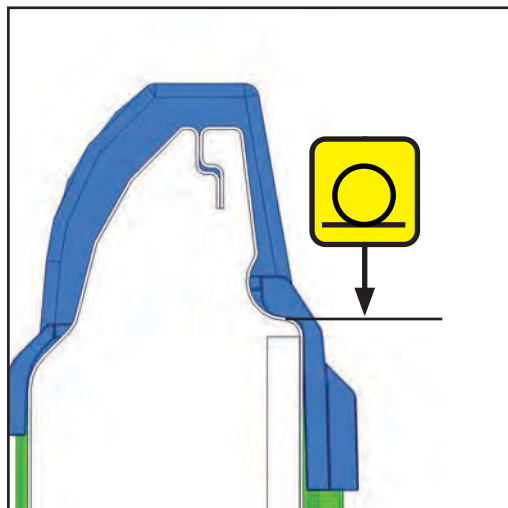






1134-C..FL




1134-C..-FR

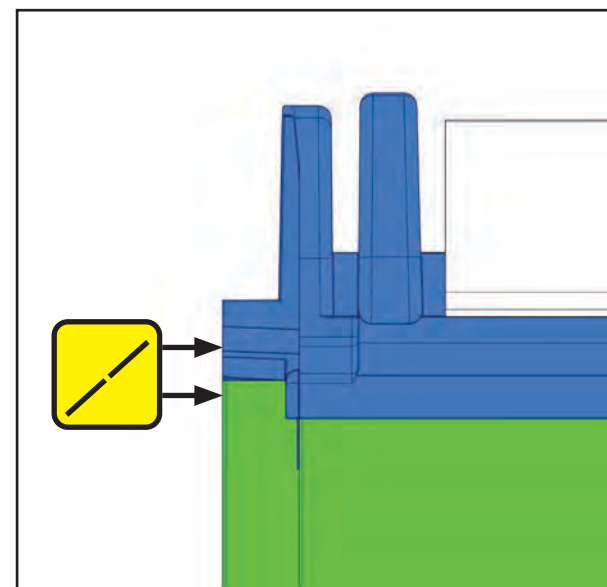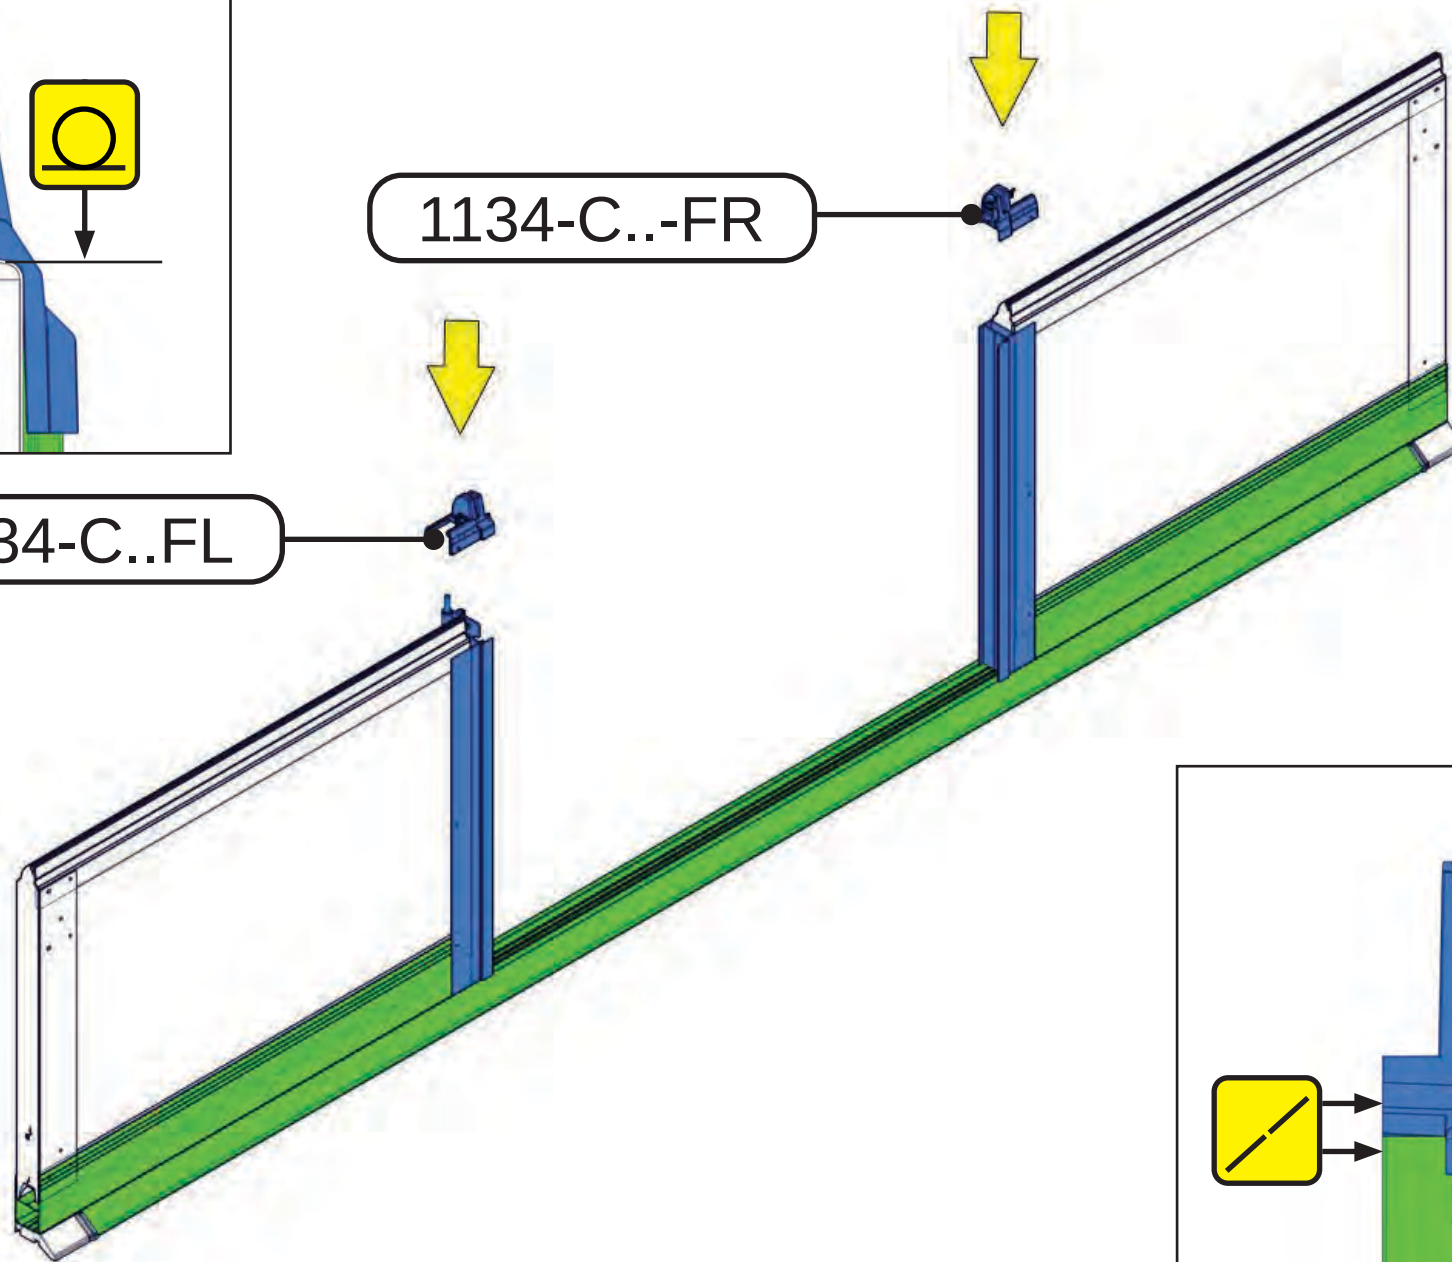

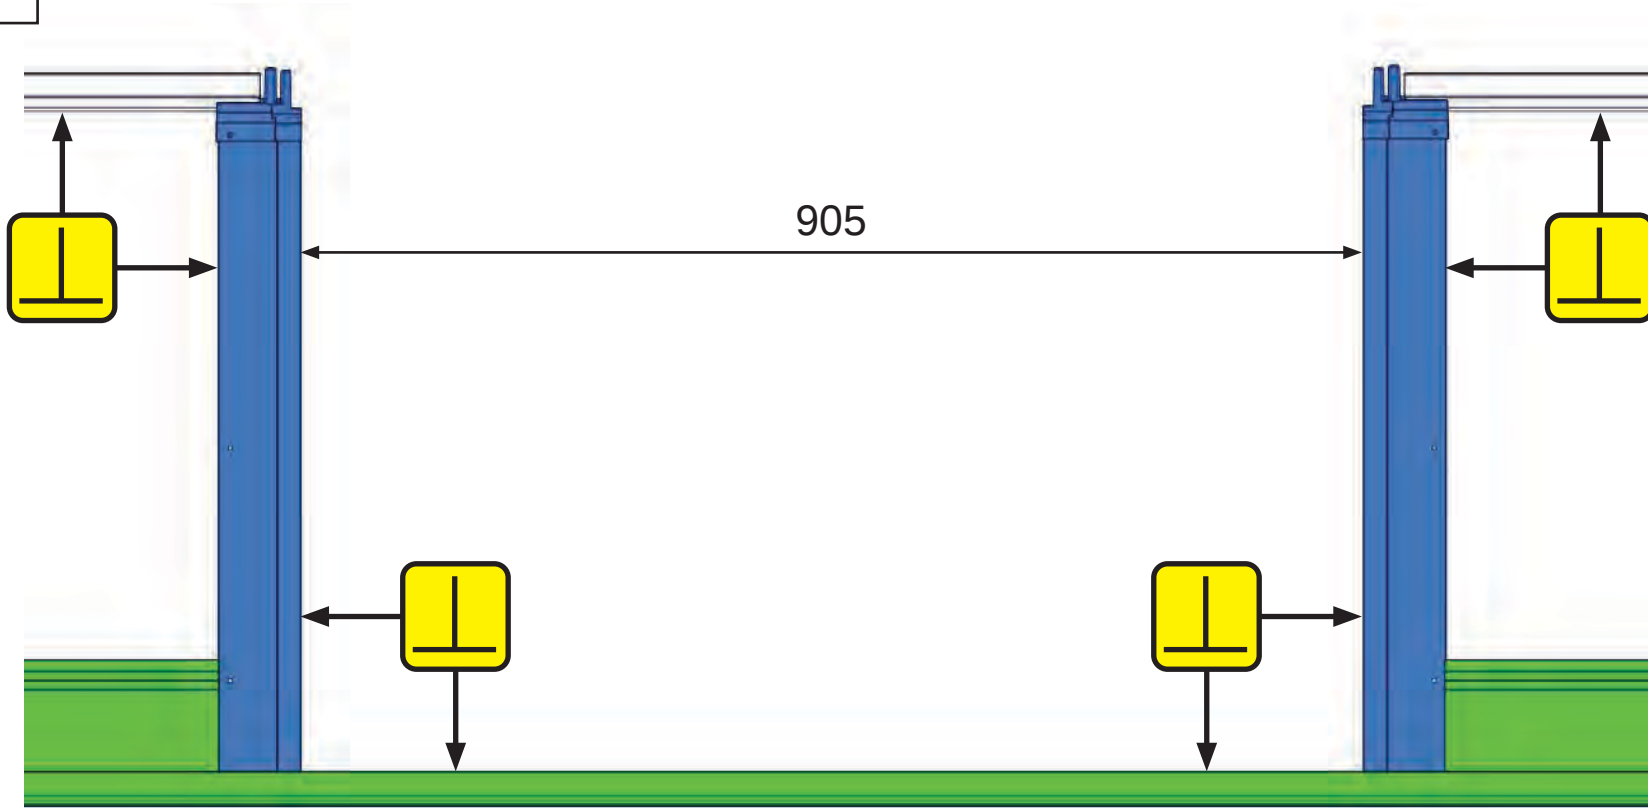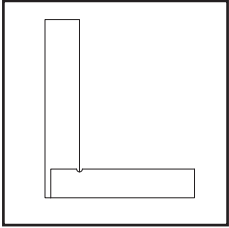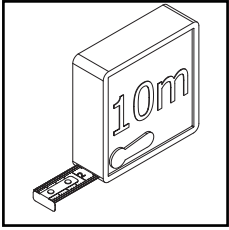


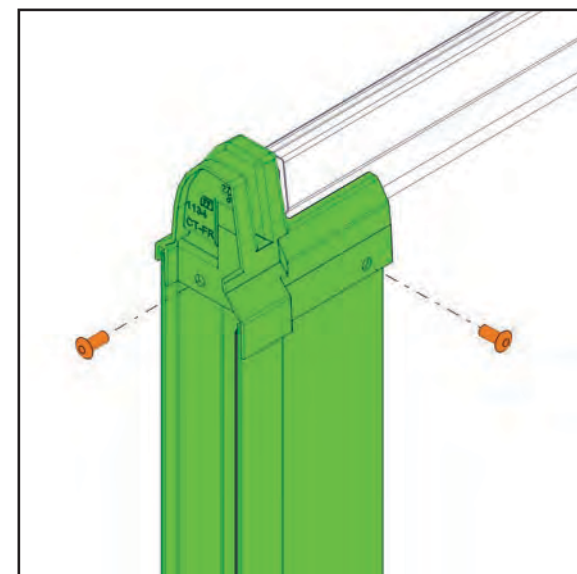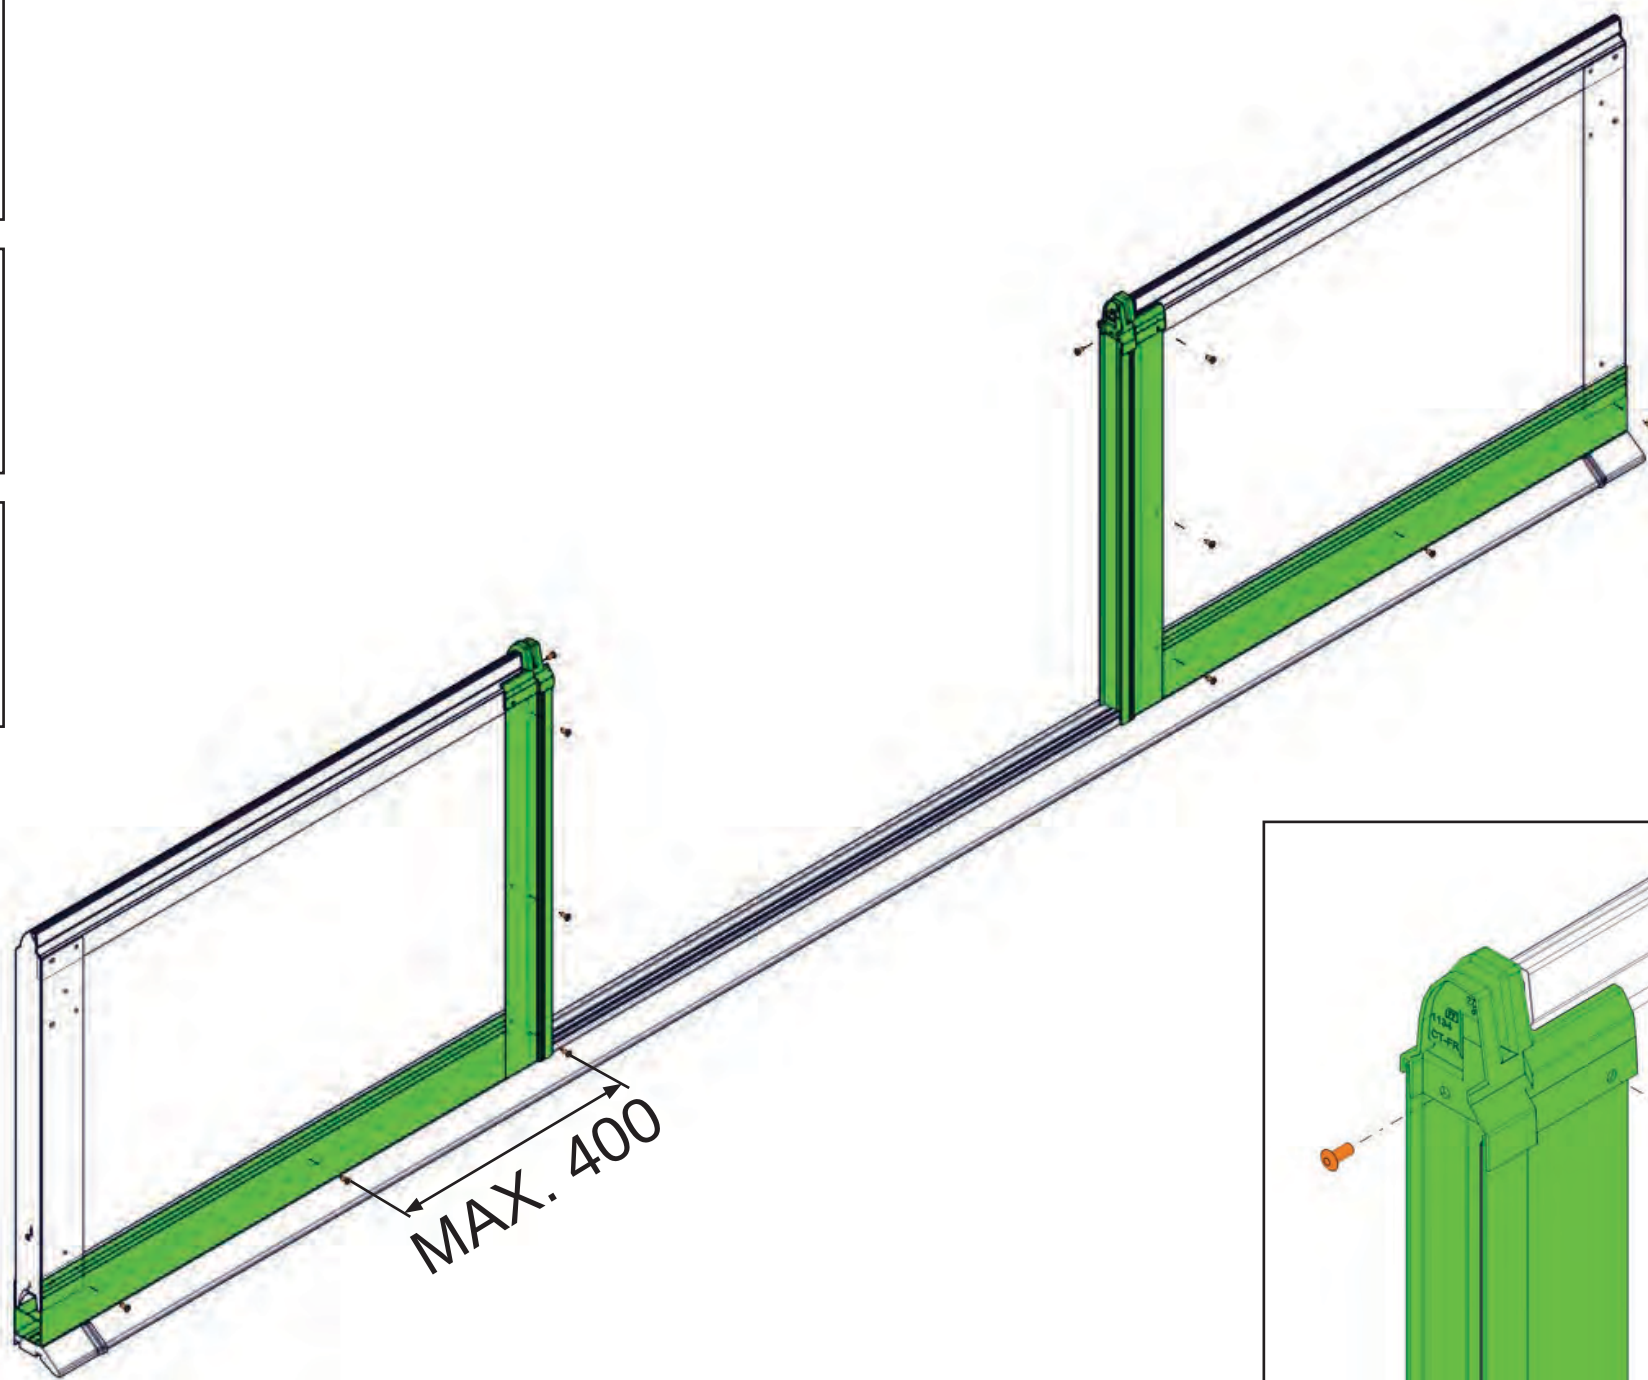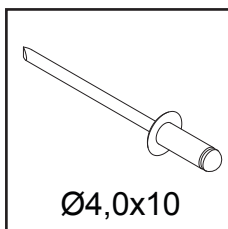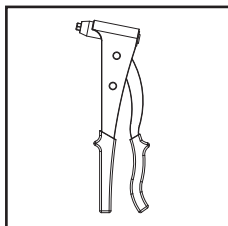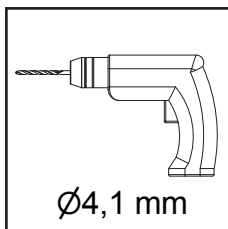

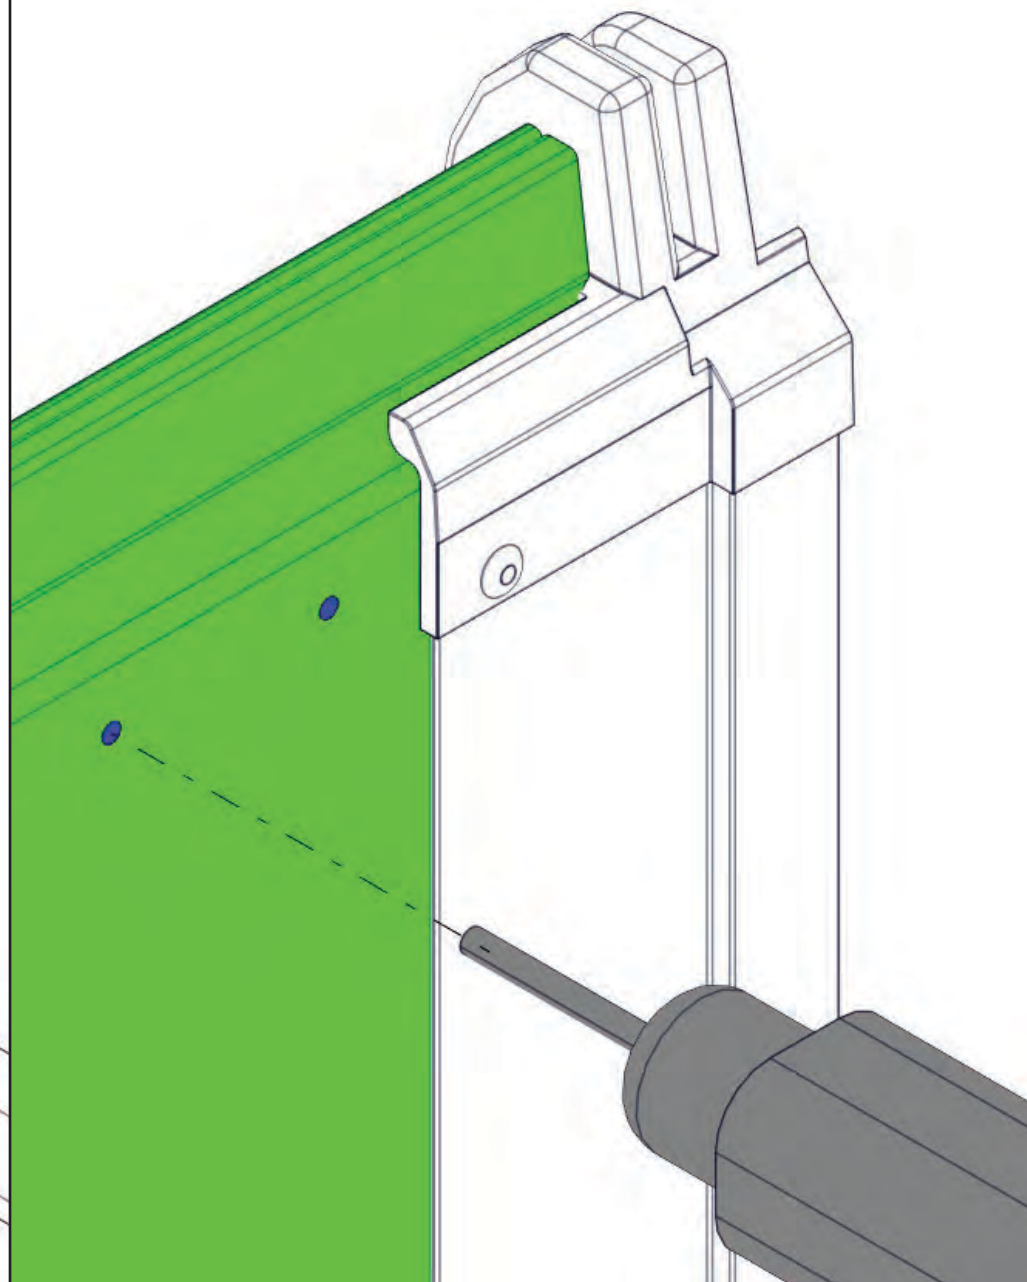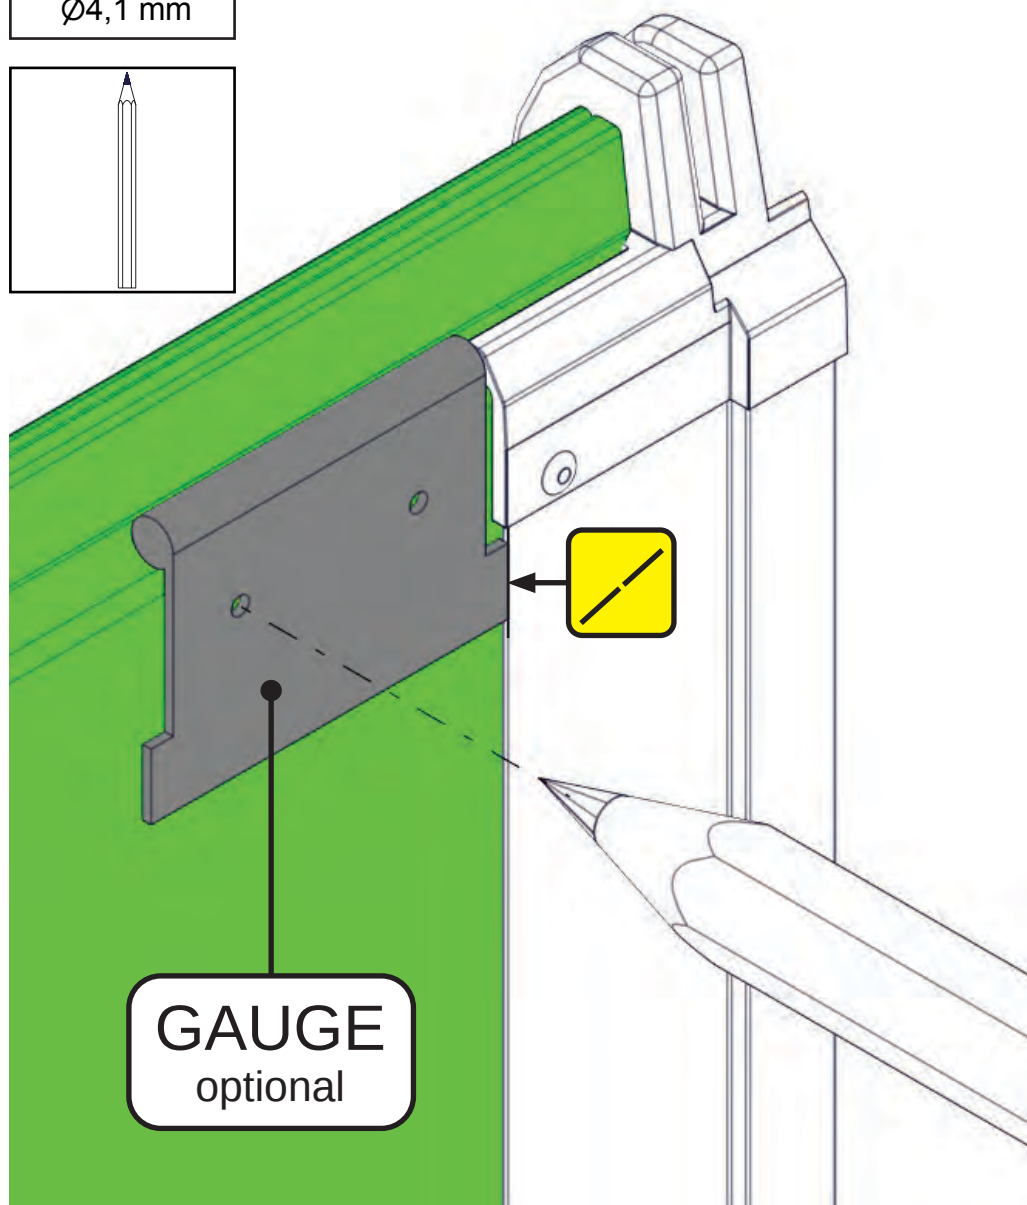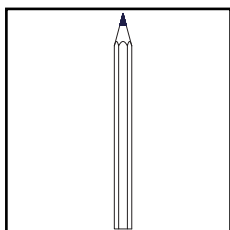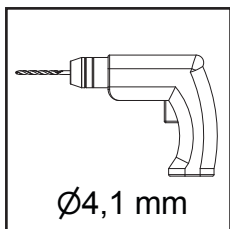

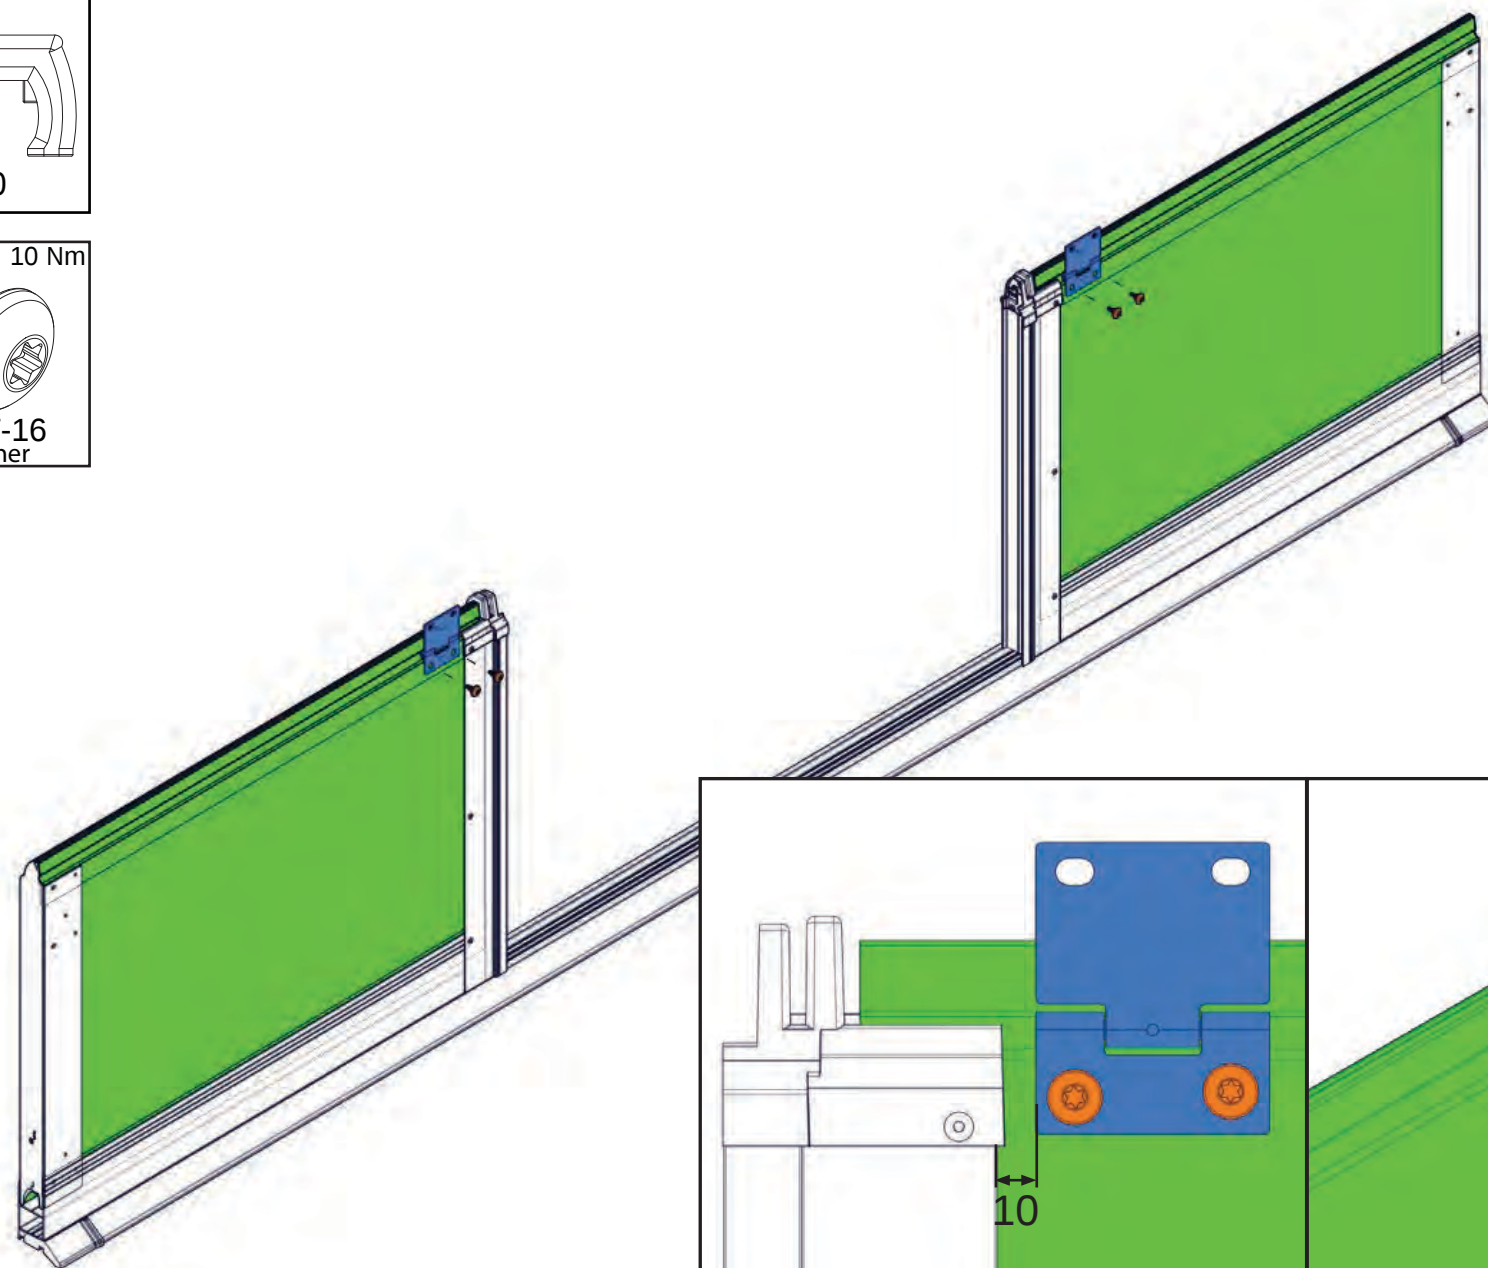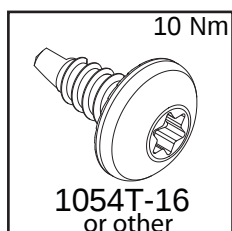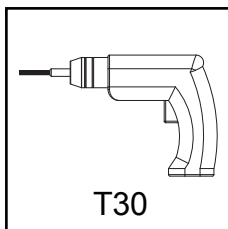





! See optional gauge on page 24


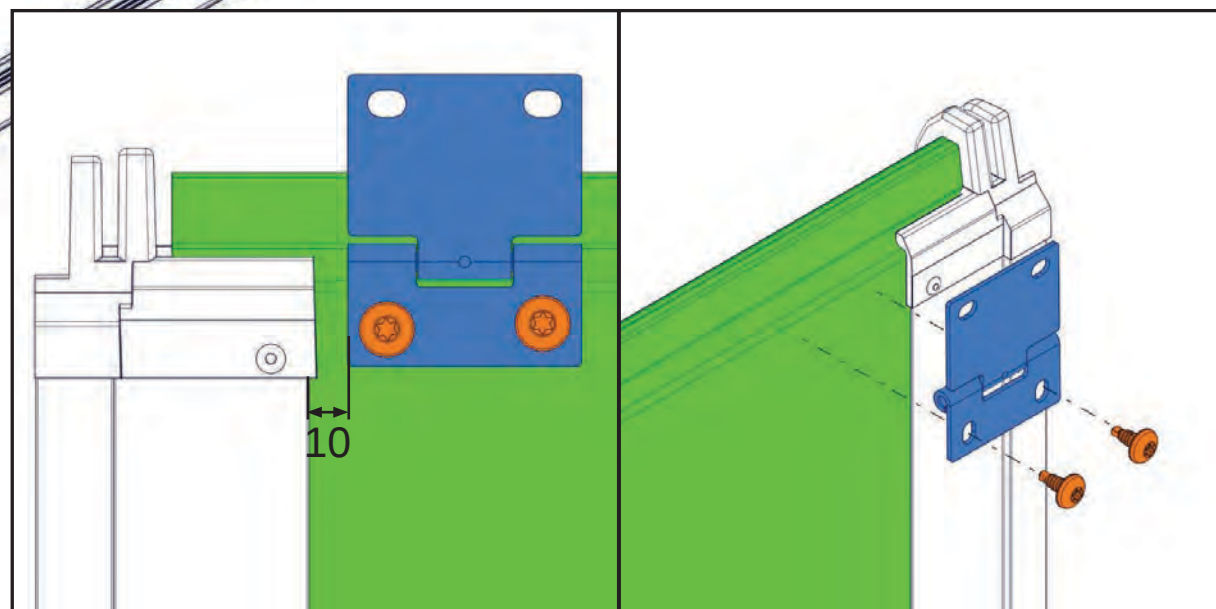



Frame middle sections

assembly instructions

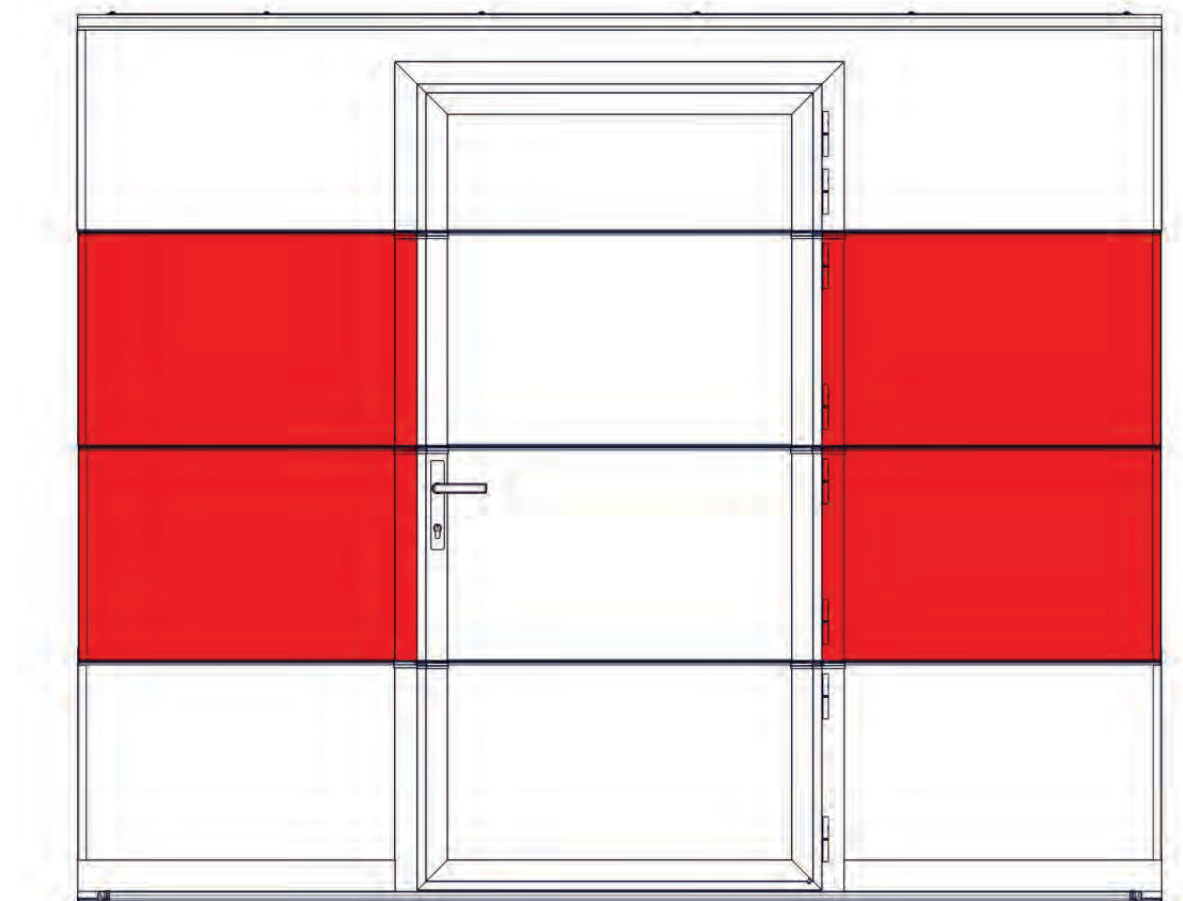


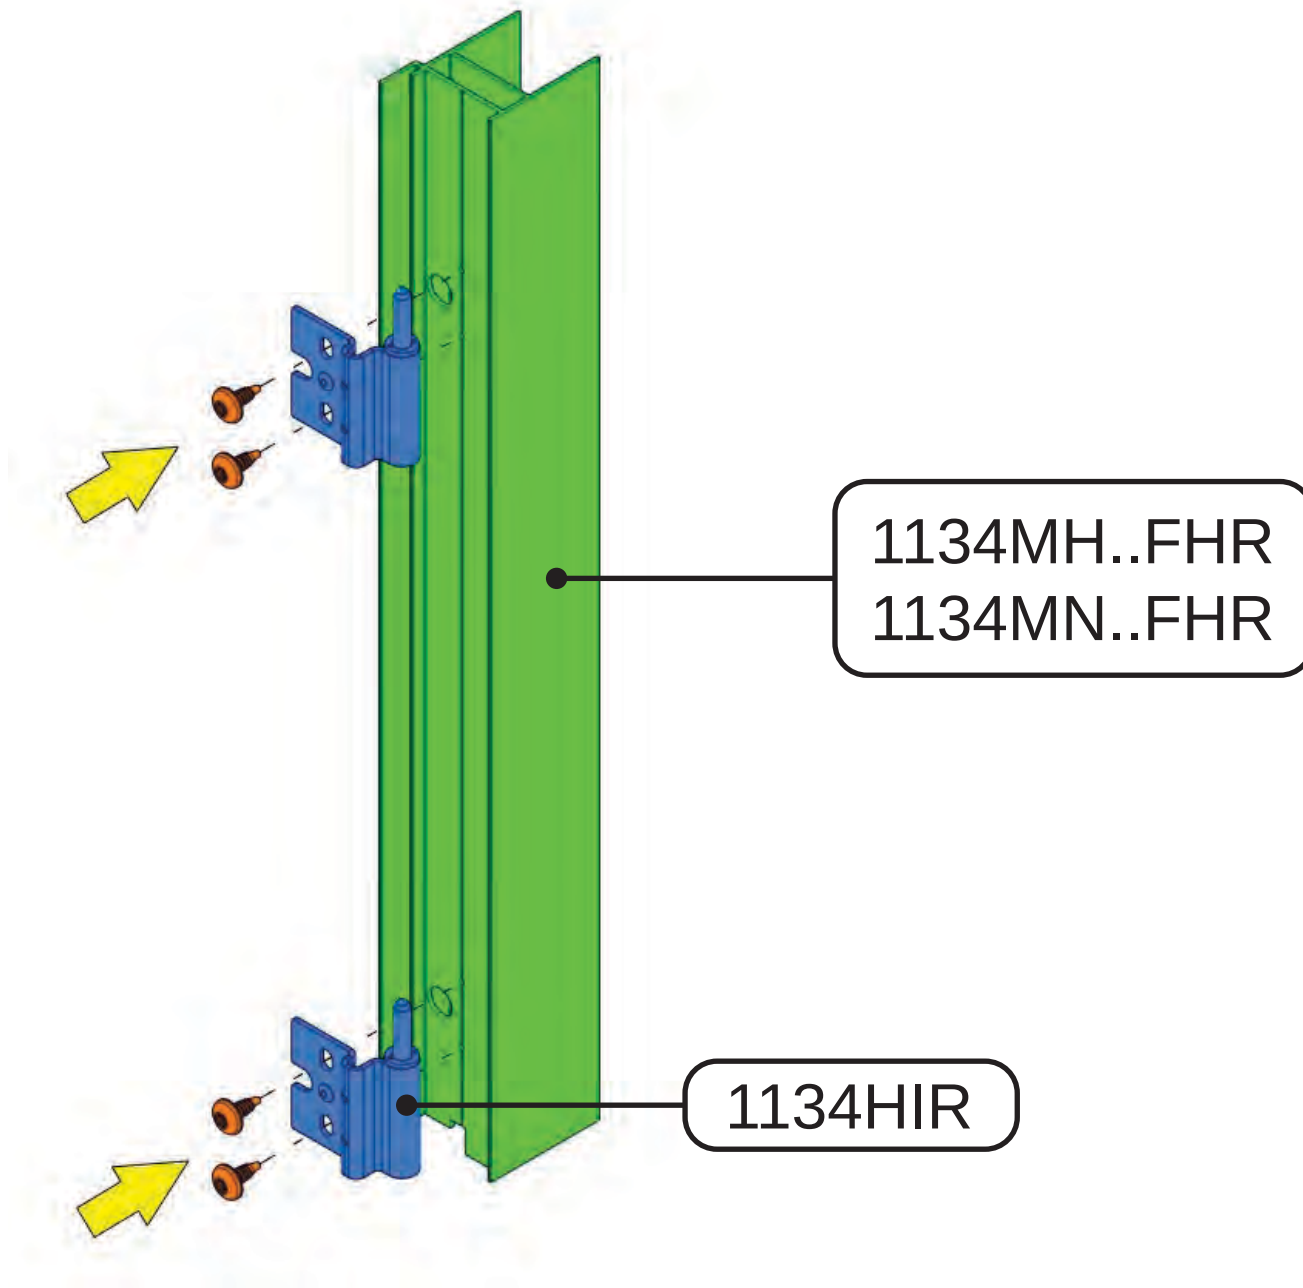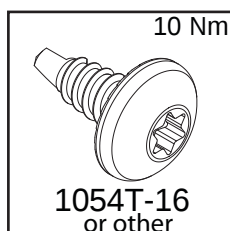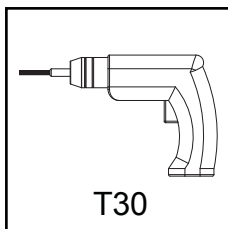

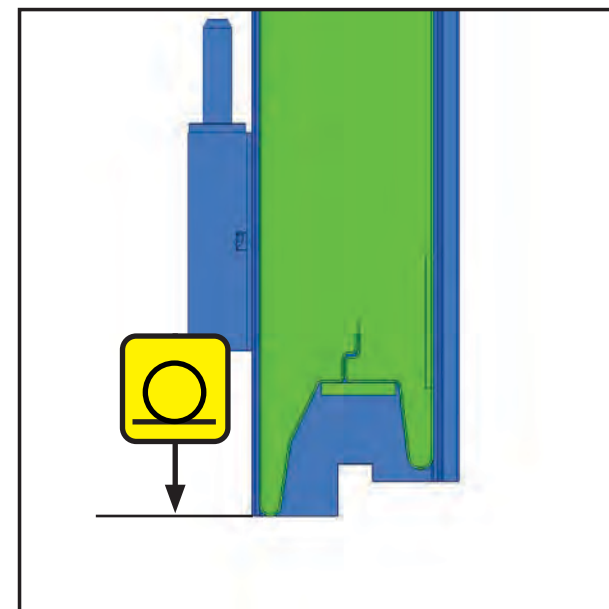
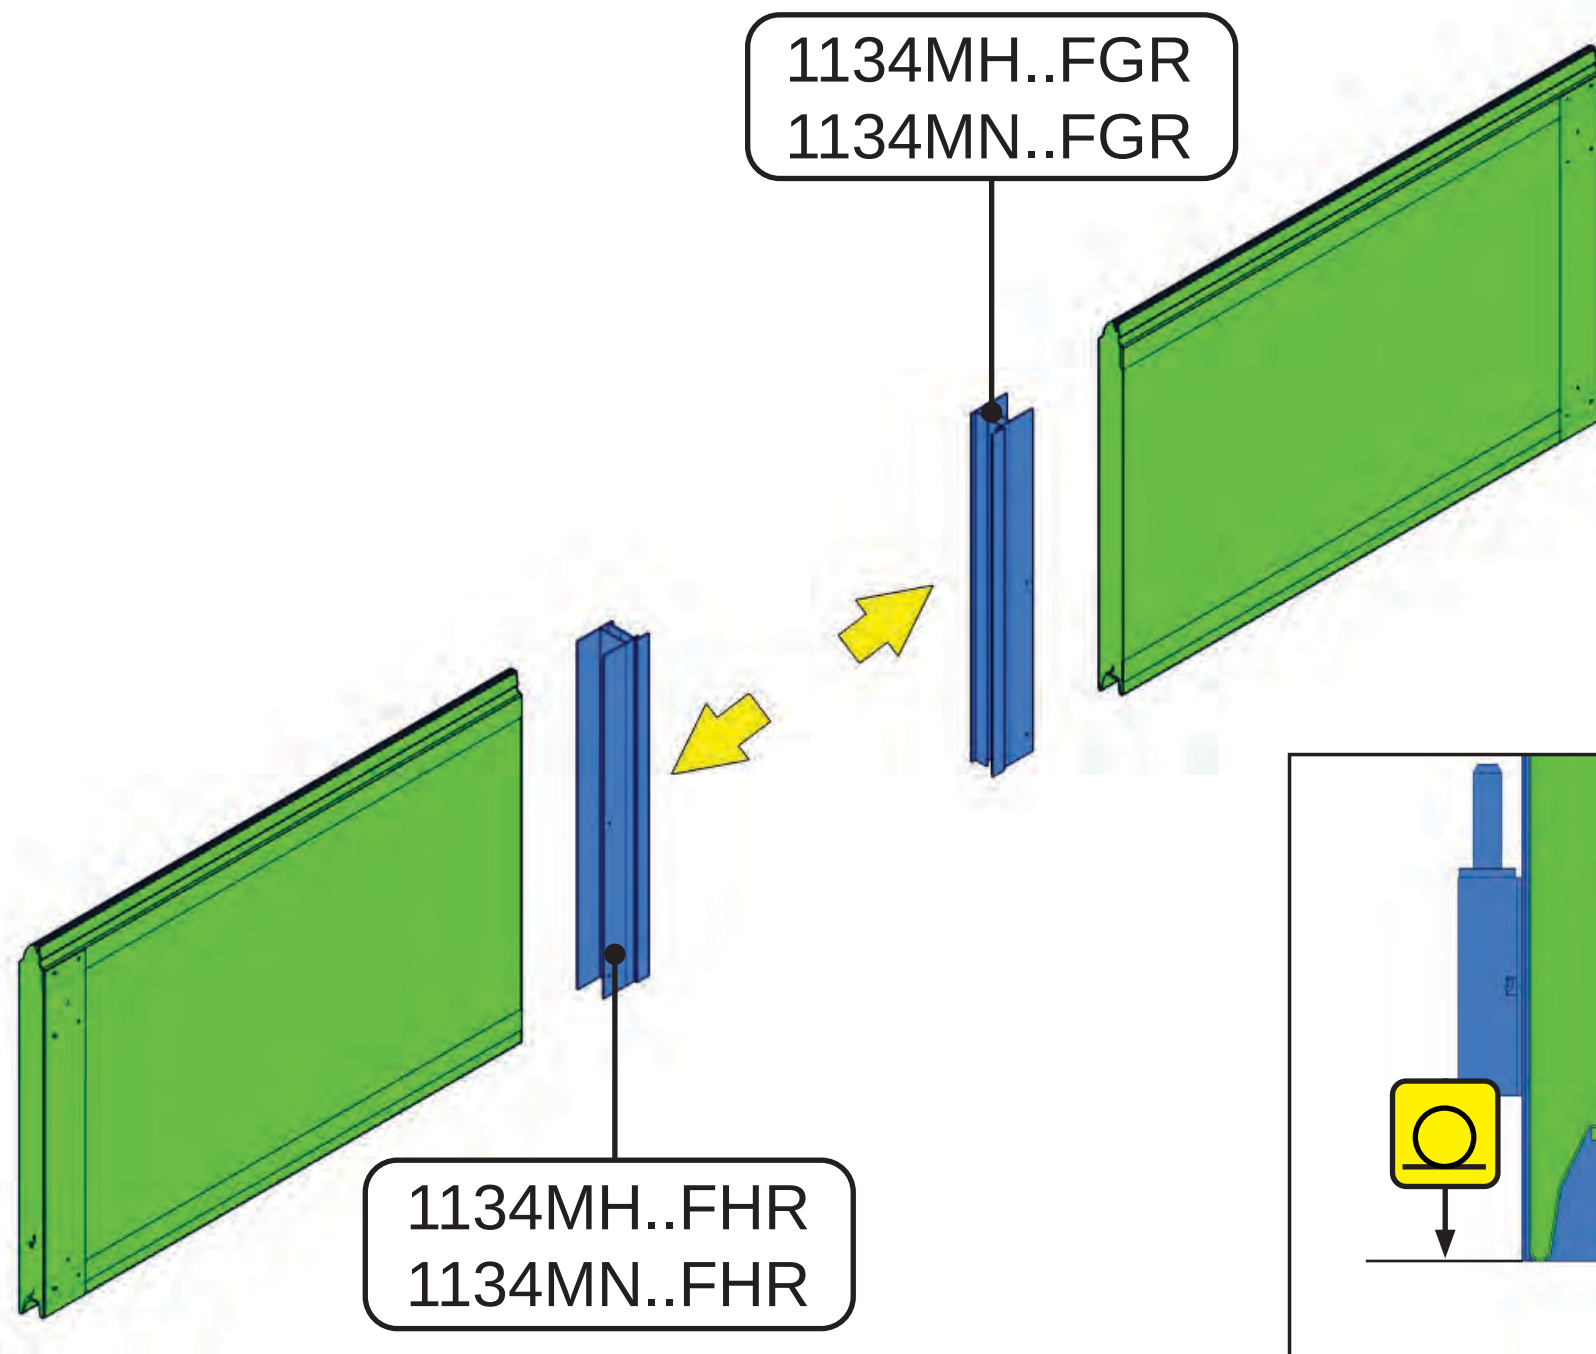




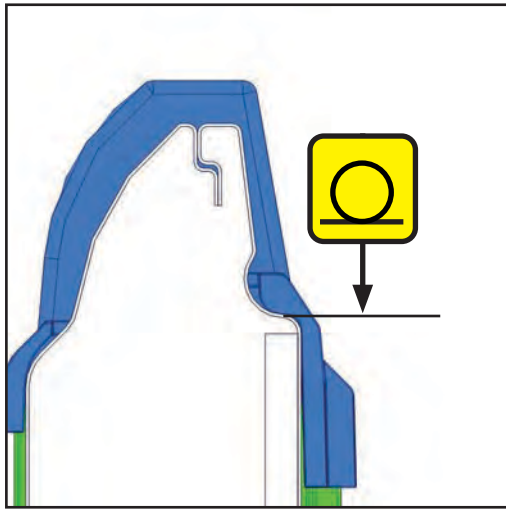








1134-C..-FR





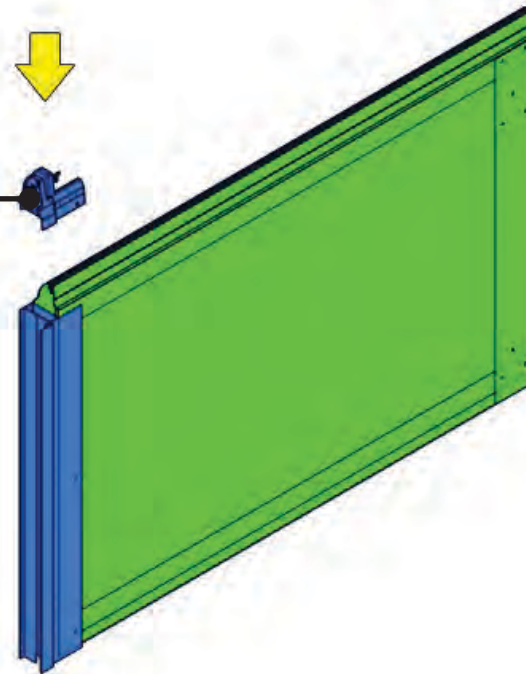


1134-C..-FL

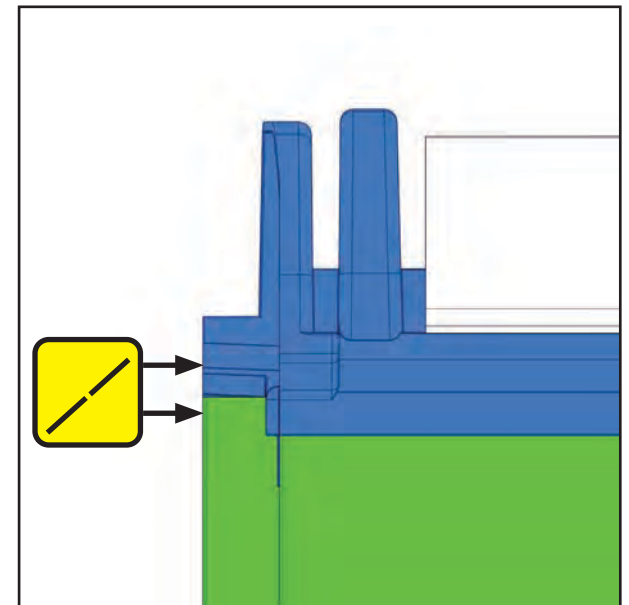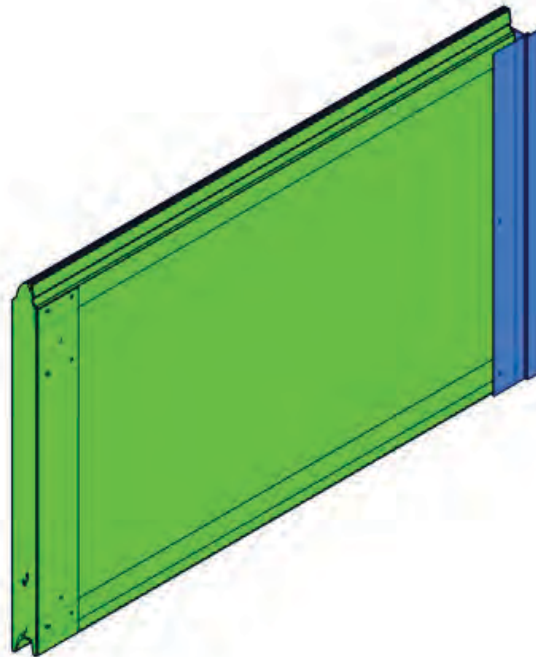

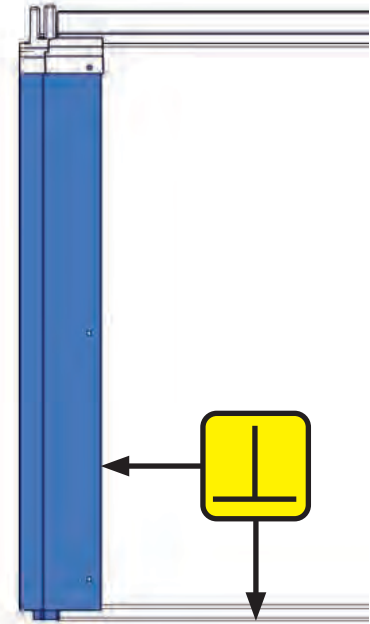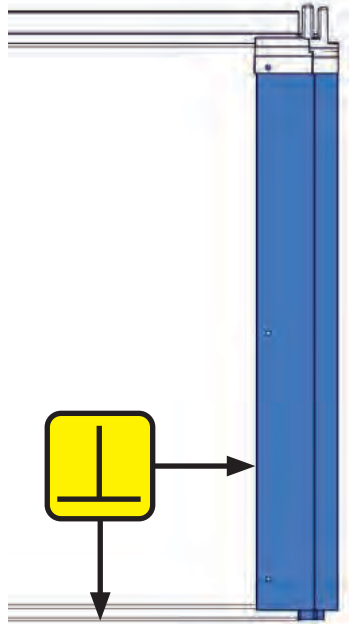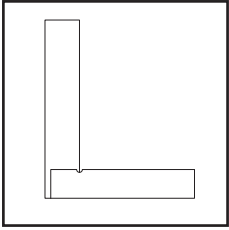

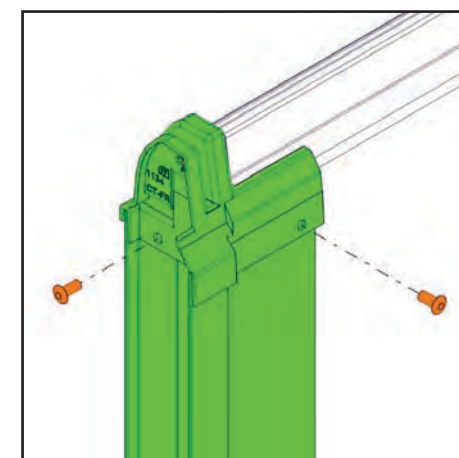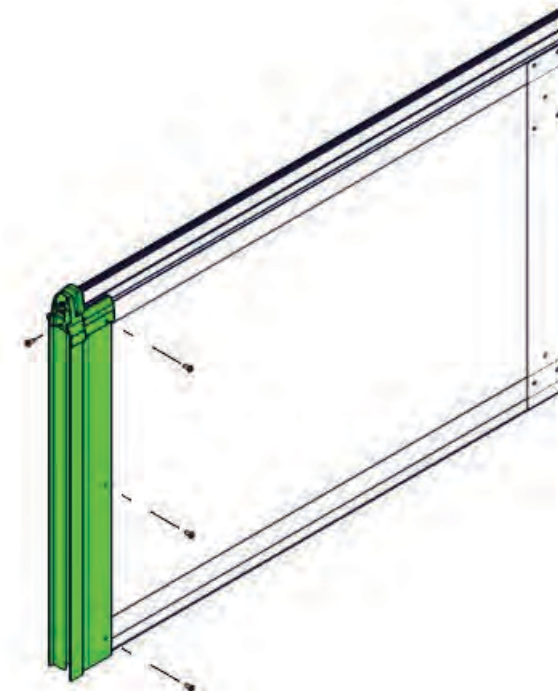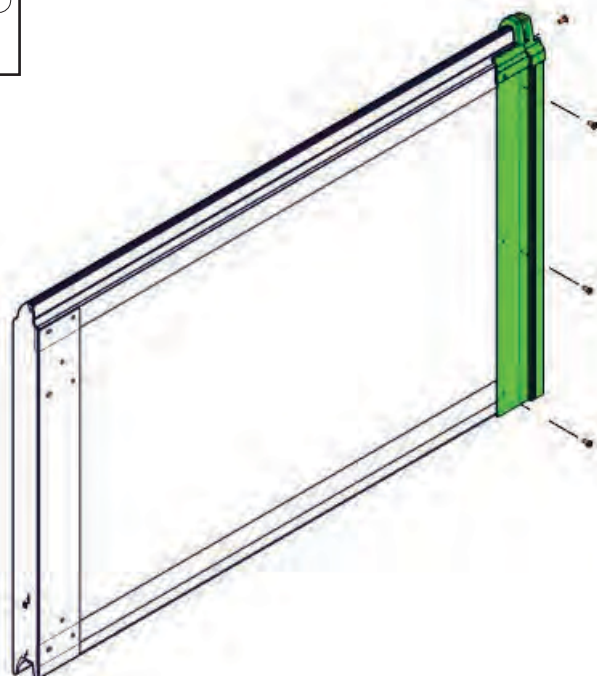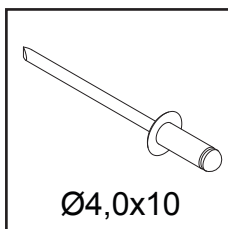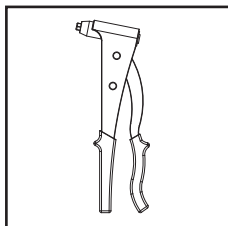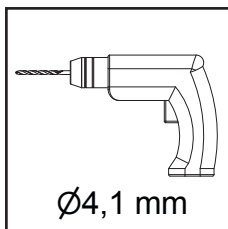


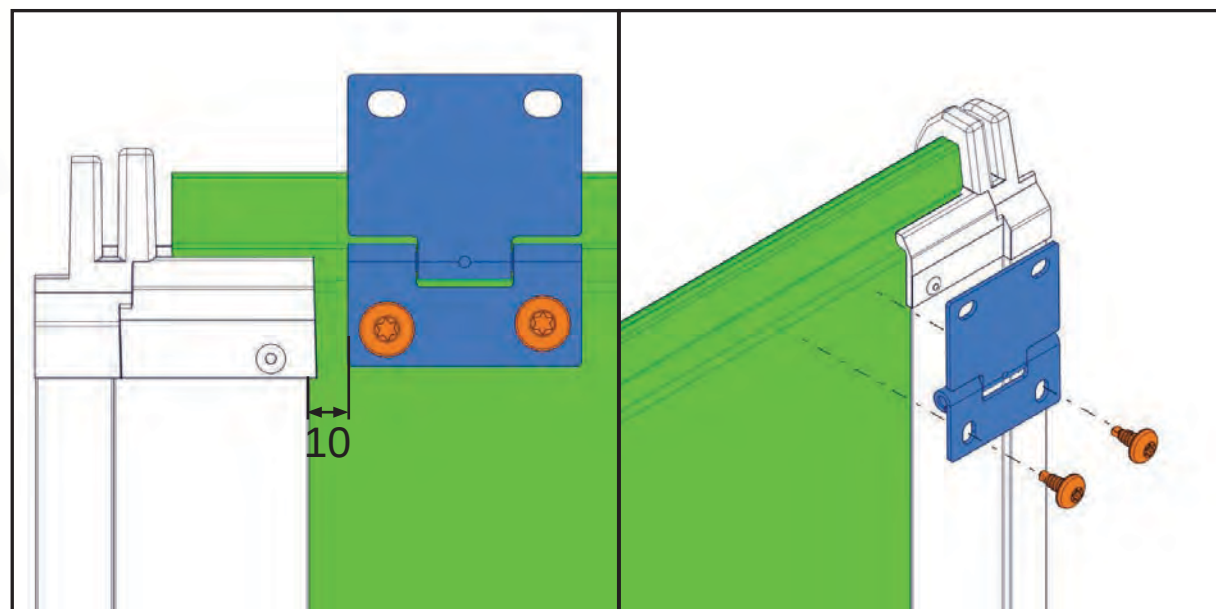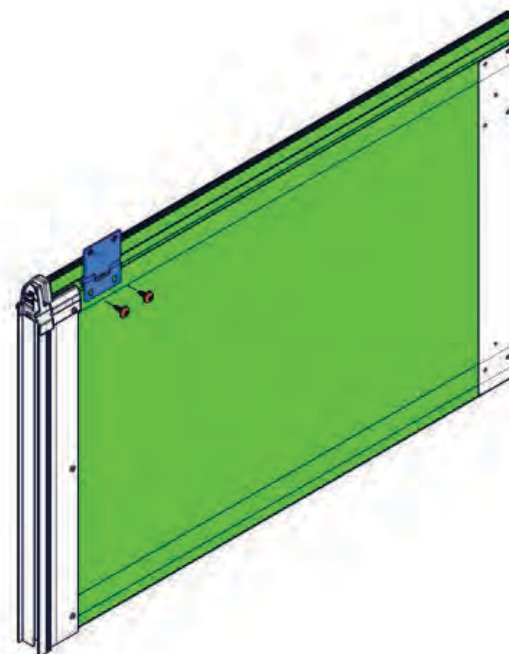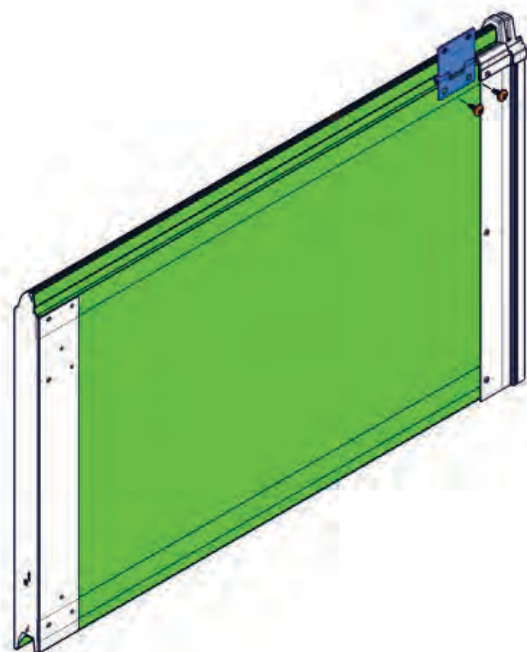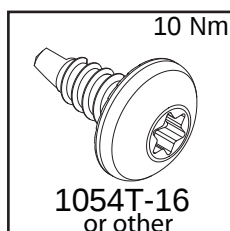
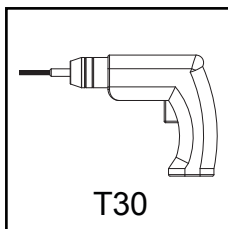





! See optional gauge on page 24


FF Installation manual






Frame top section assembly instructions


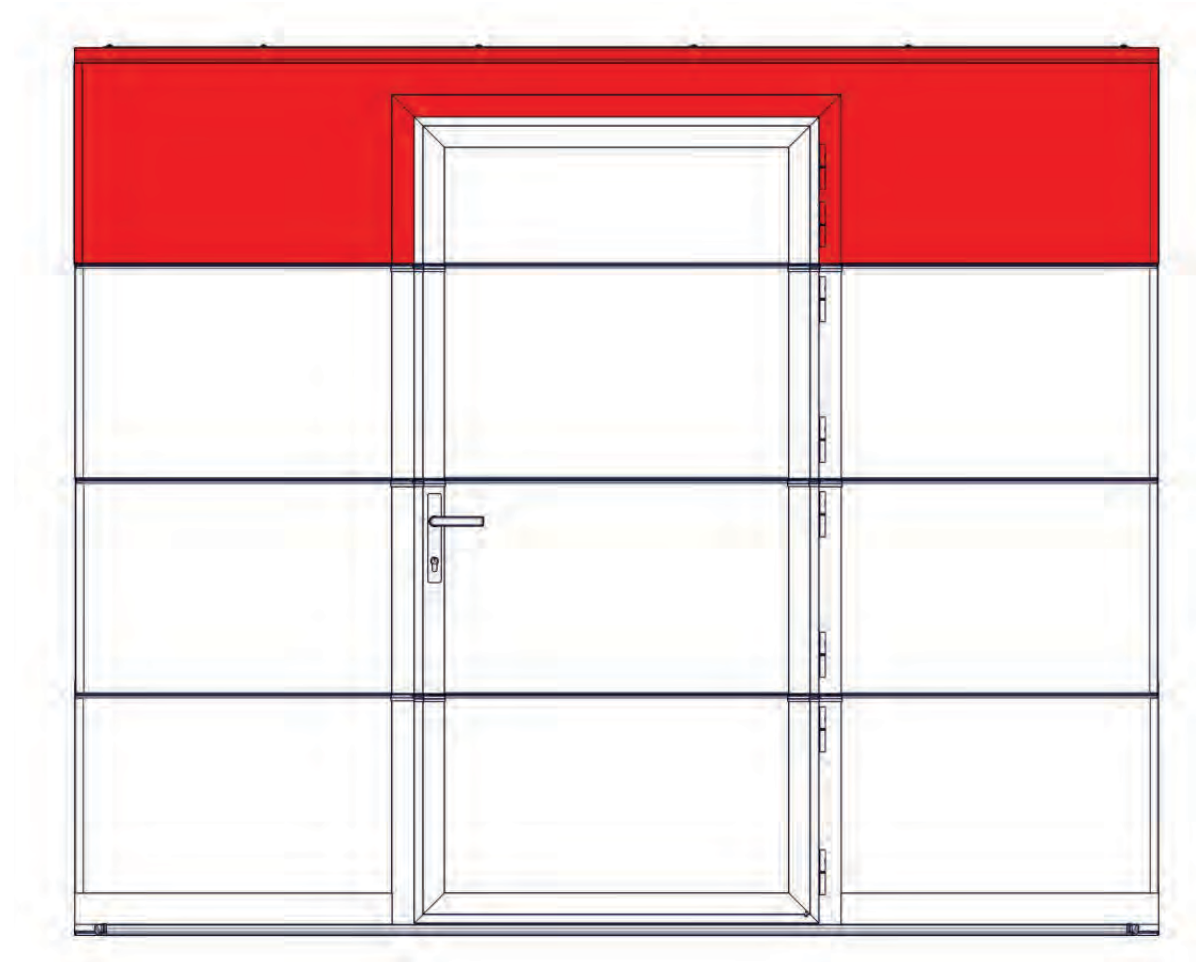




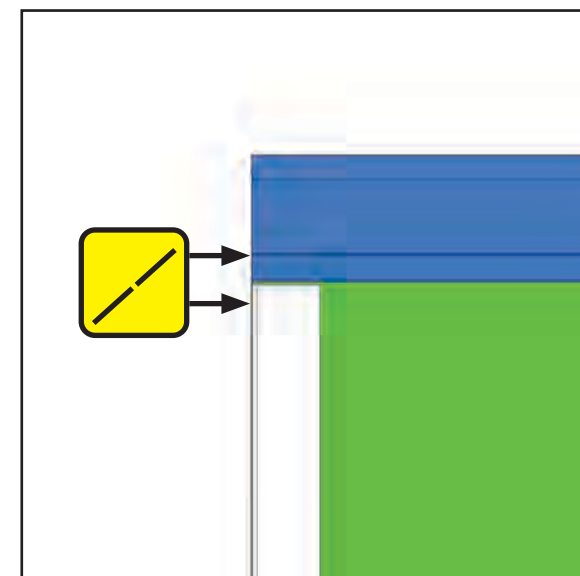
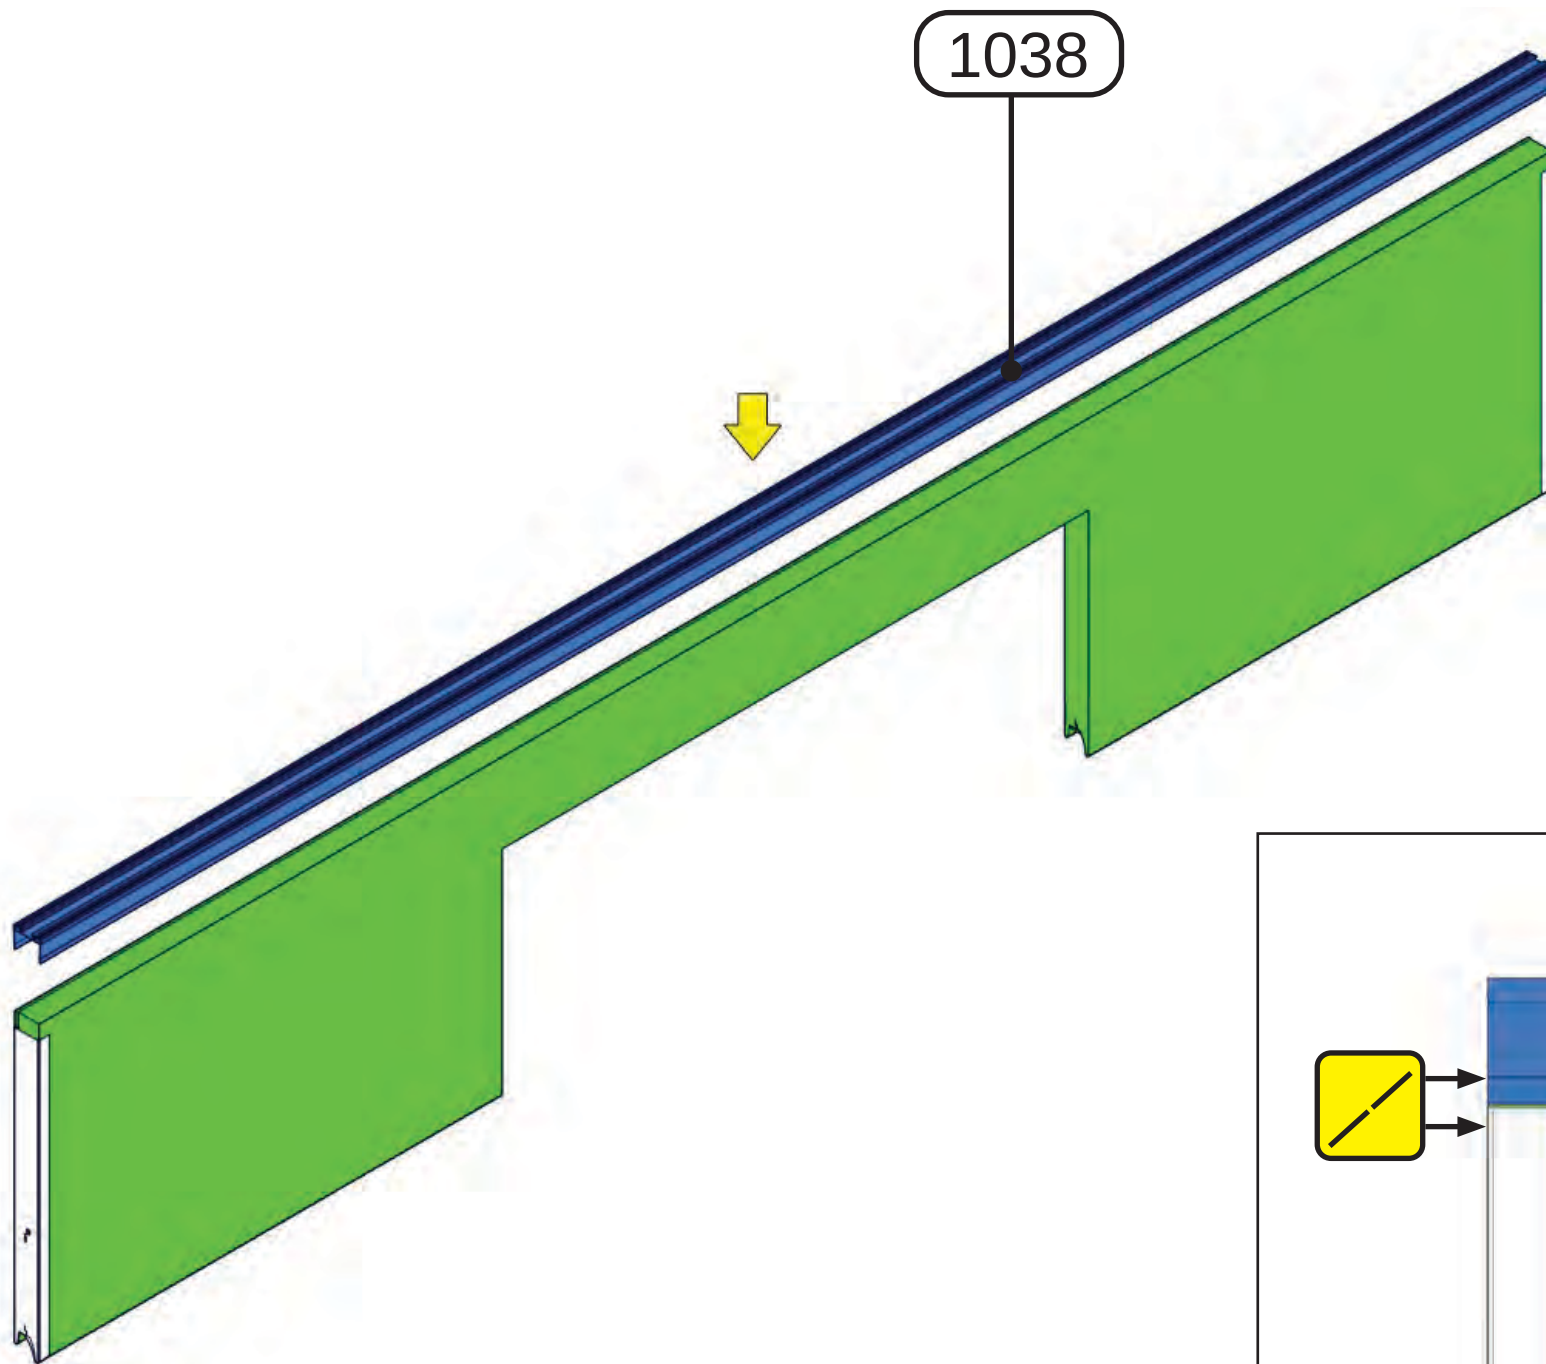


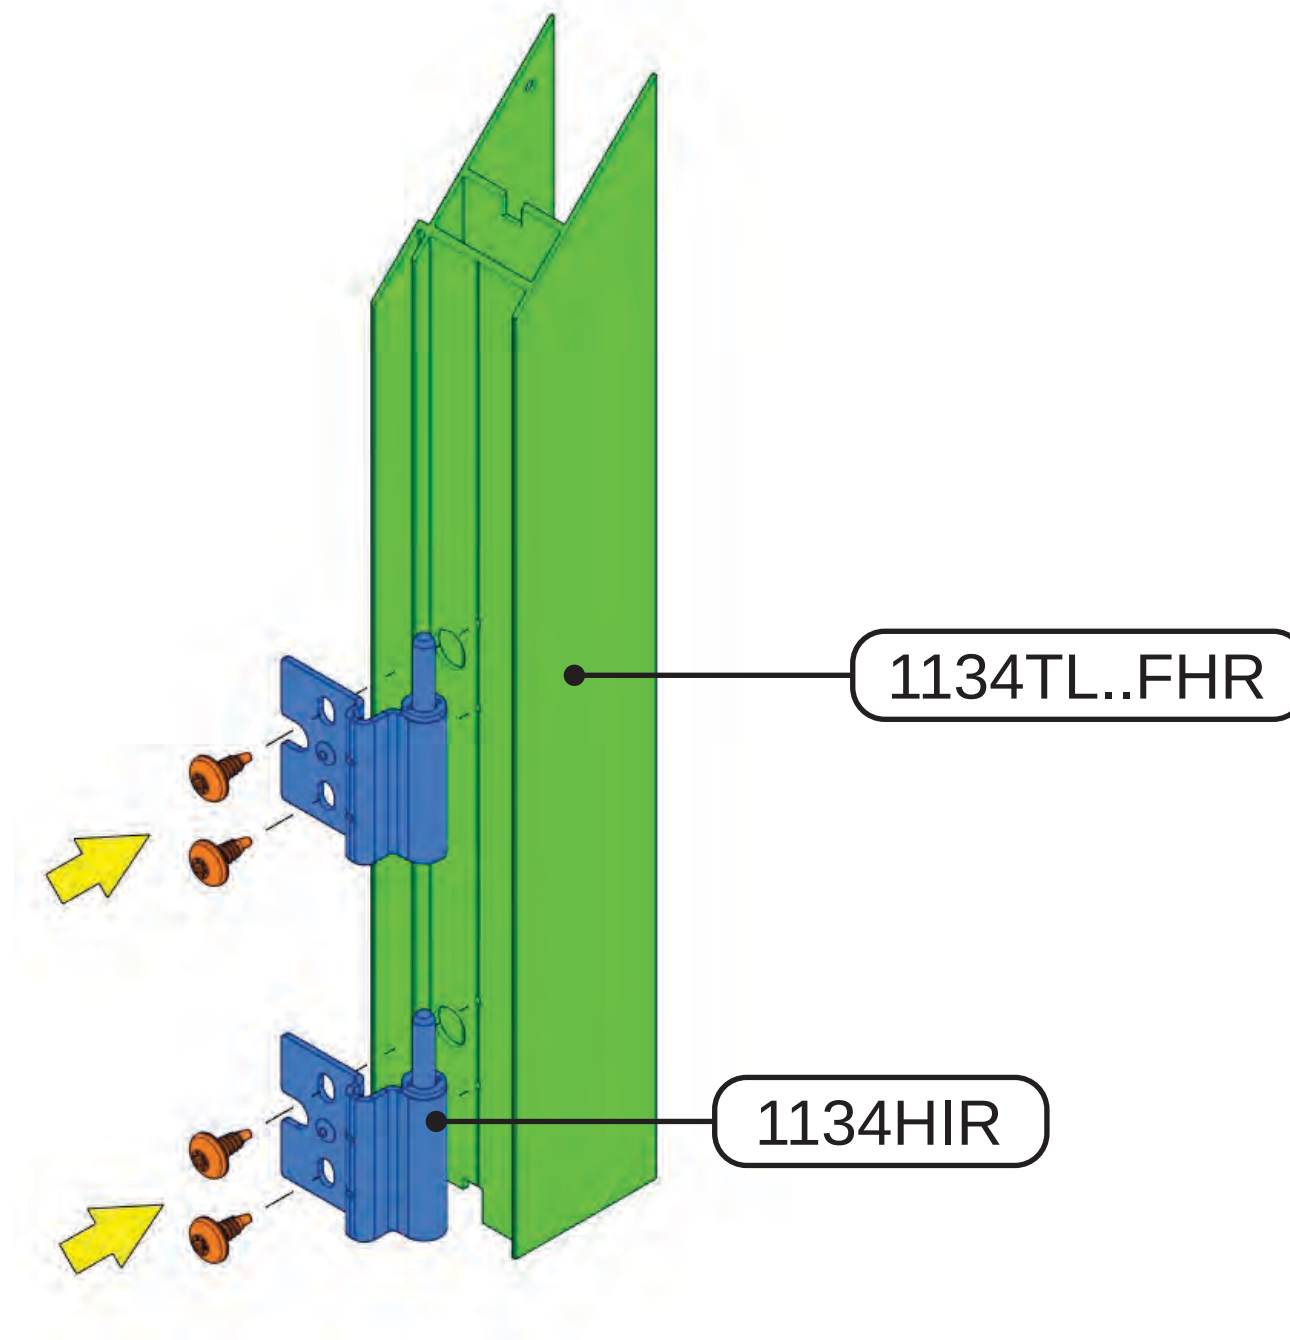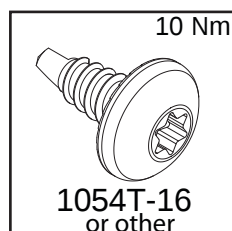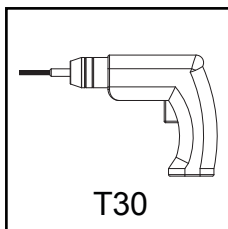








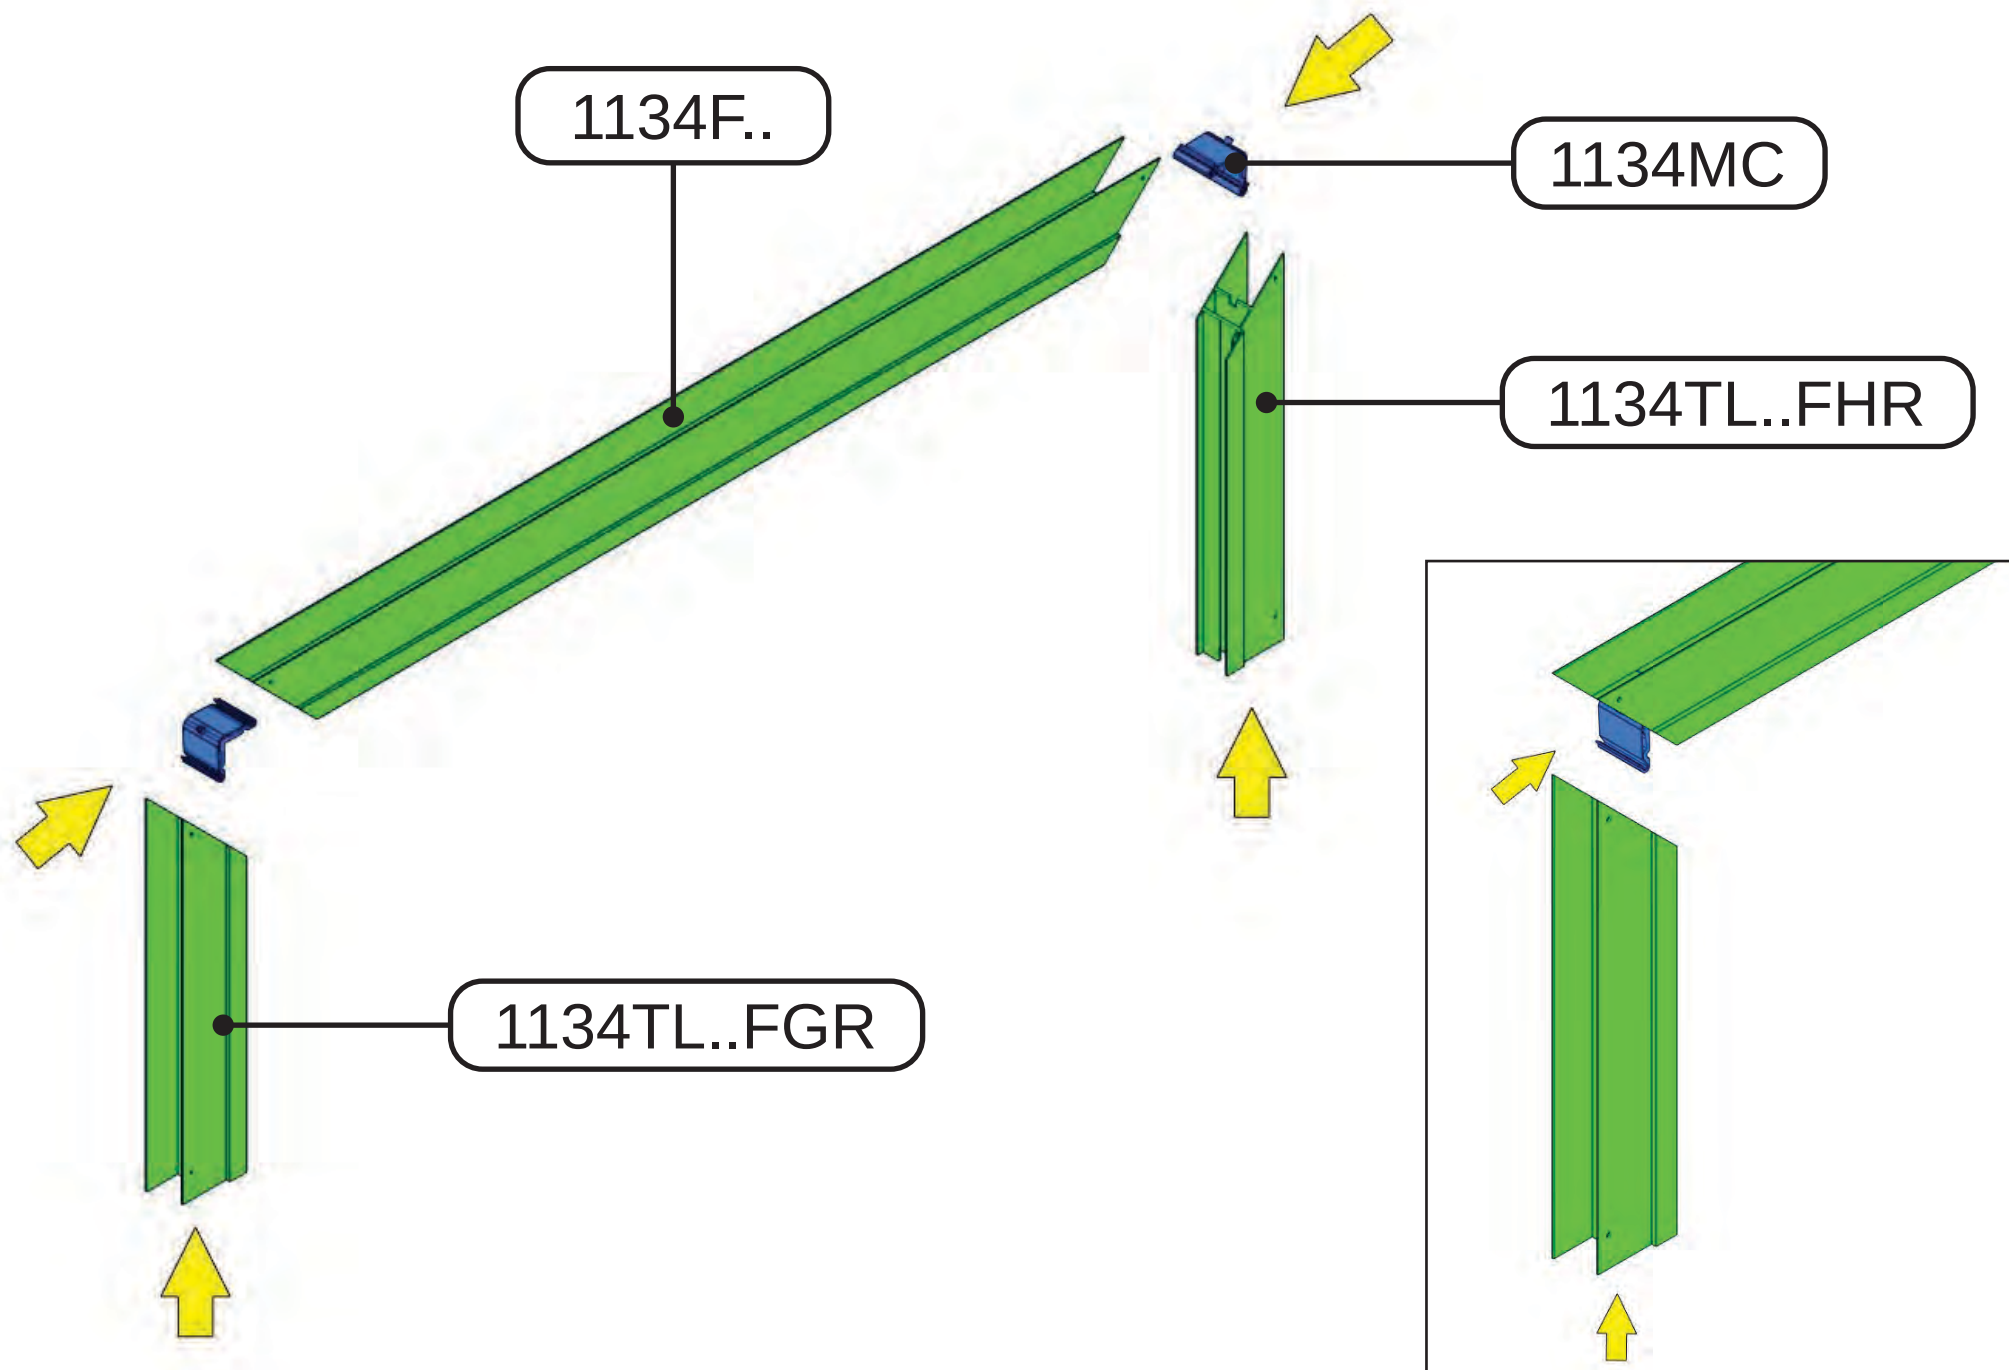


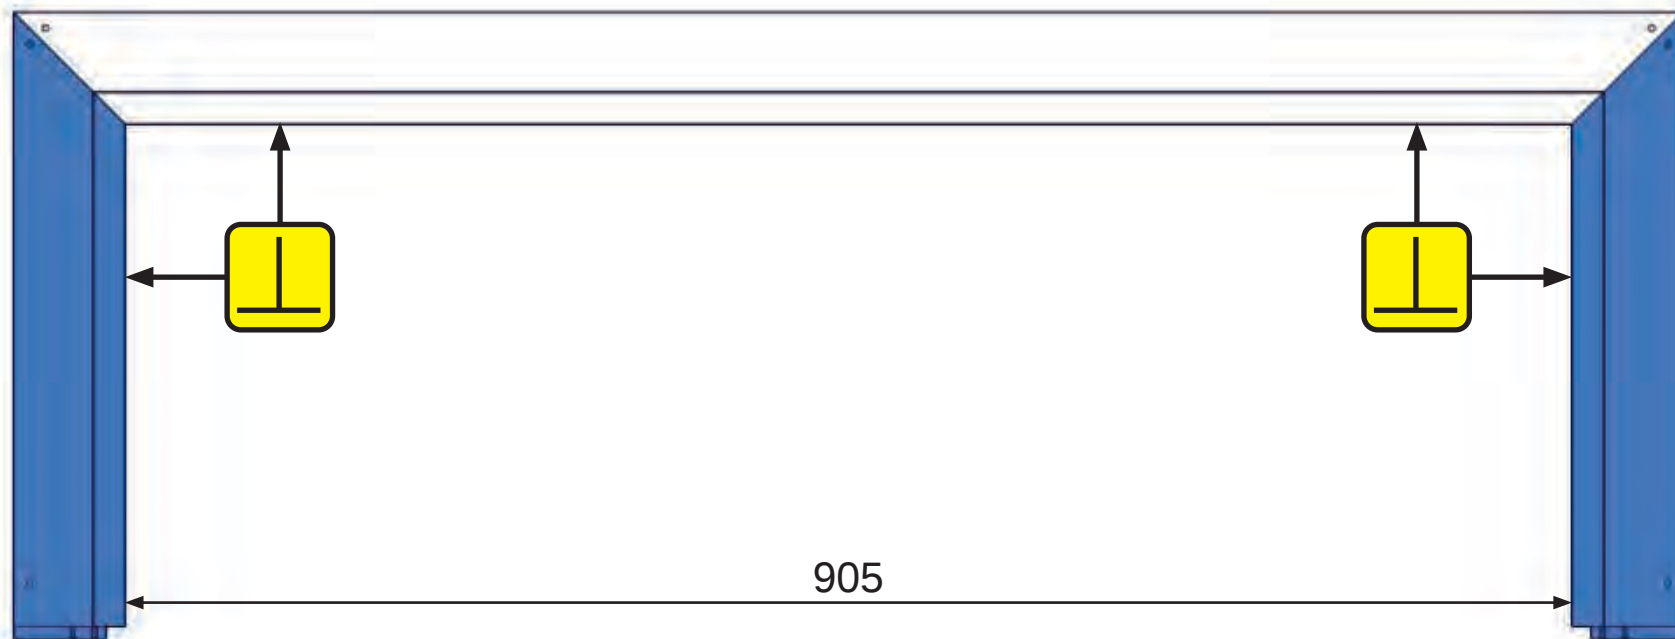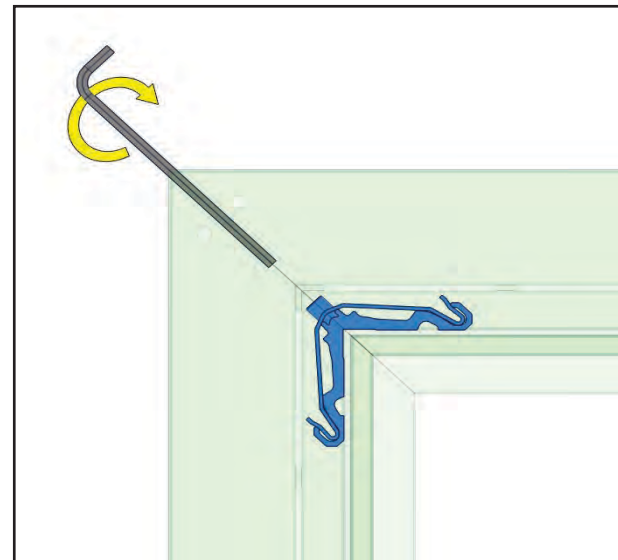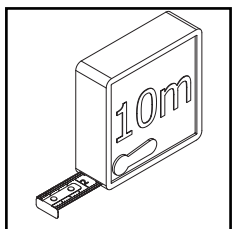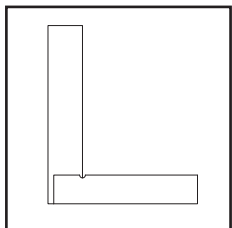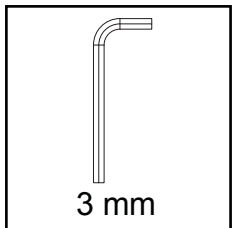

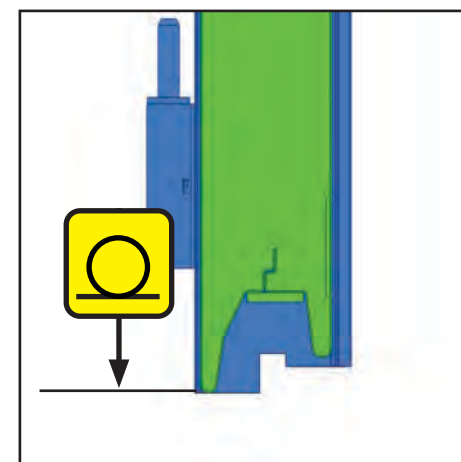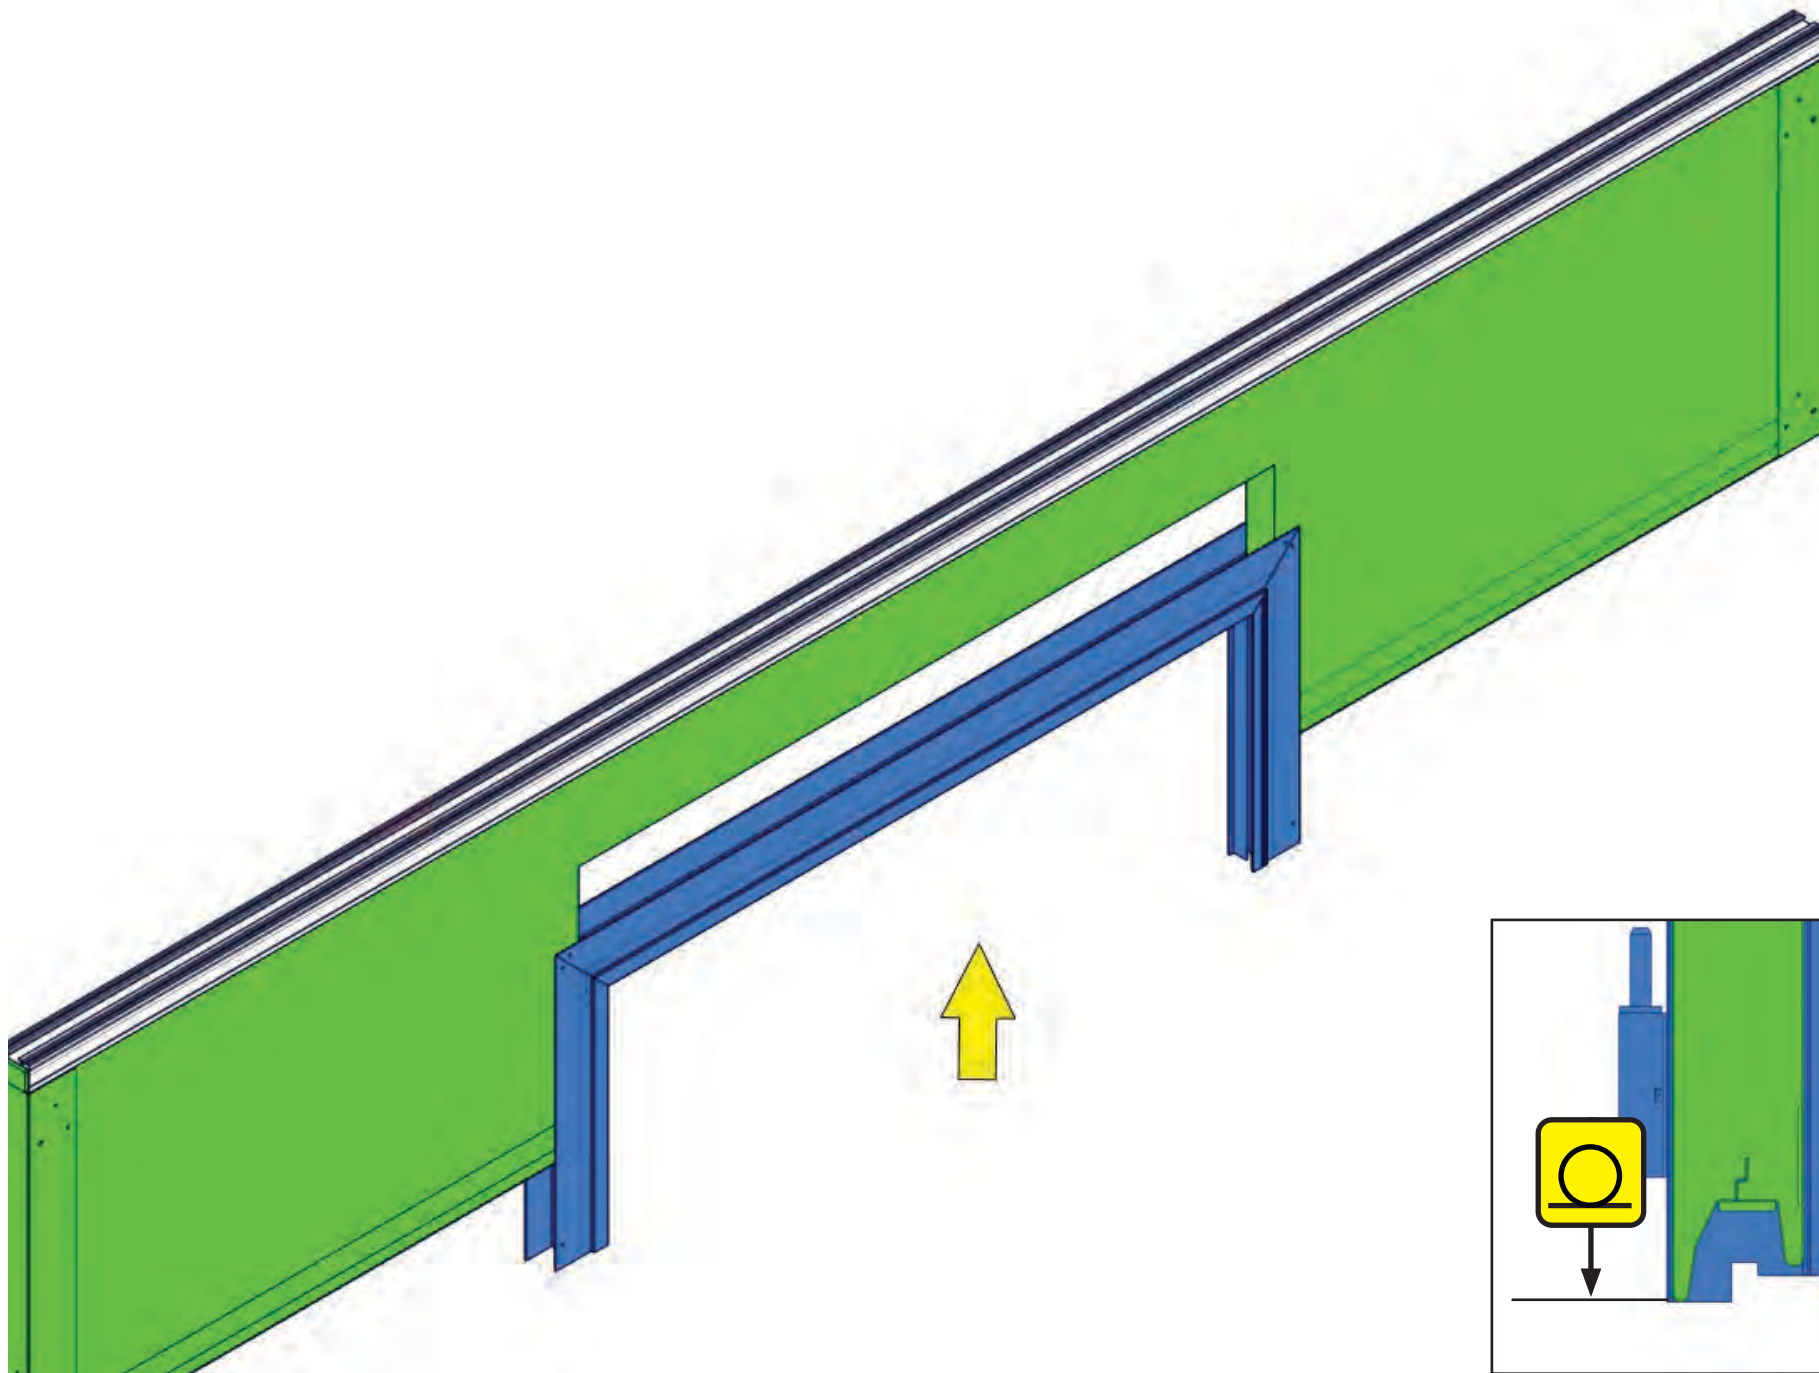

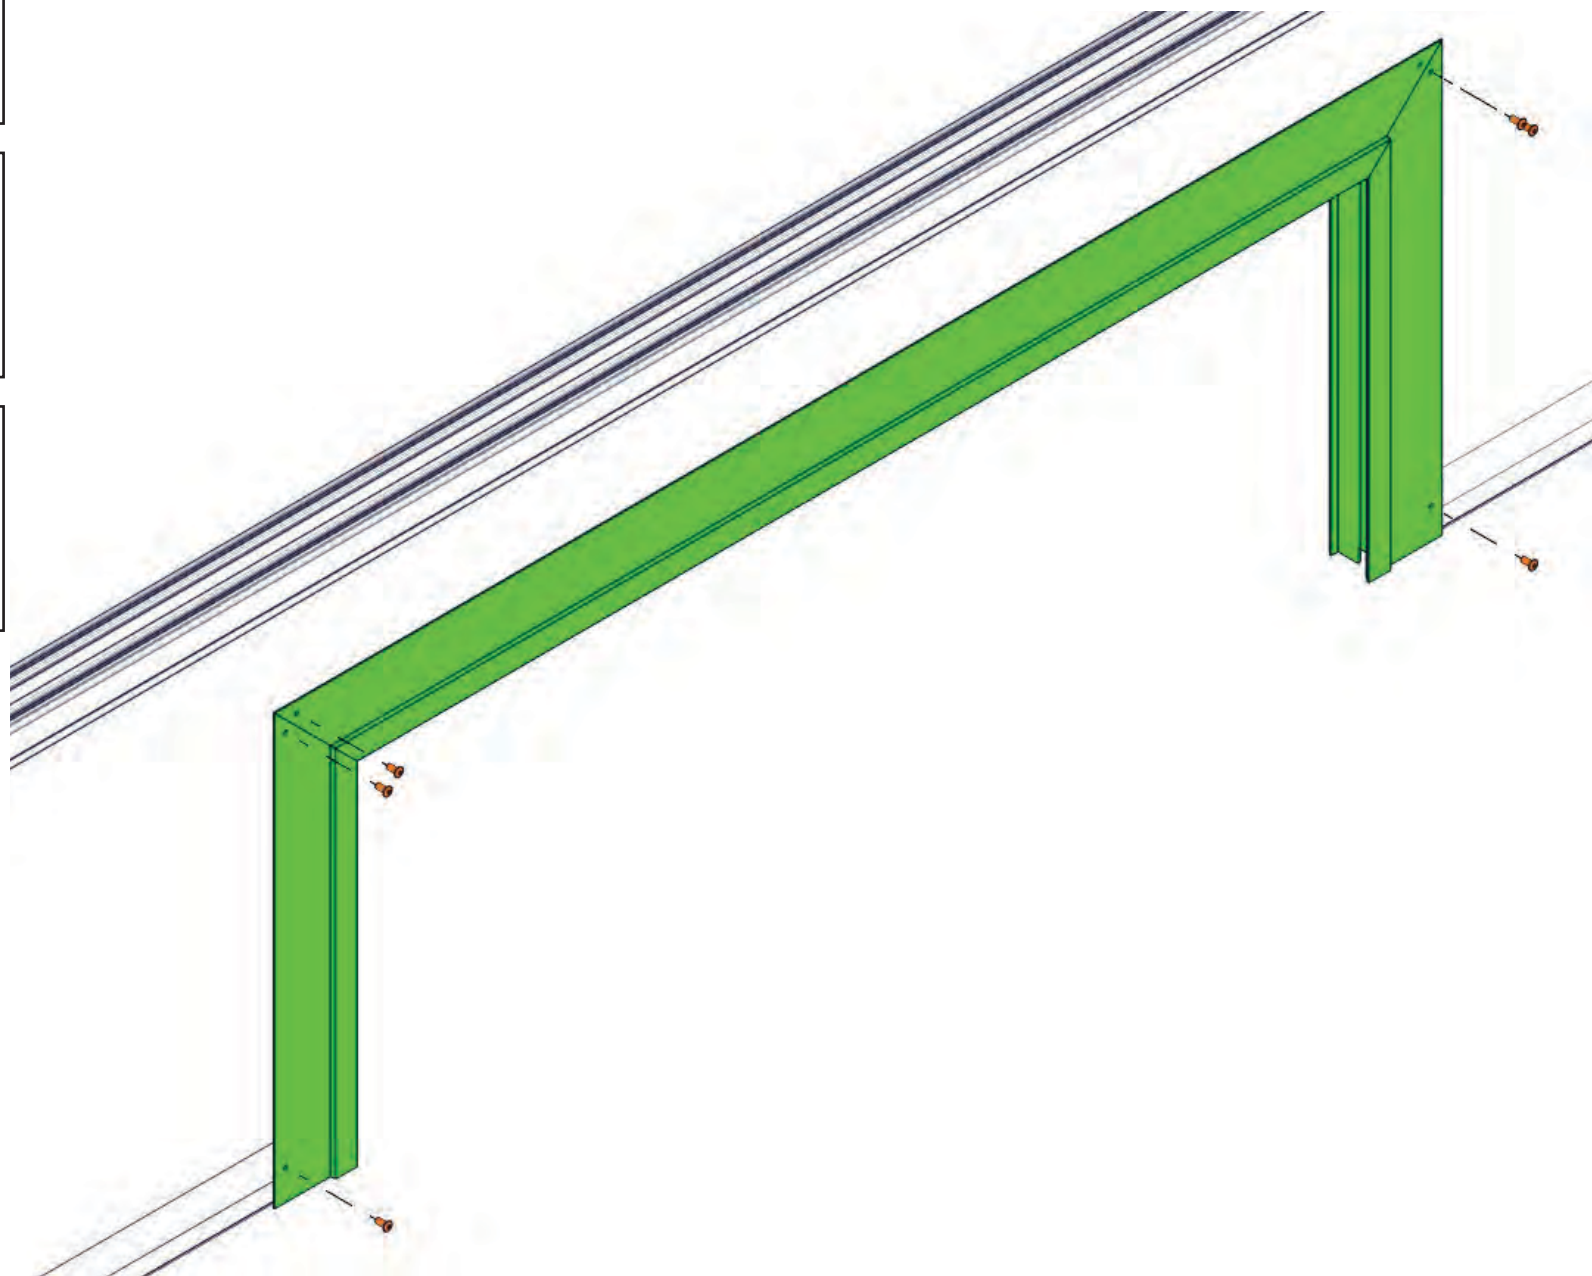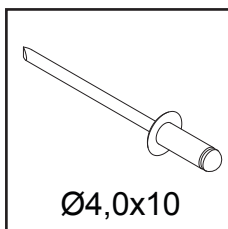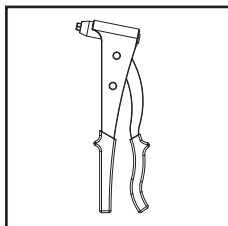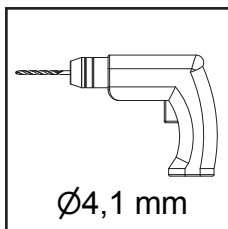




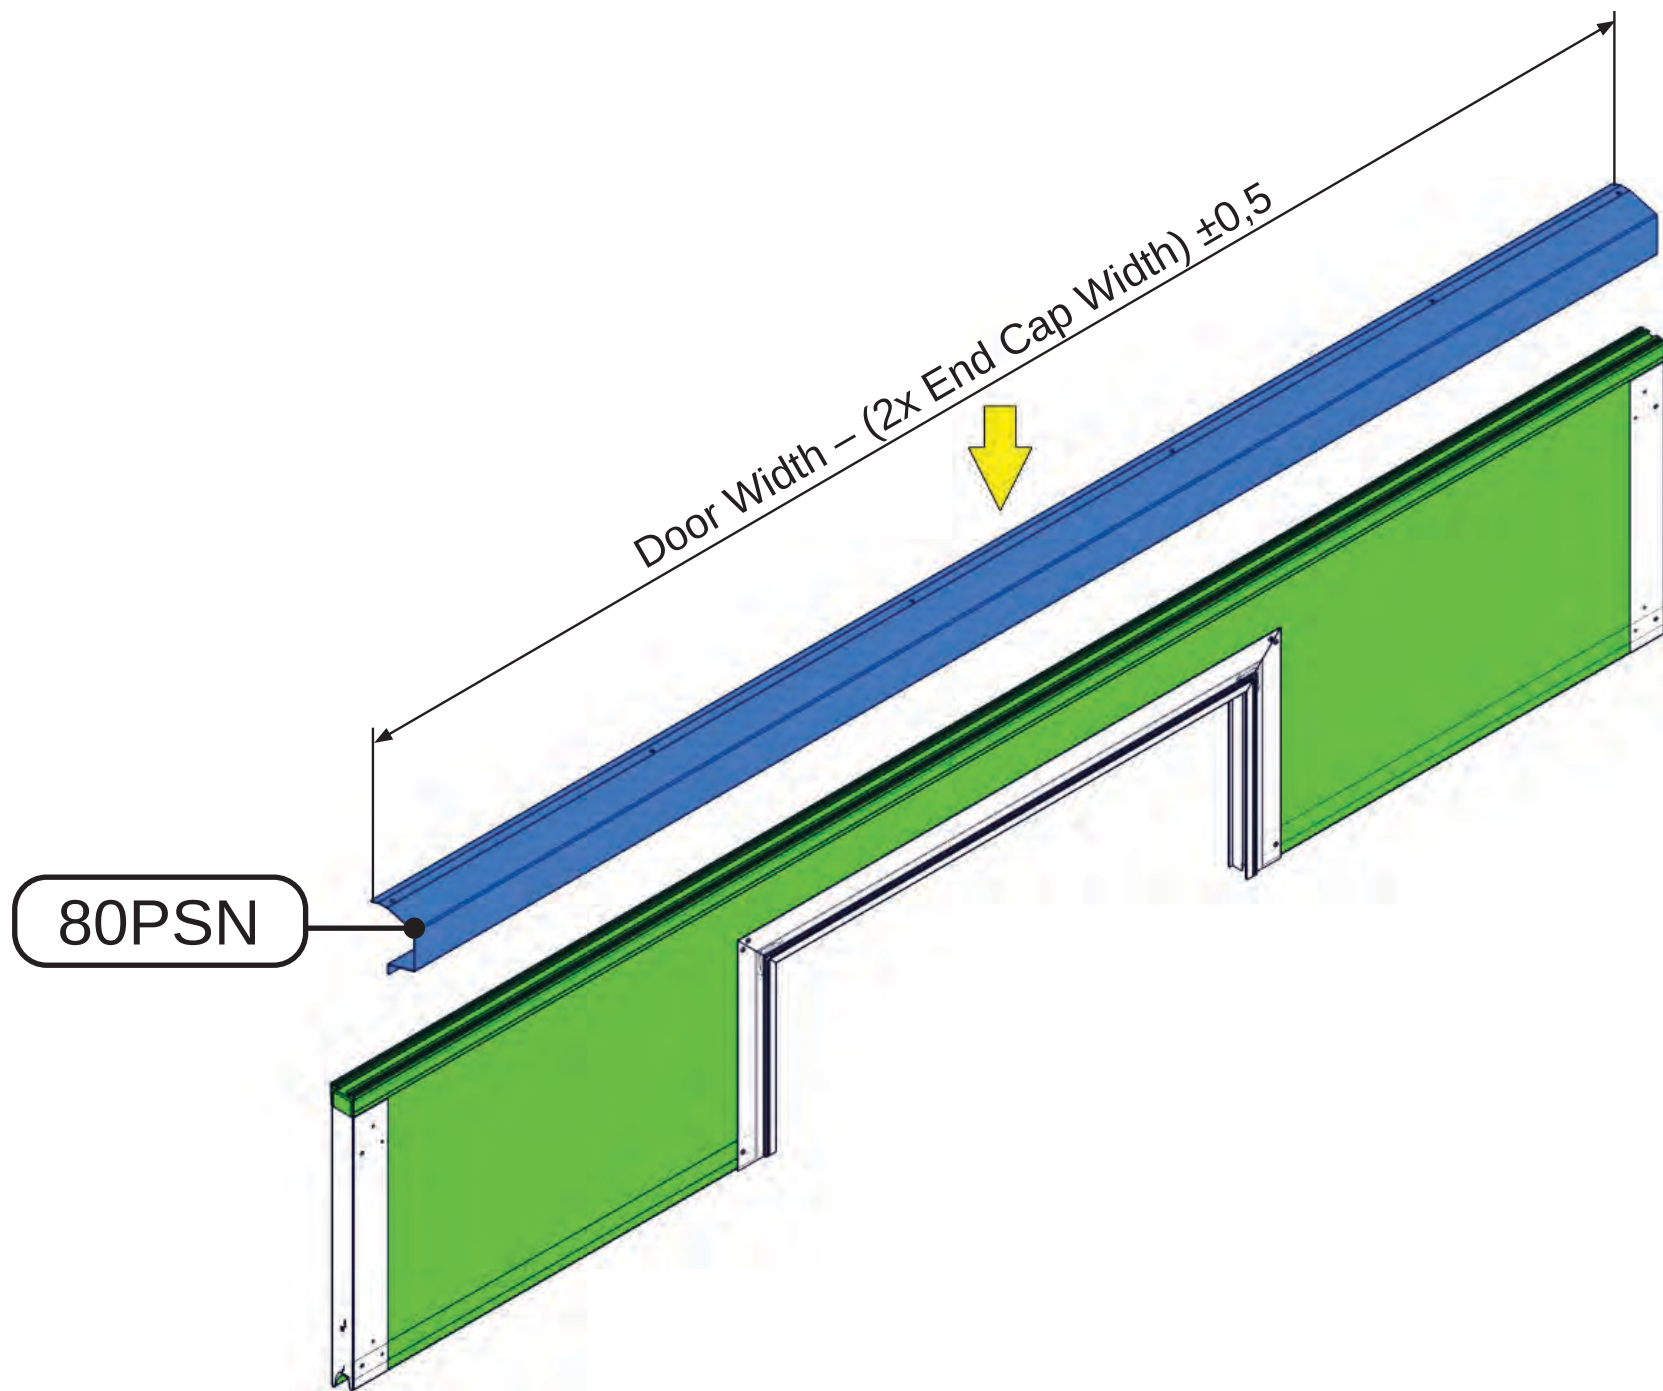


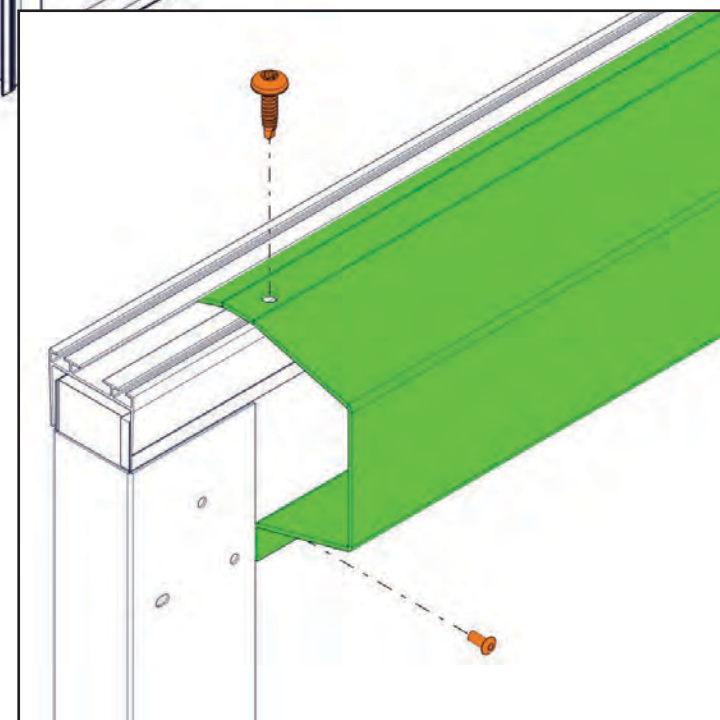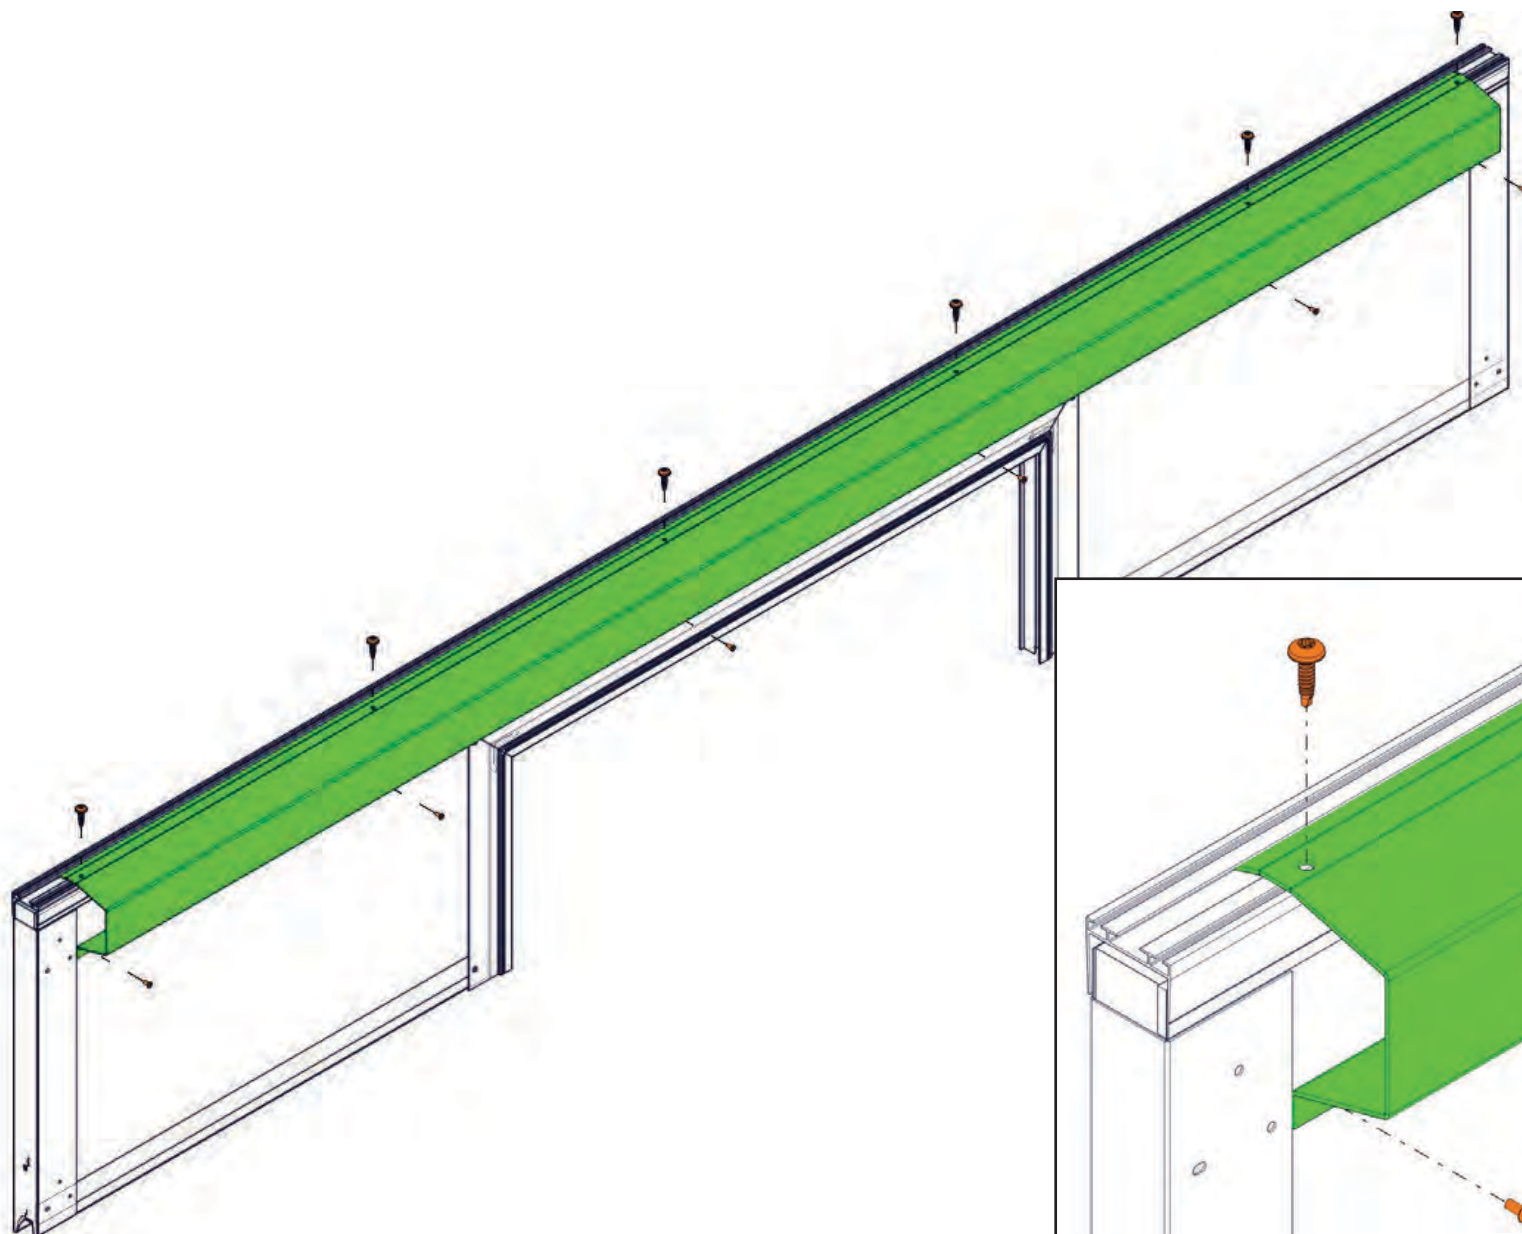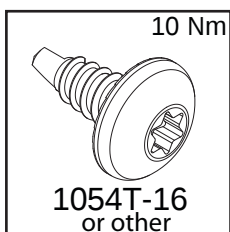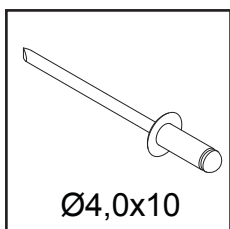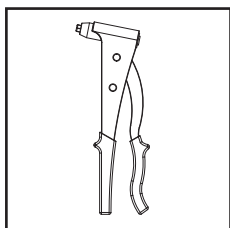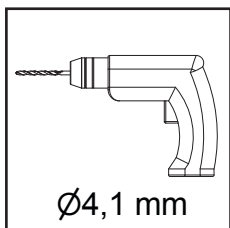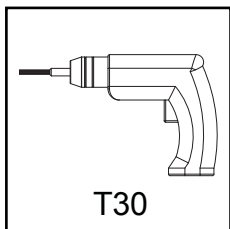







FF Installation manual


Door bottom section assembly instructions

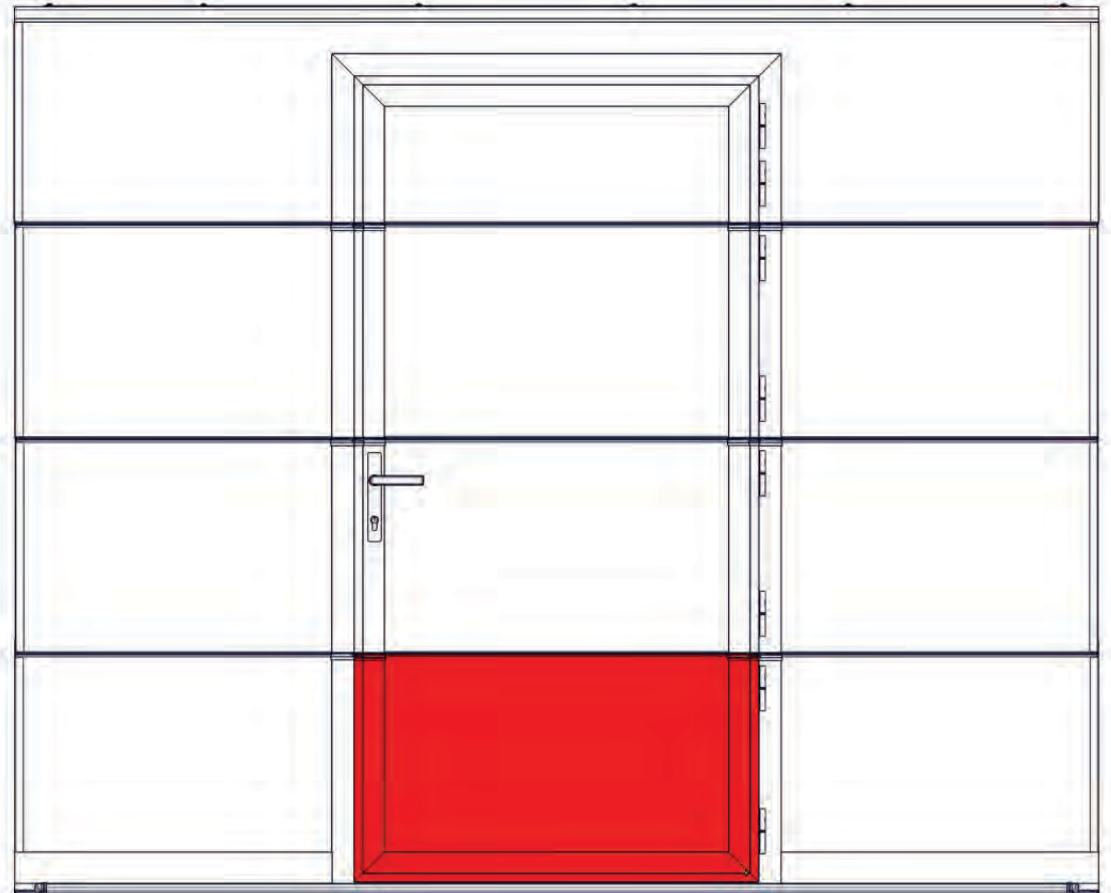


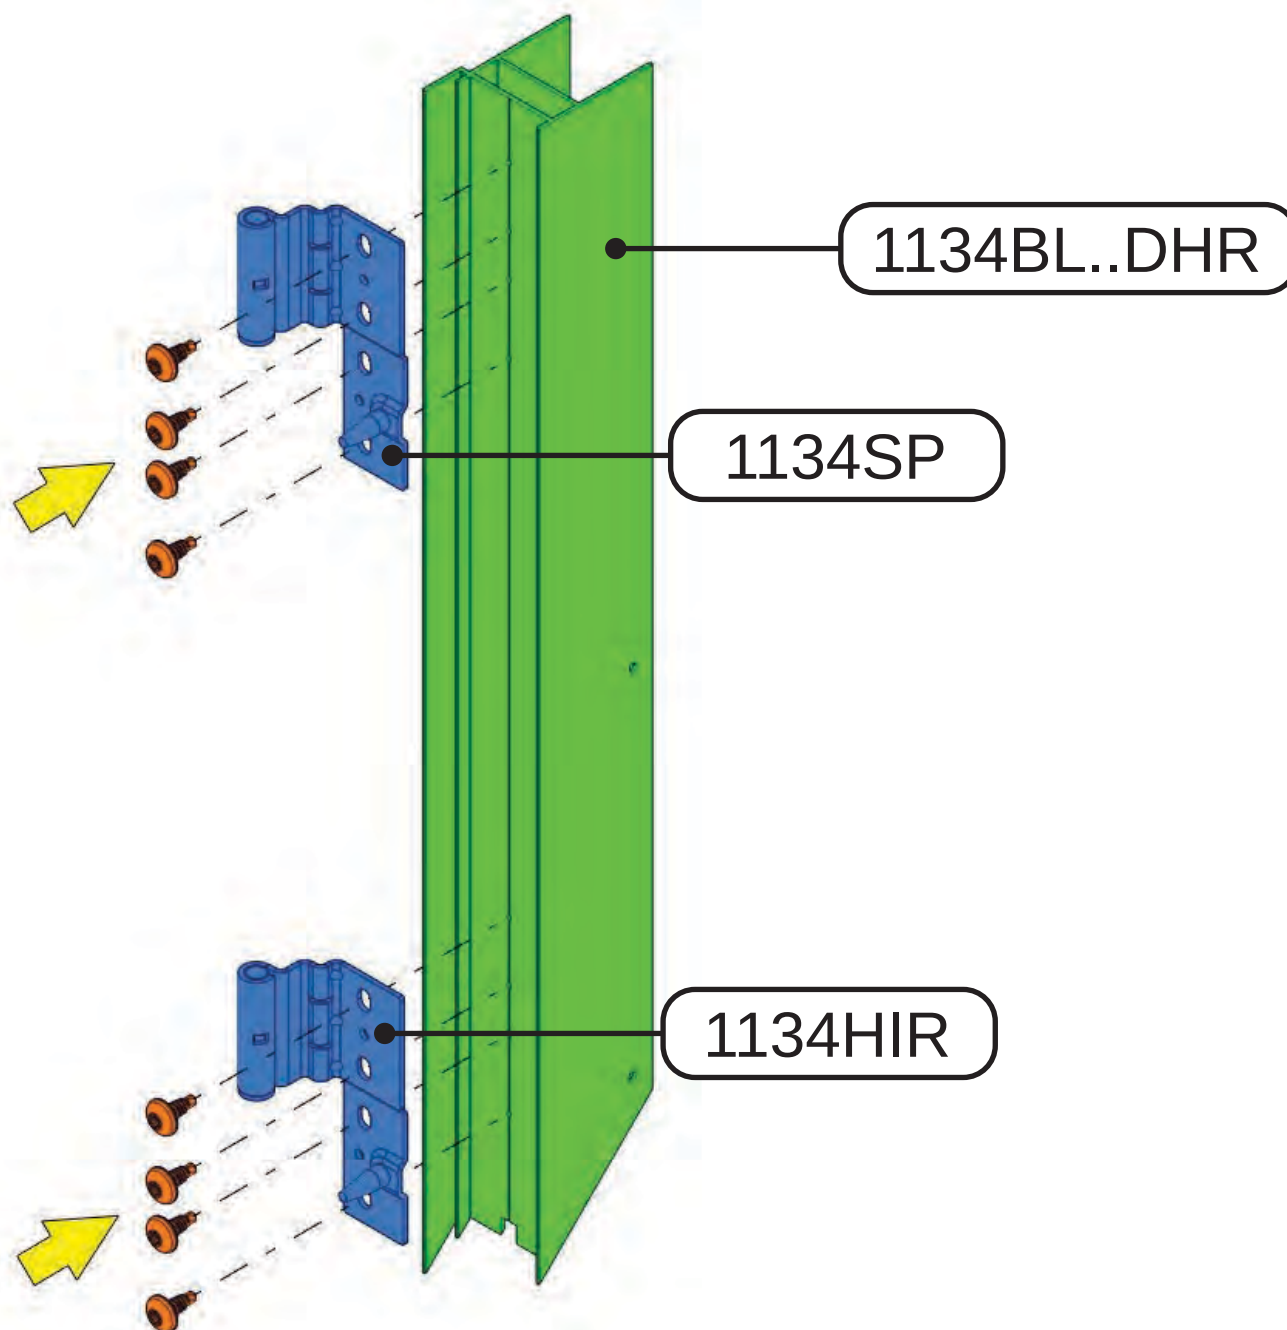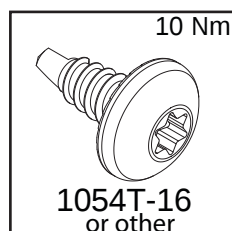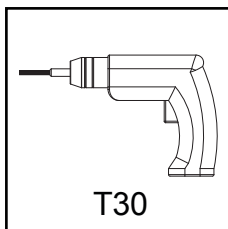

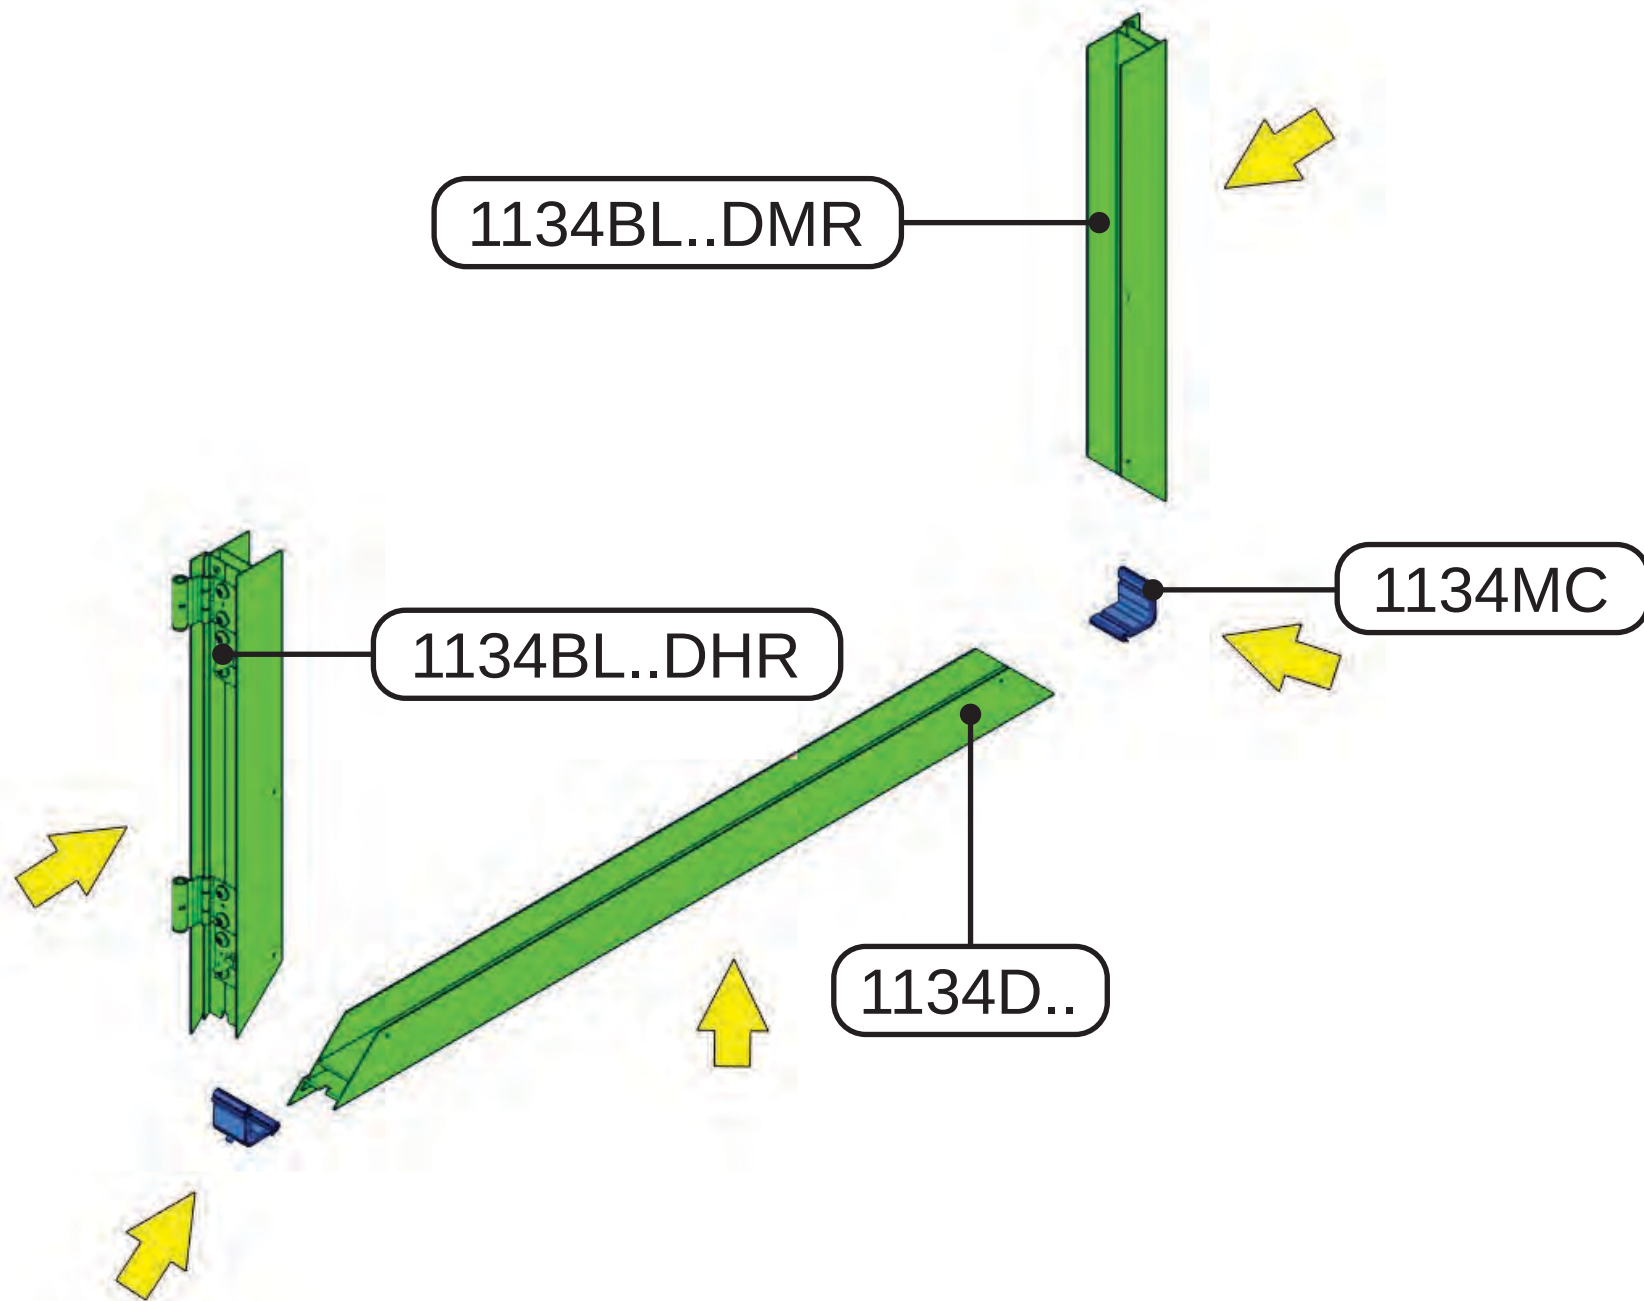

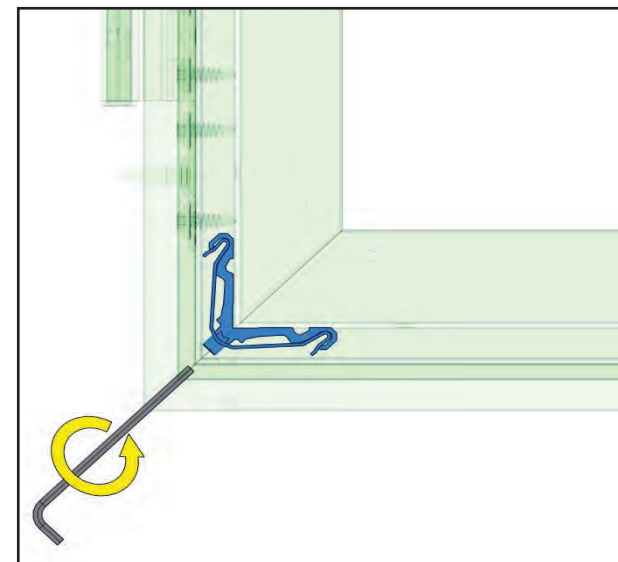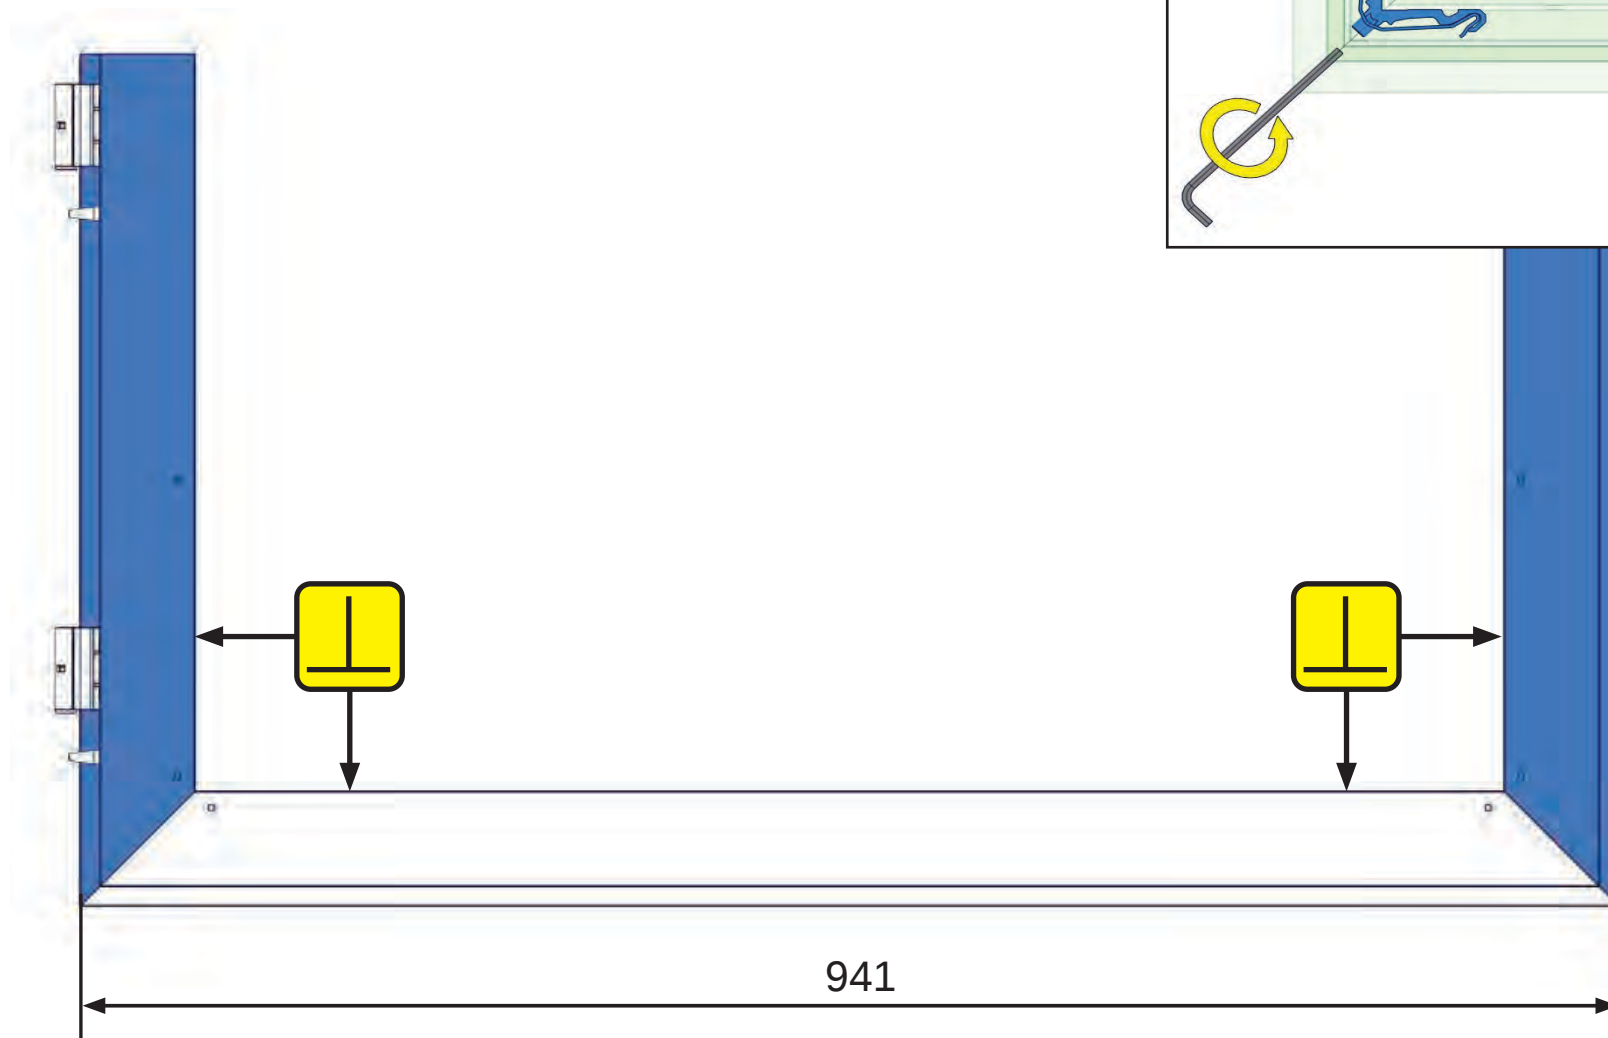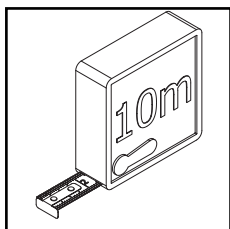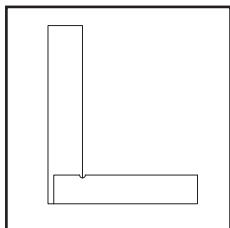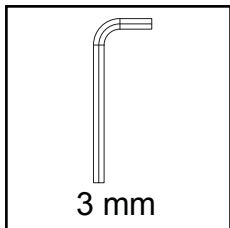



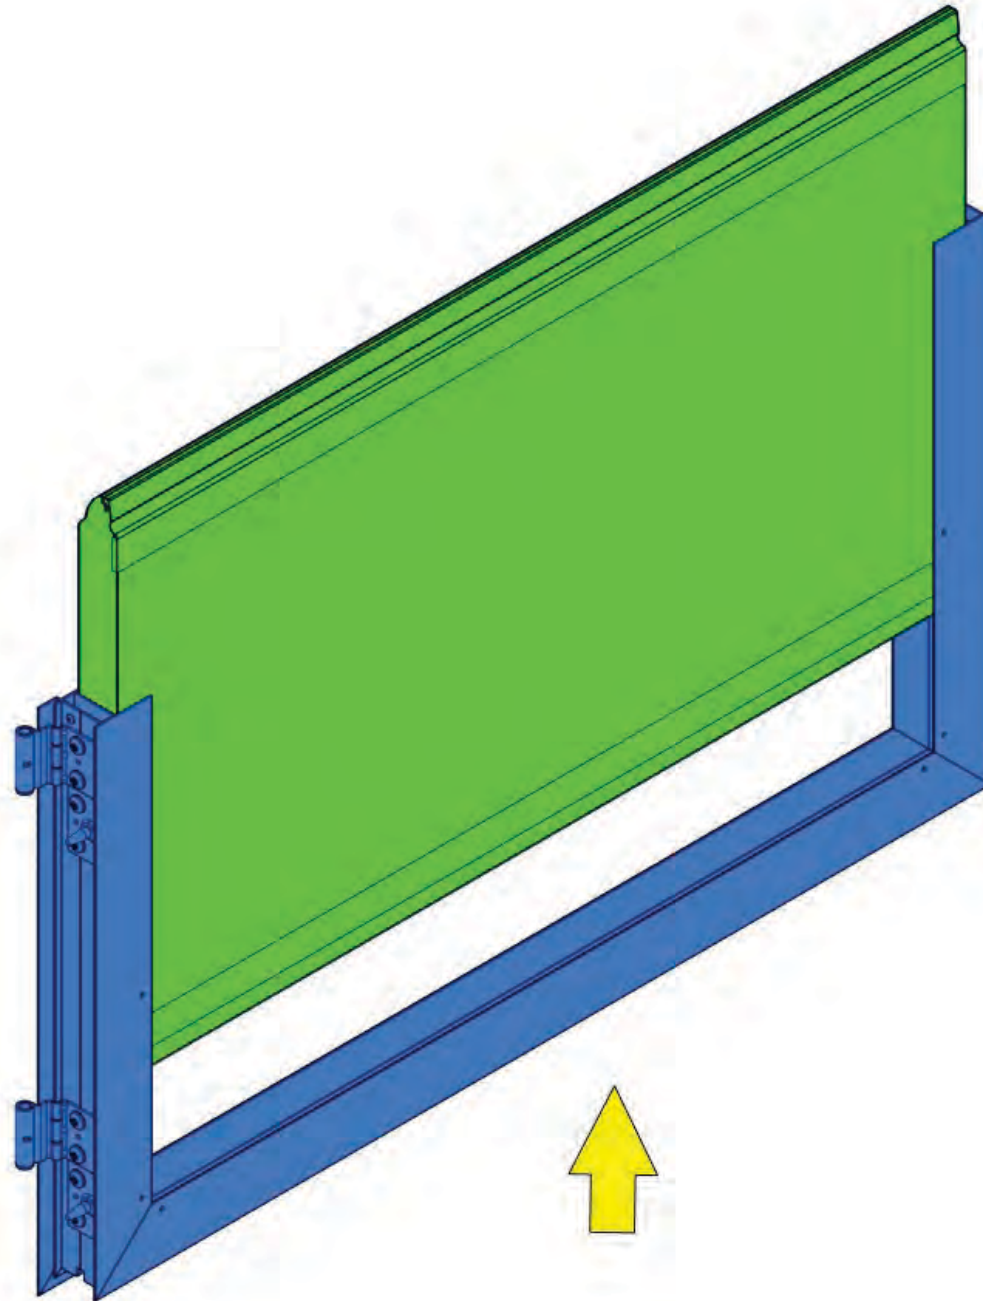






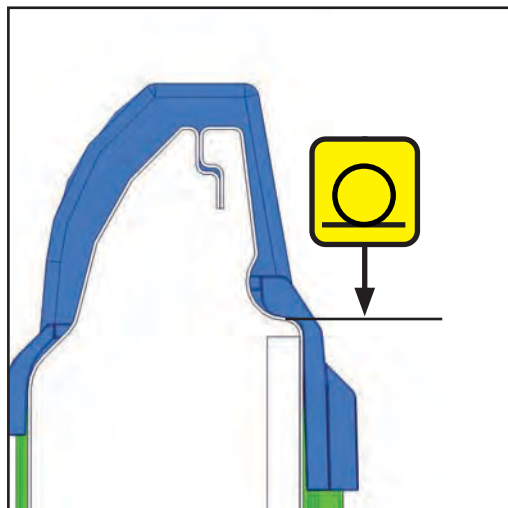









1134-C..-DL




1134-C..-DR

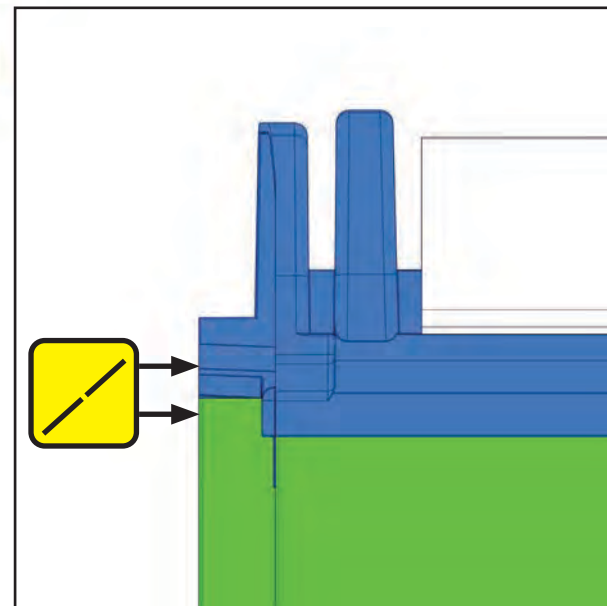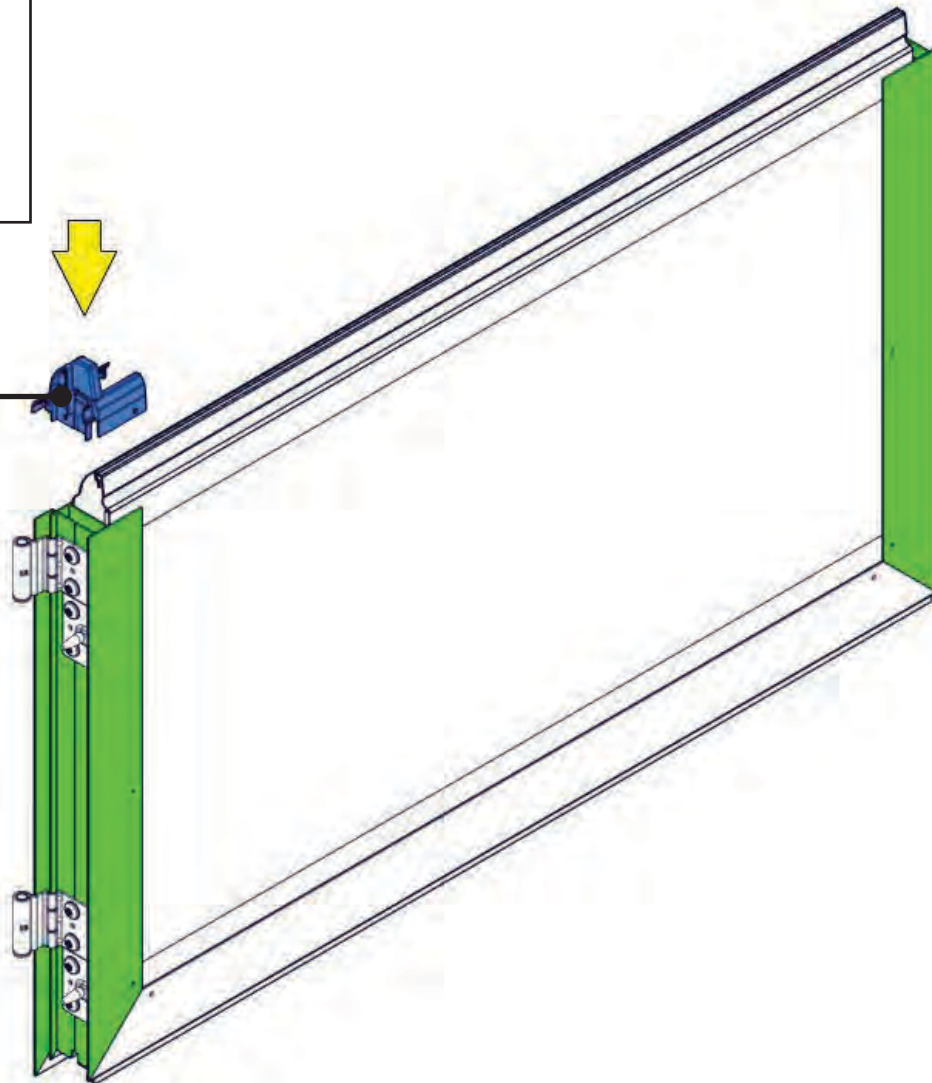



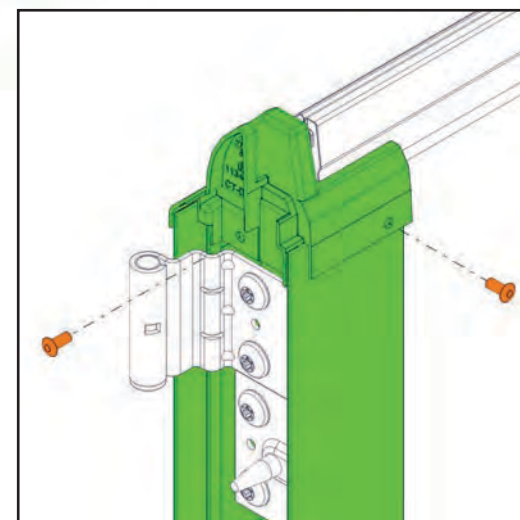
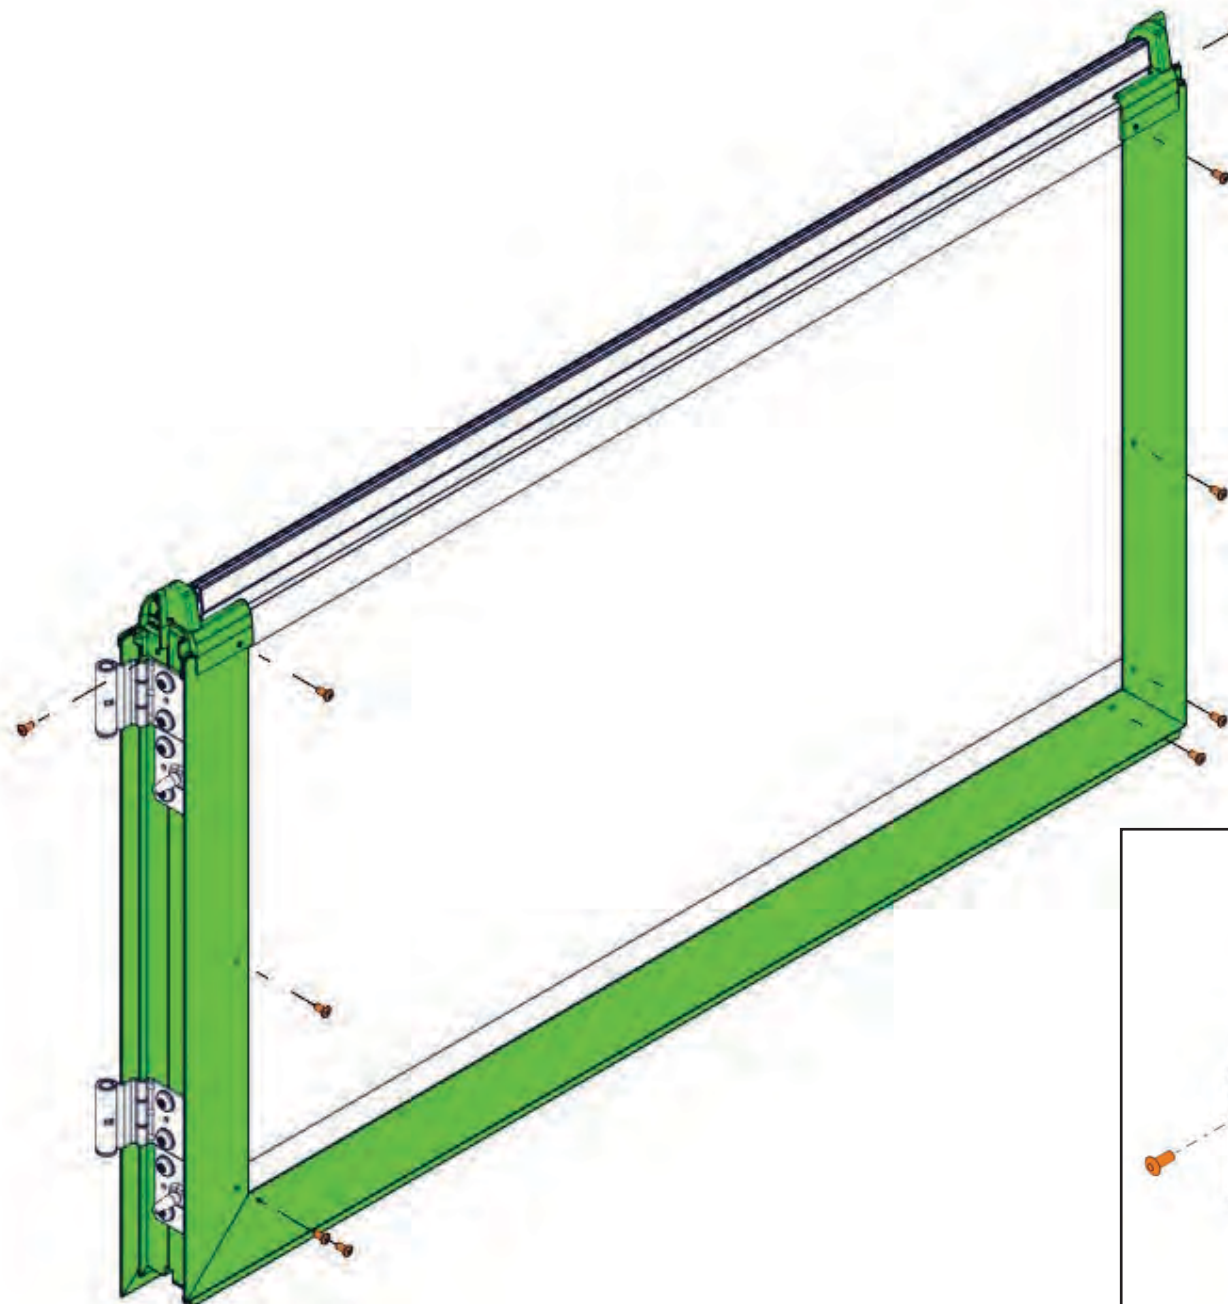
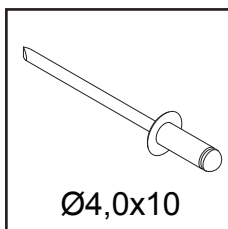
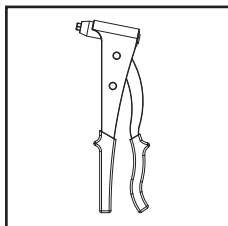
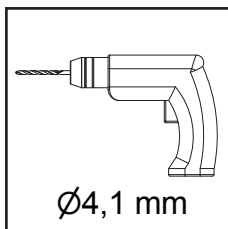


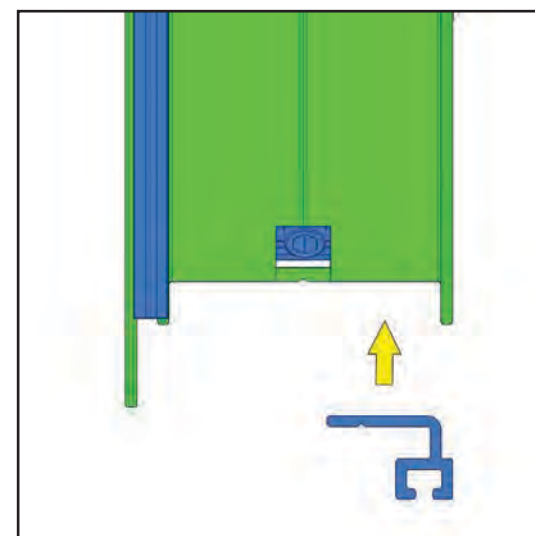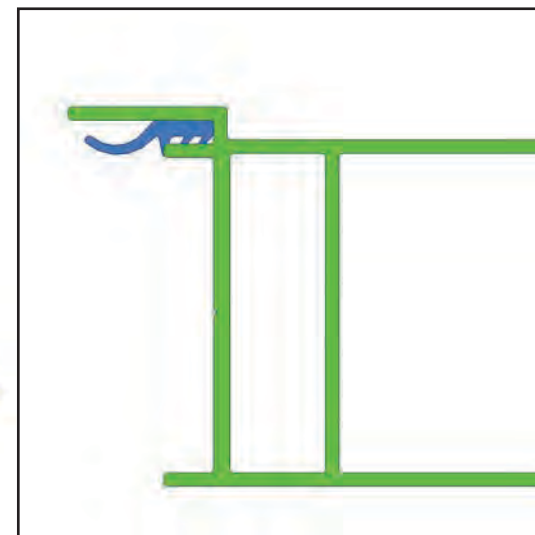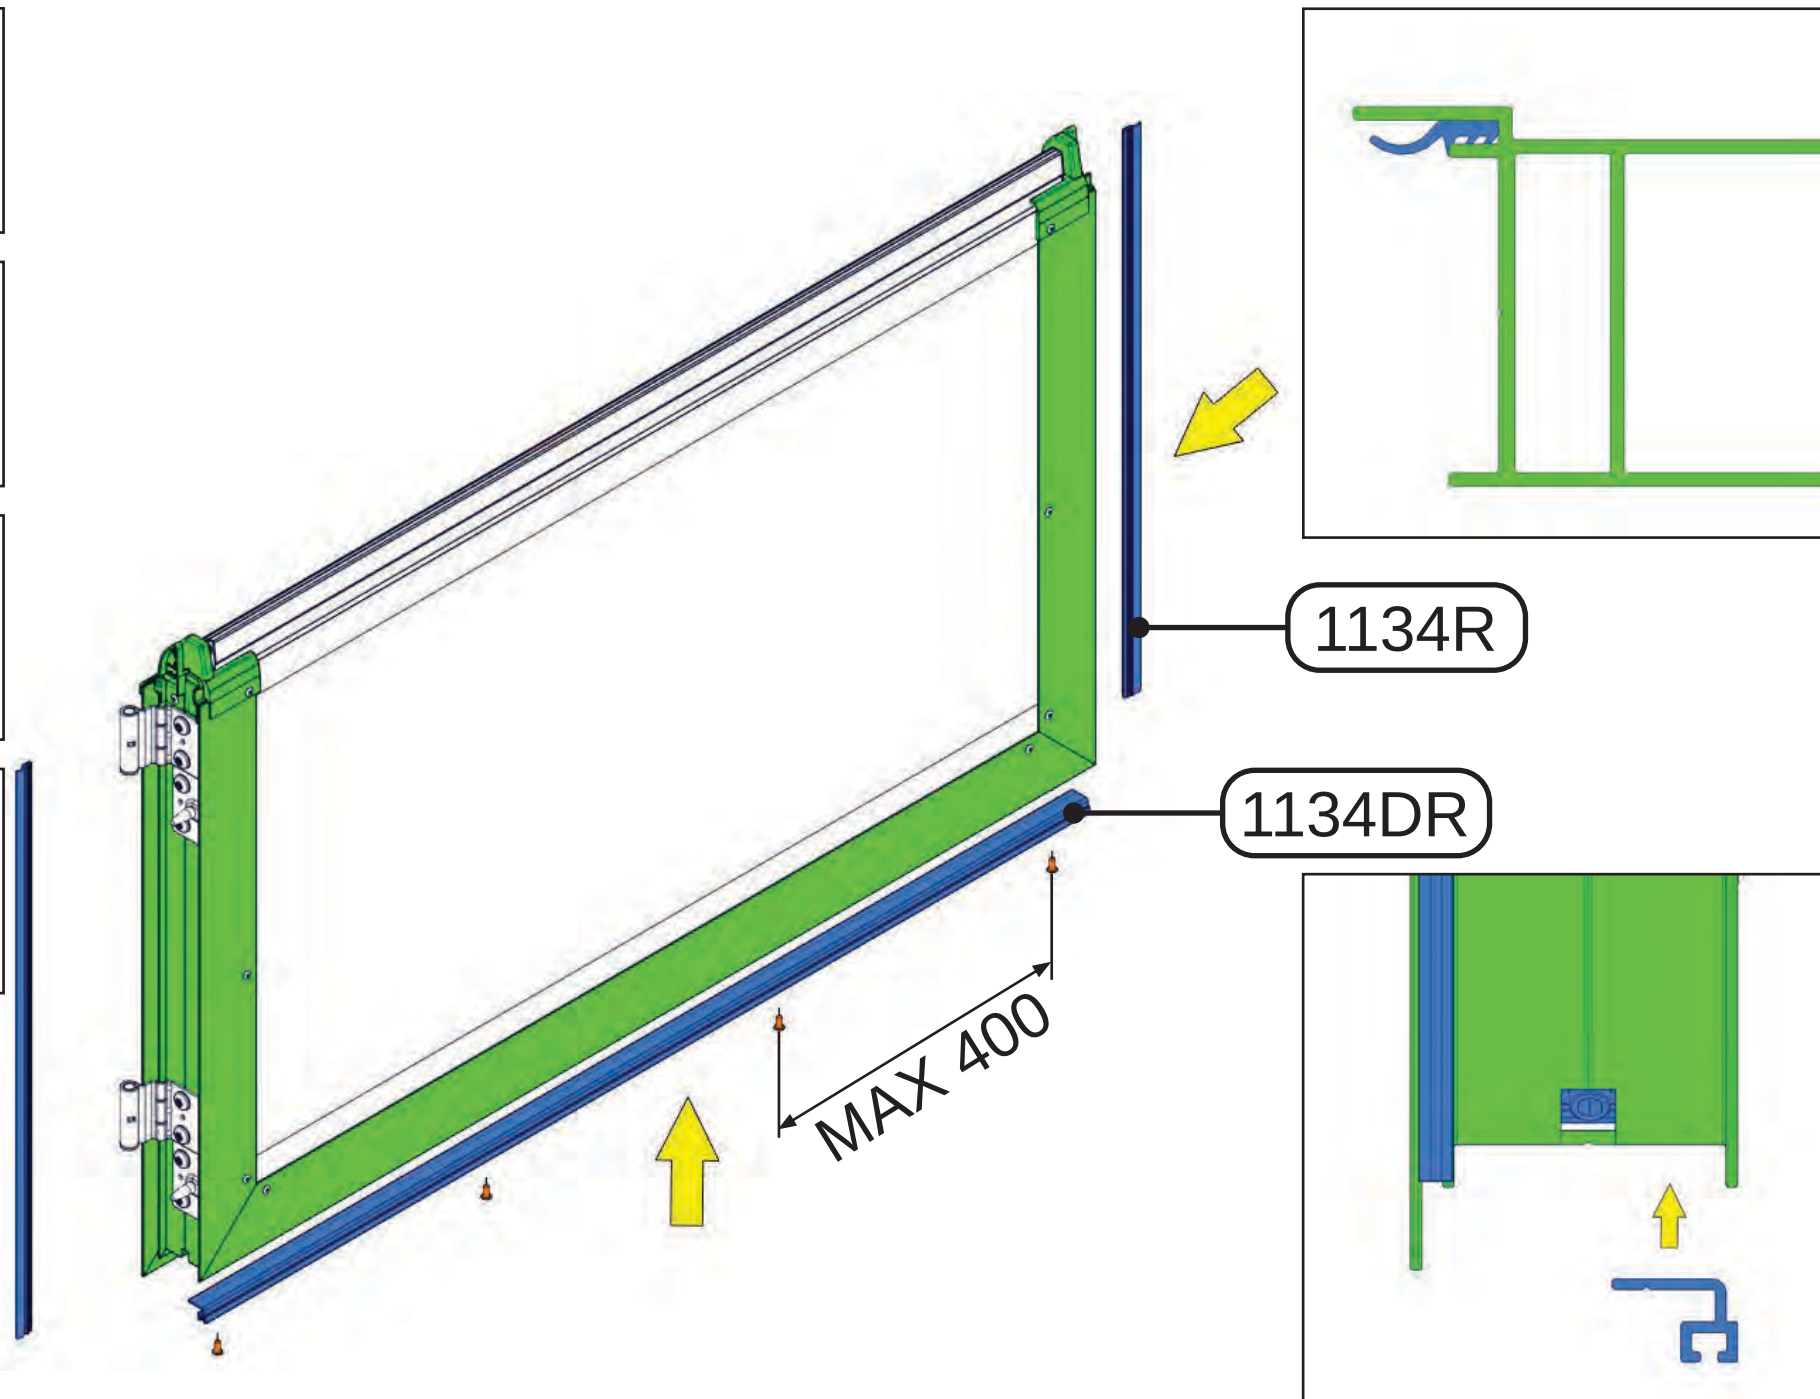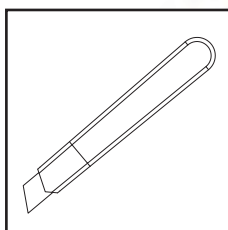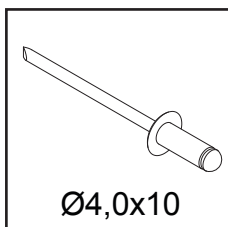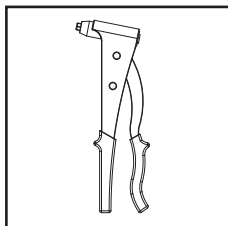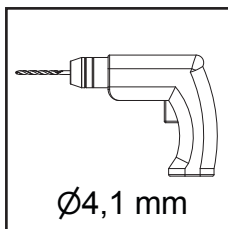

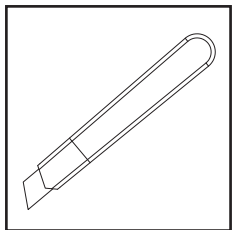

1033LBR

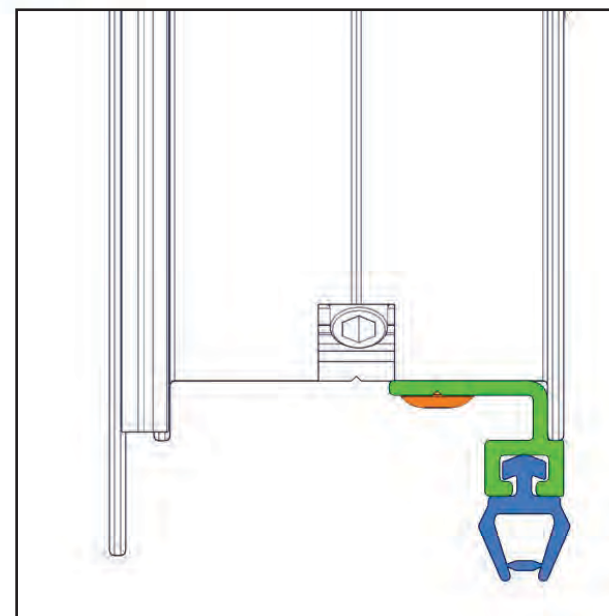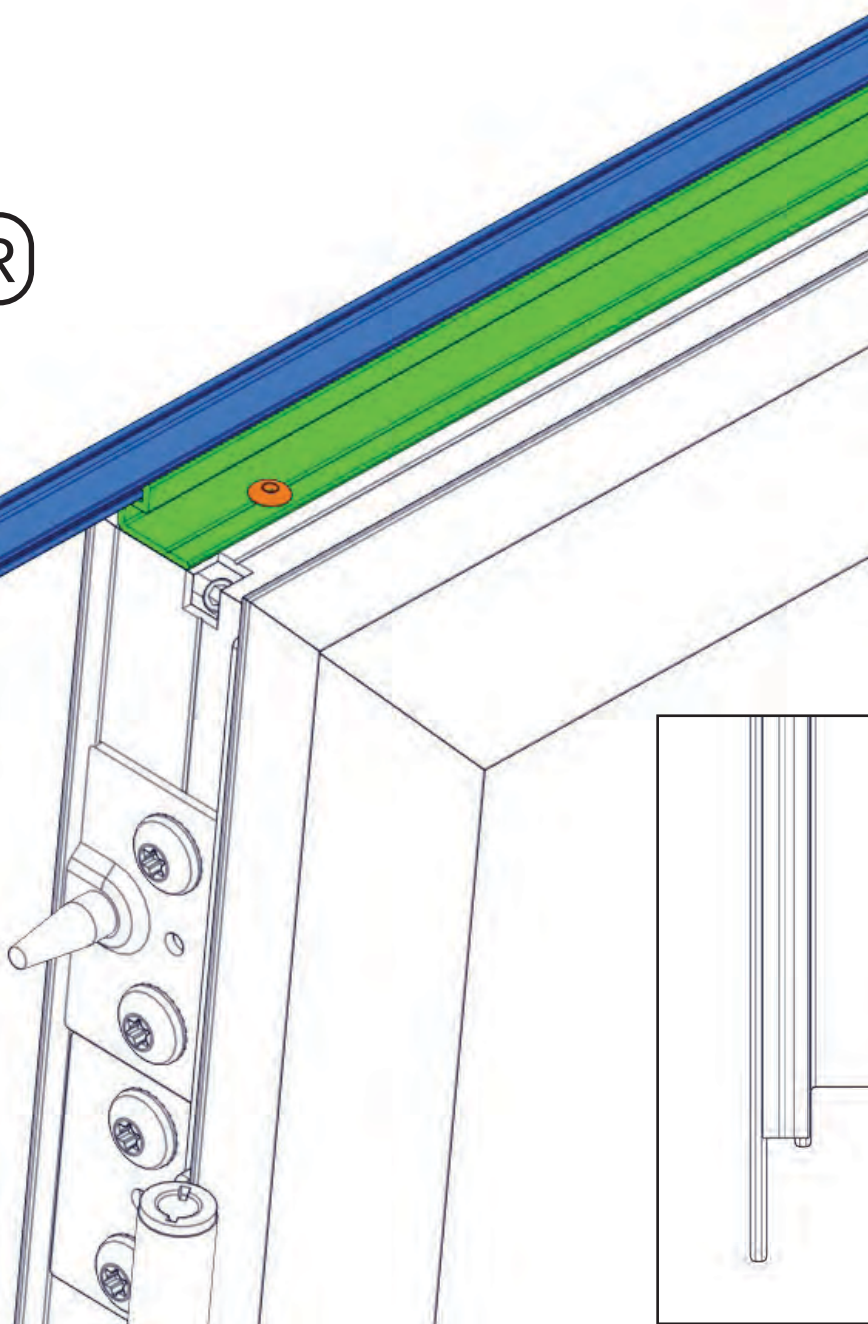


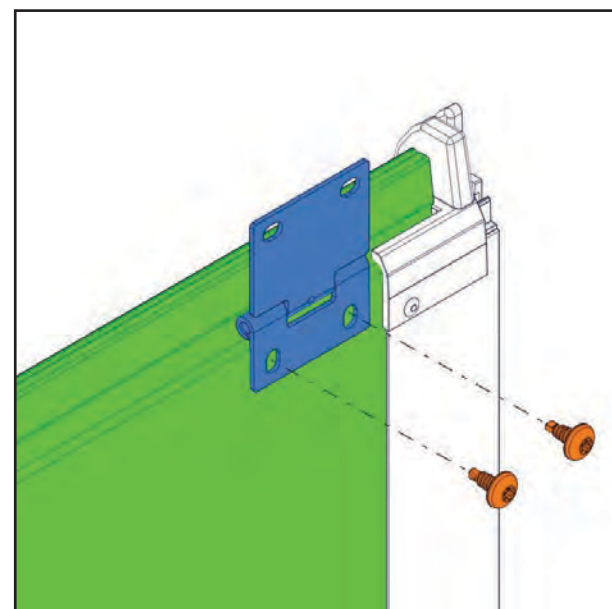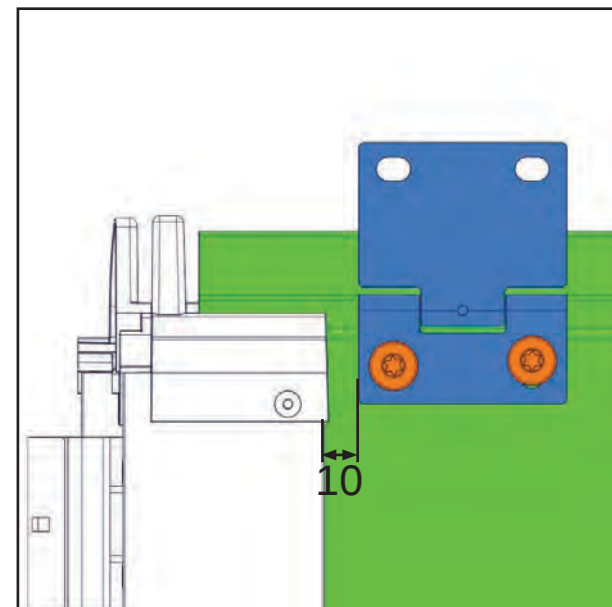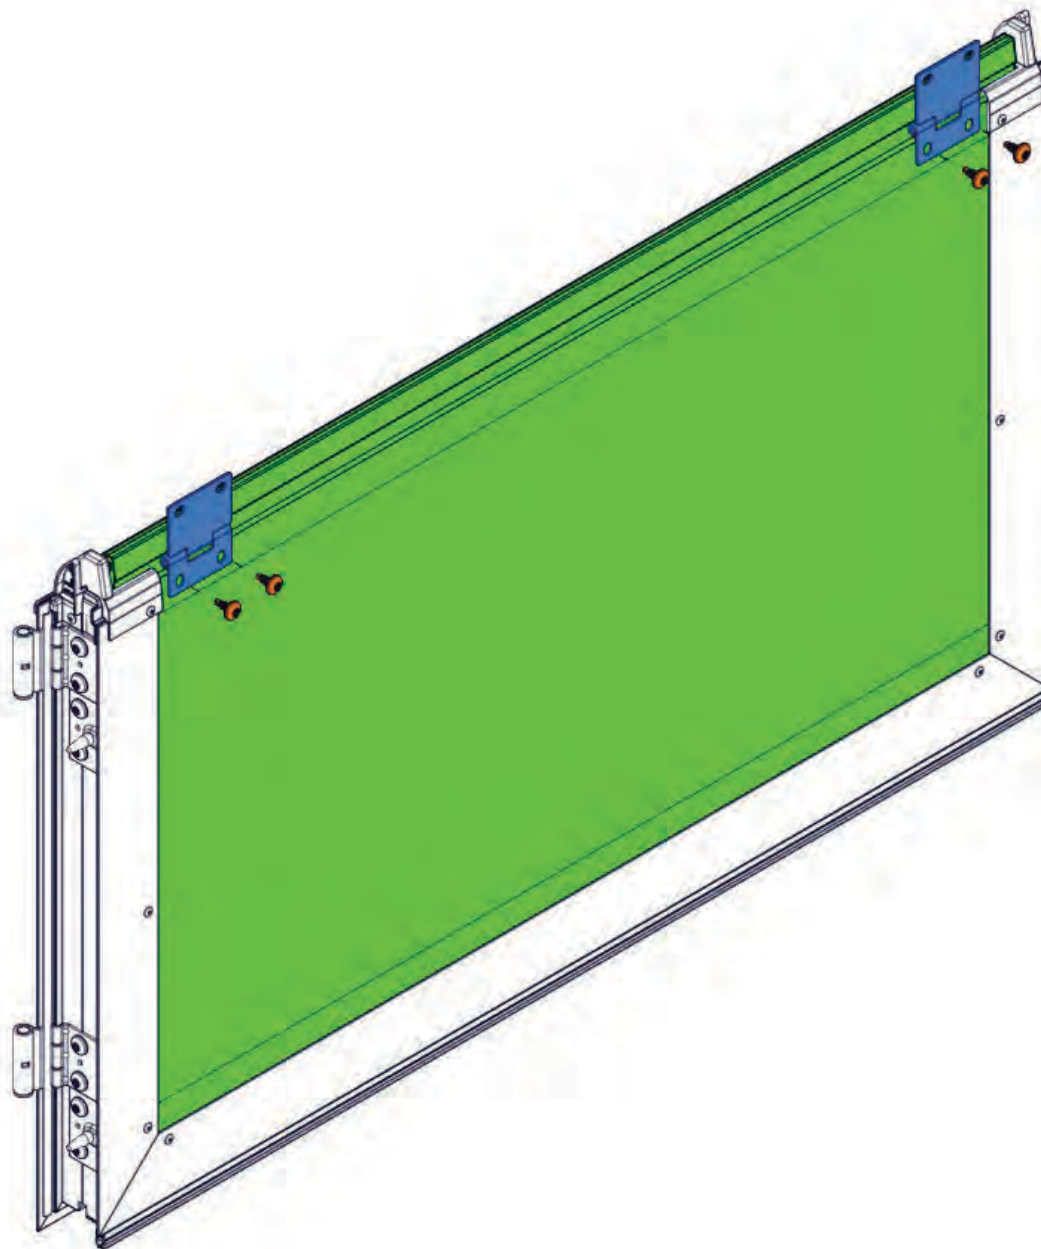
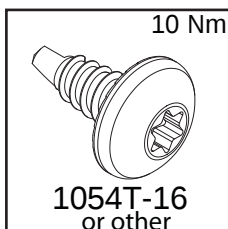
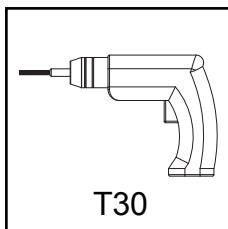




! See optional gauge on page 24


Door middle sections

assembly instructions

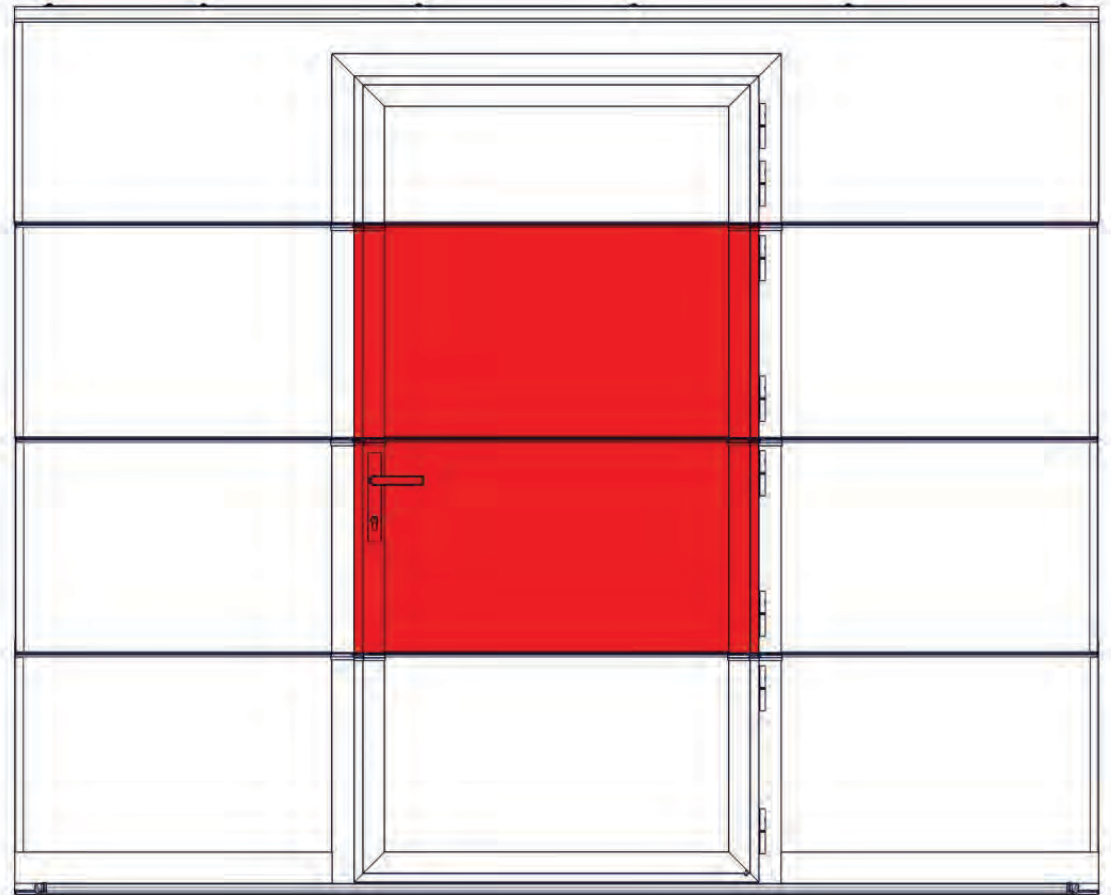

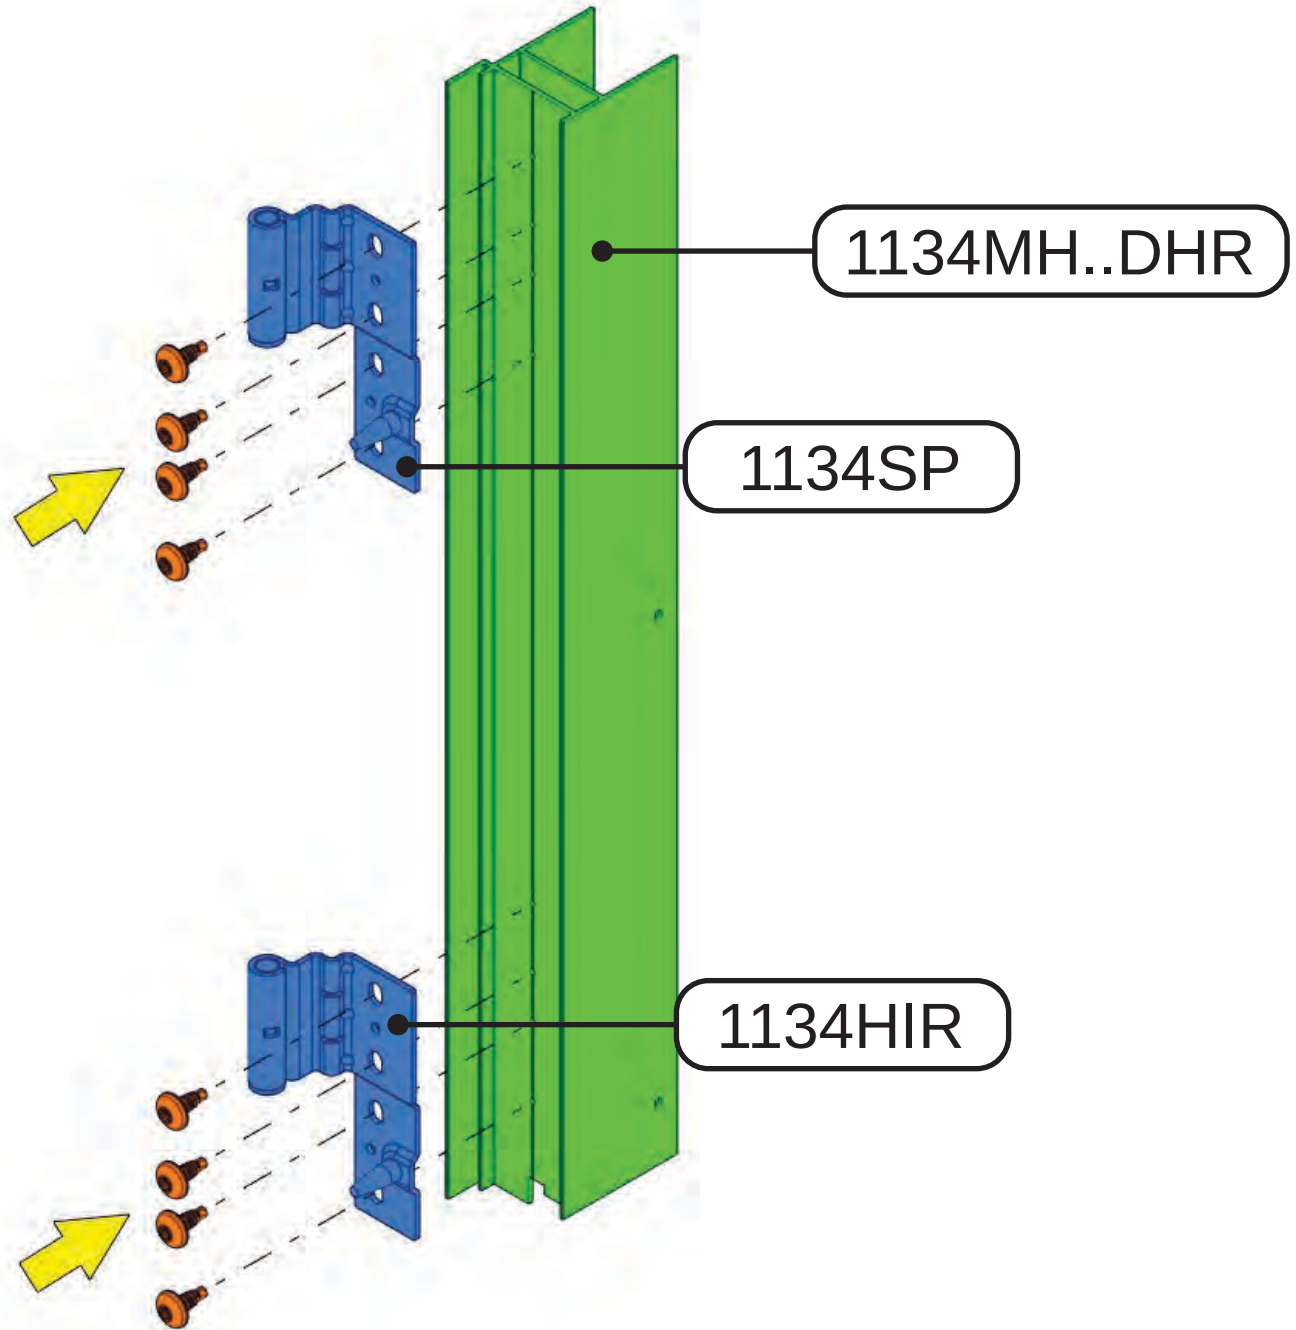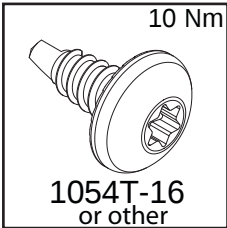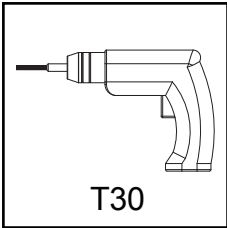

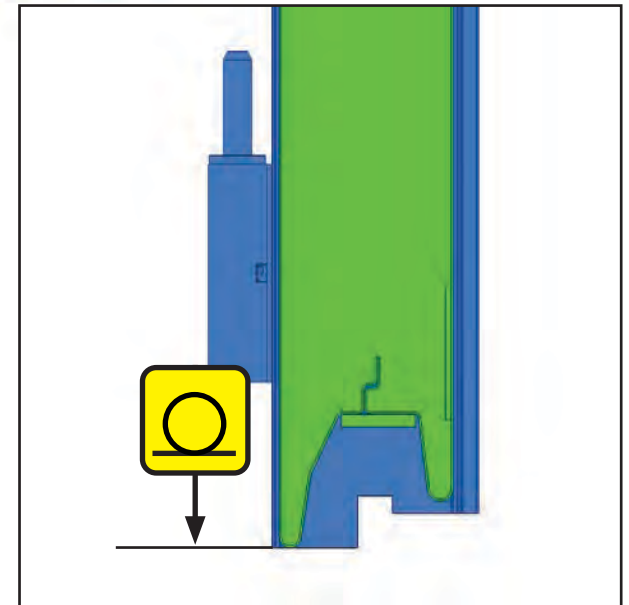
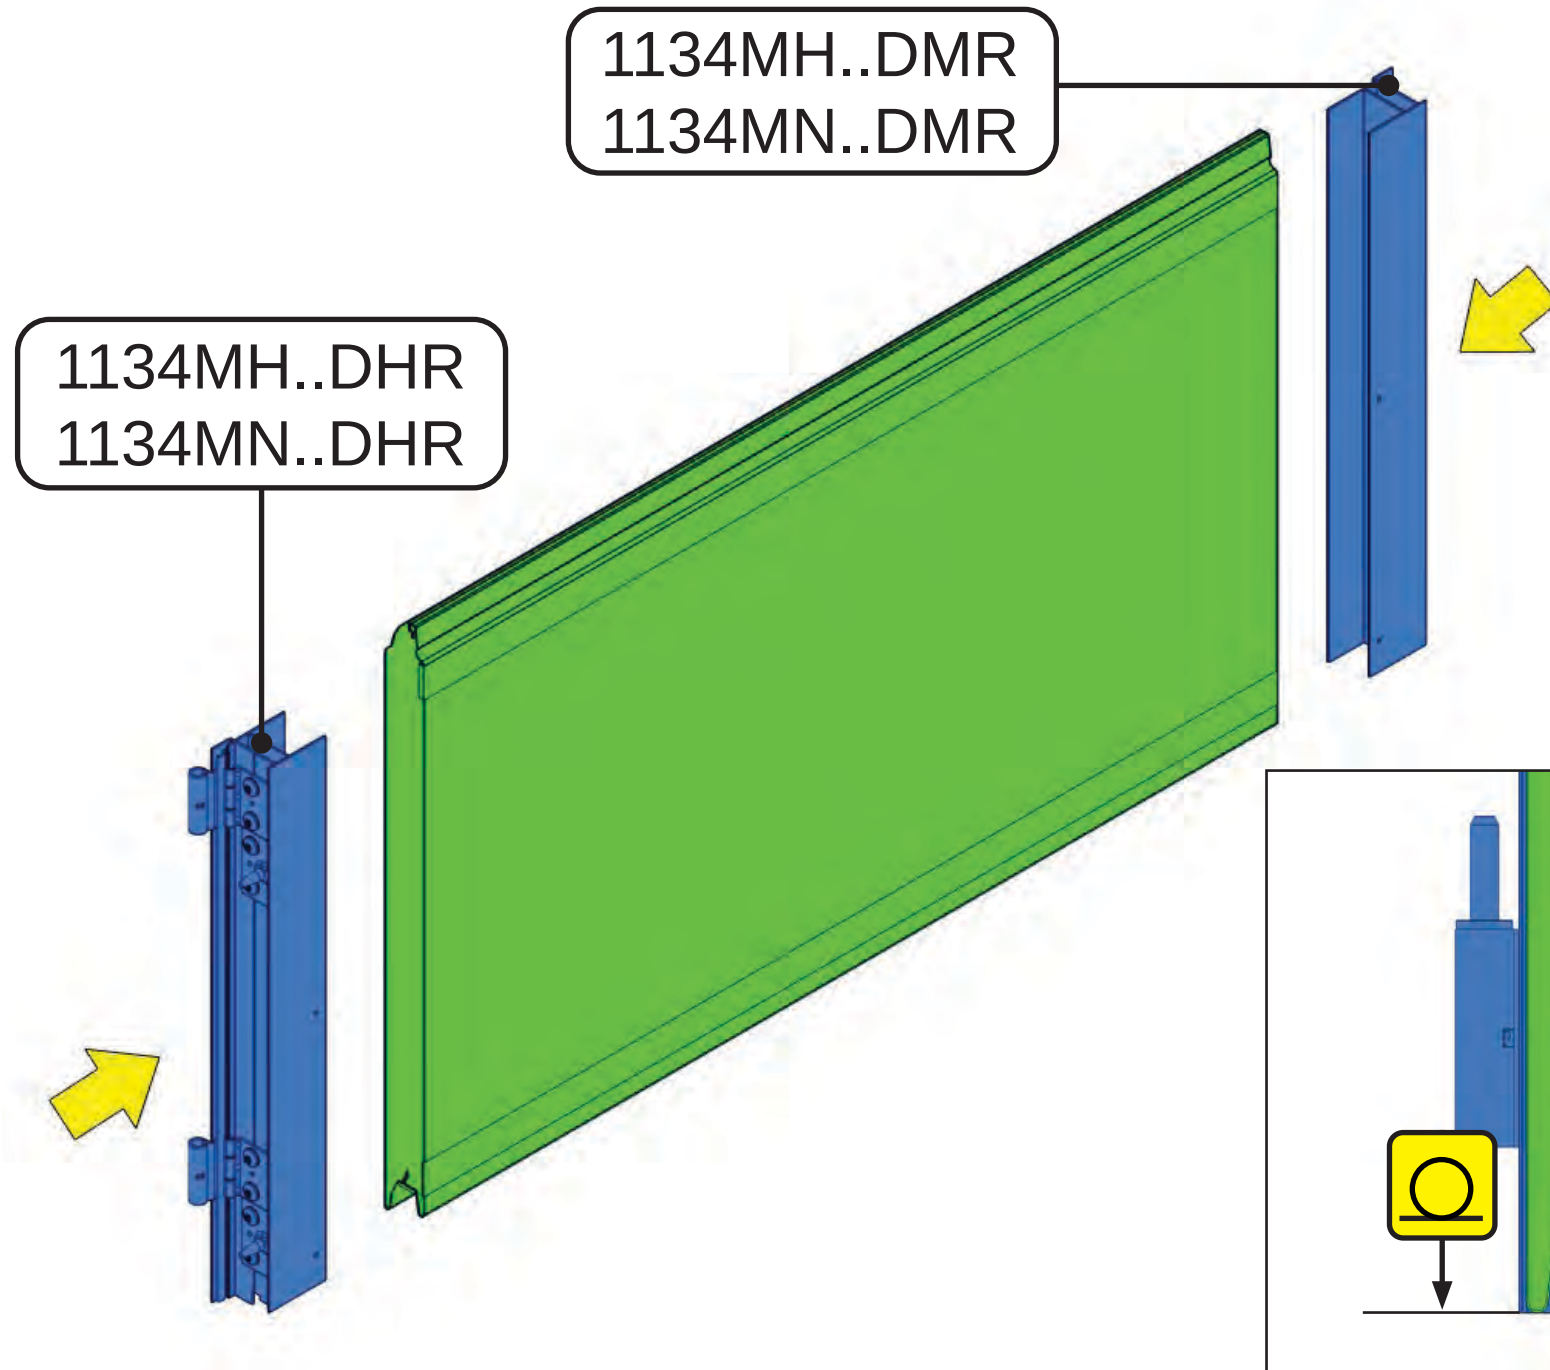




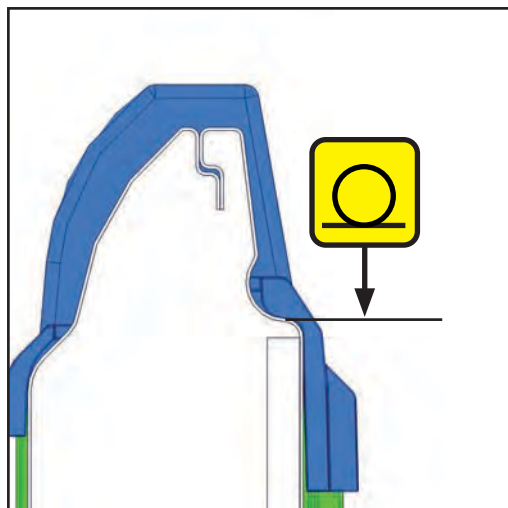







1134-C..-DR











1134-C..-DL

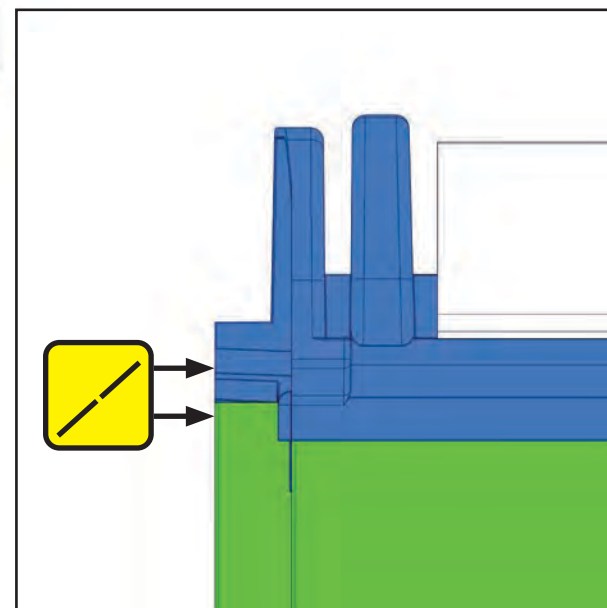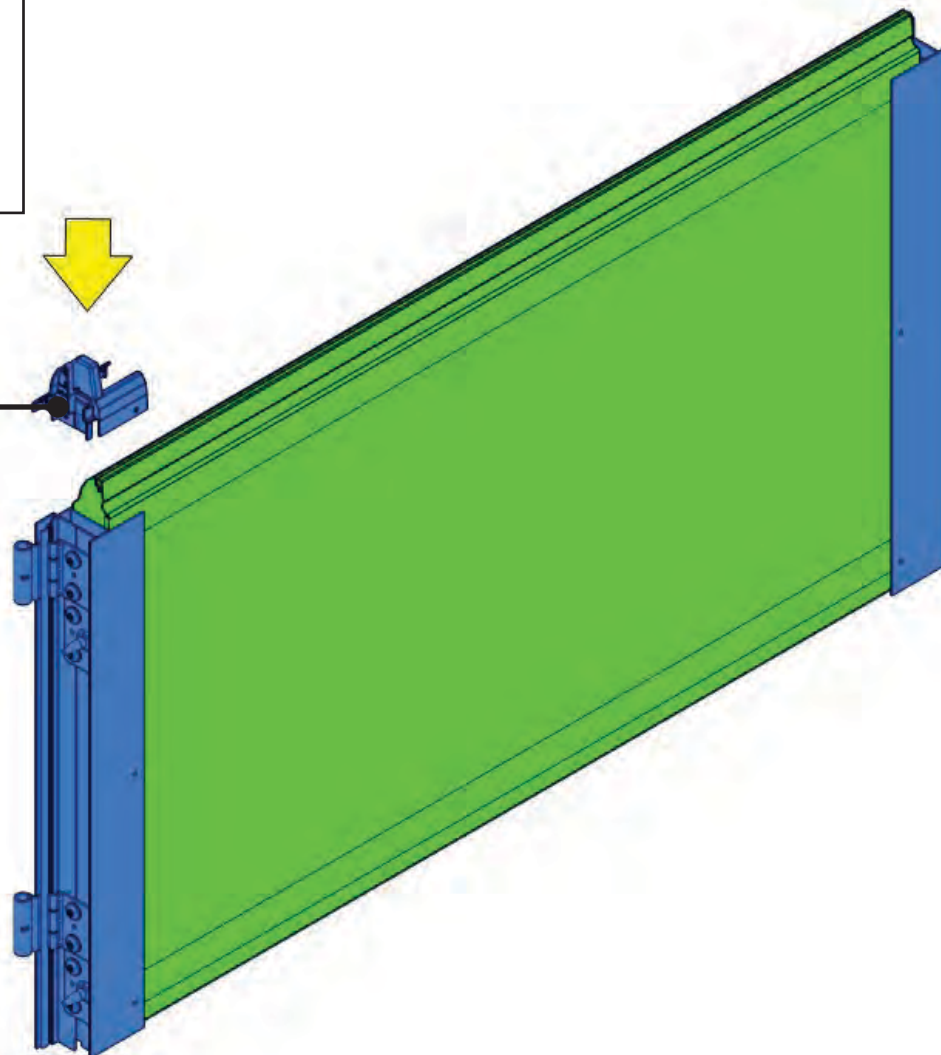

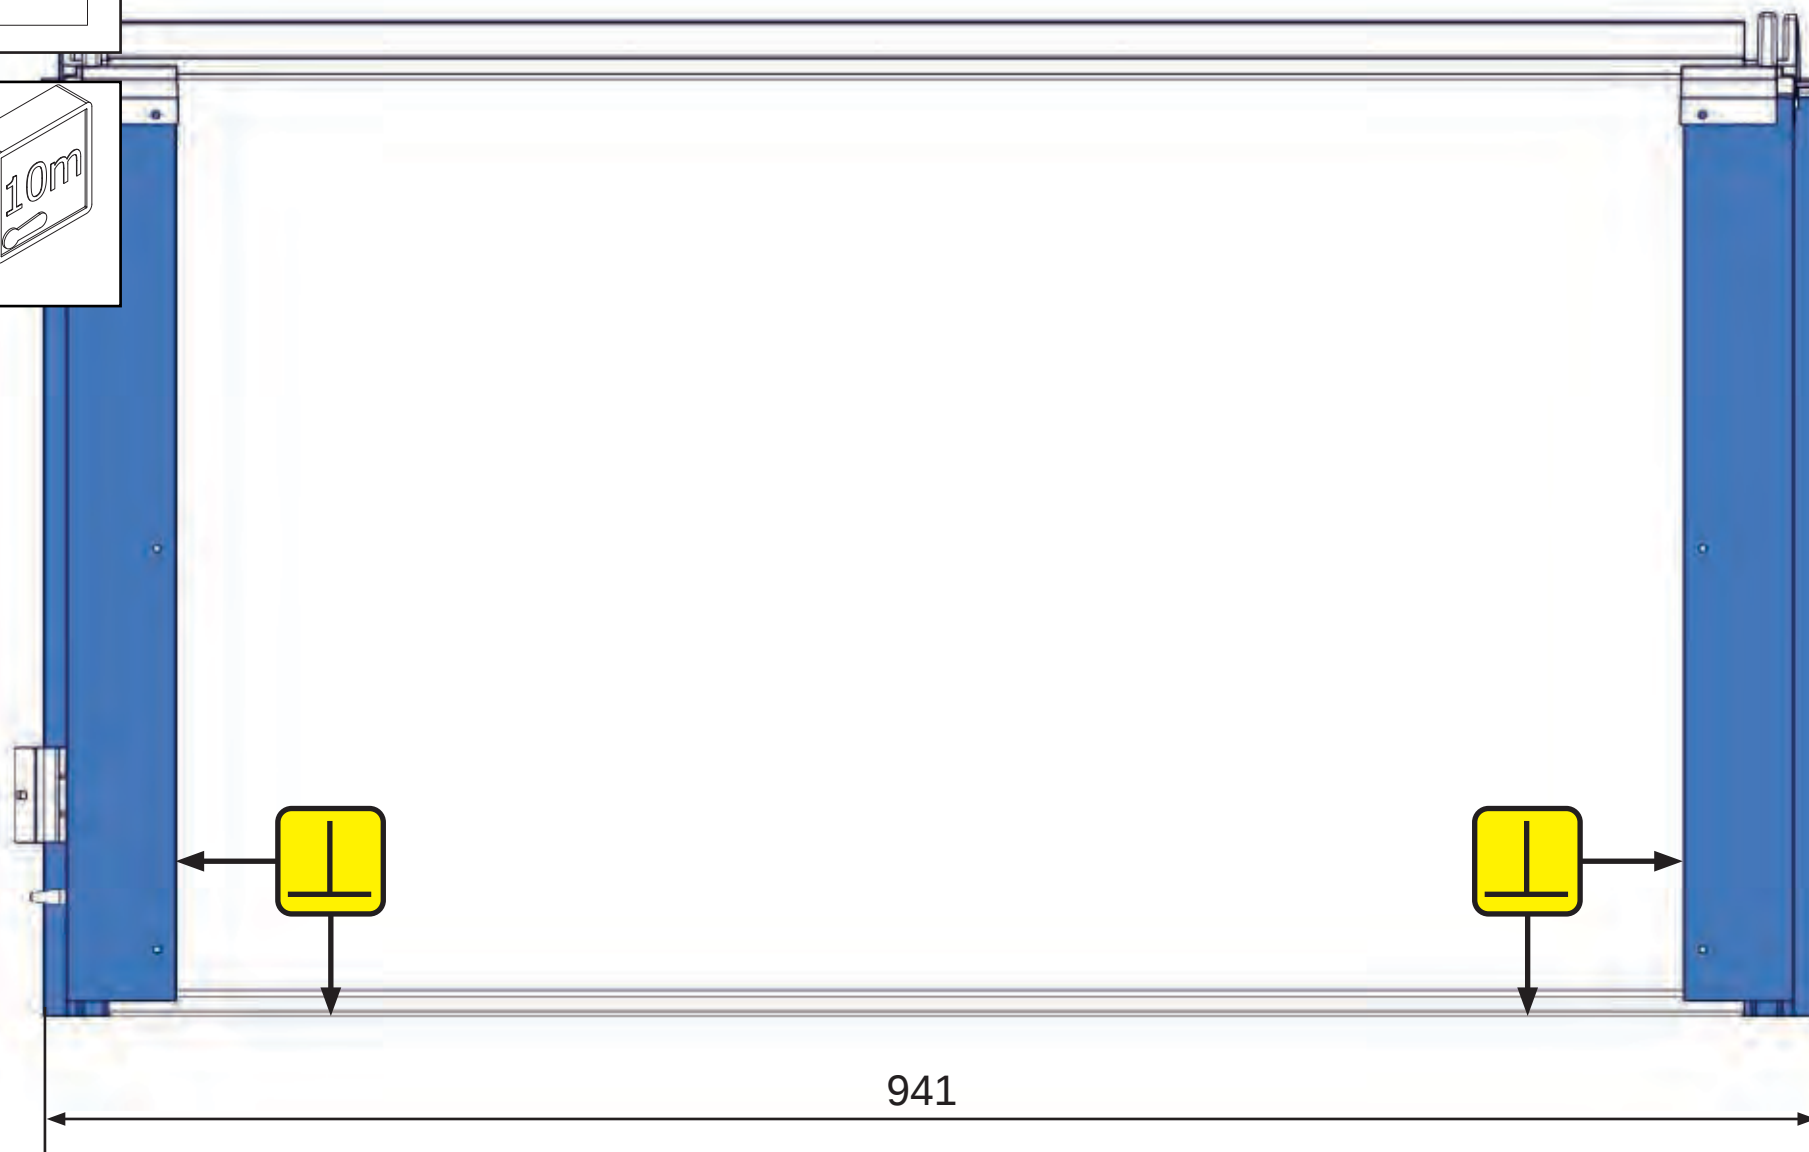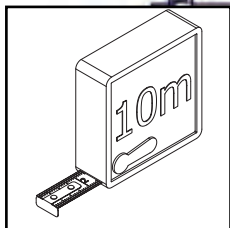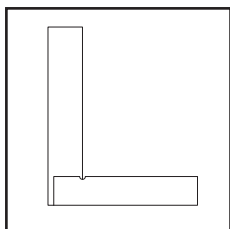

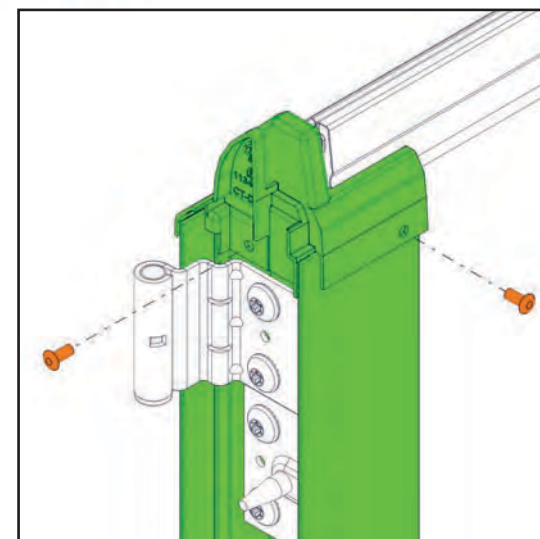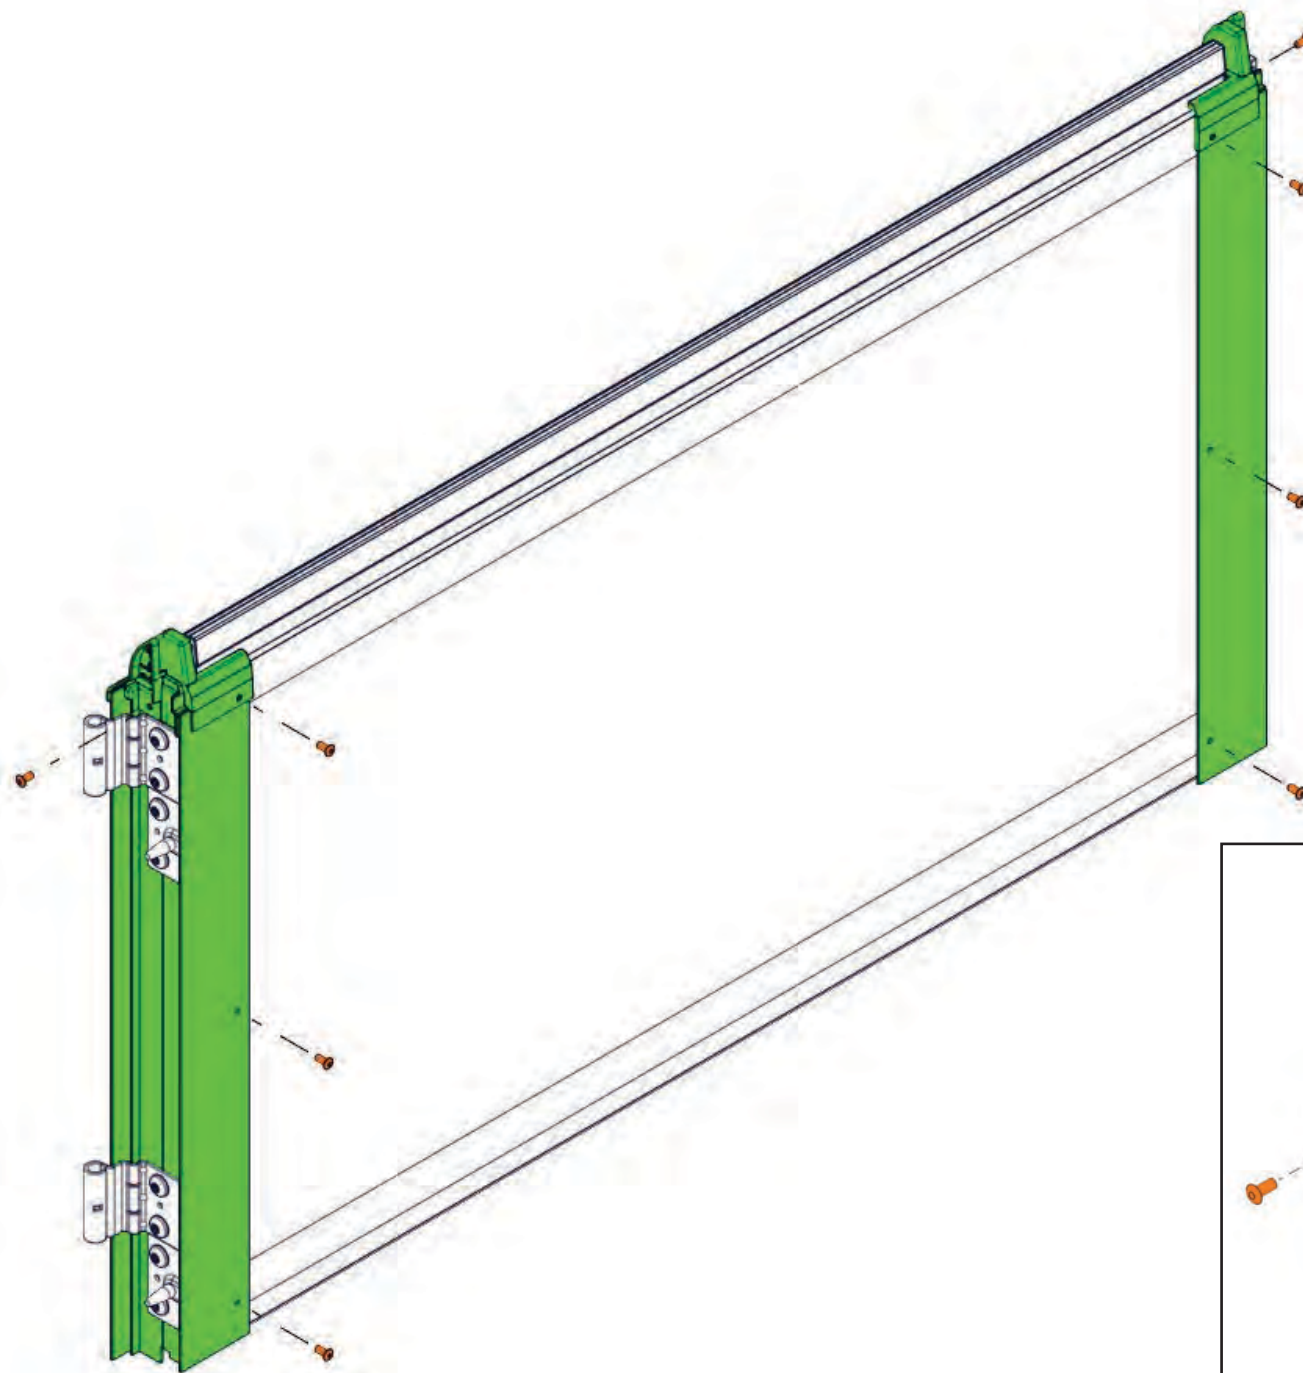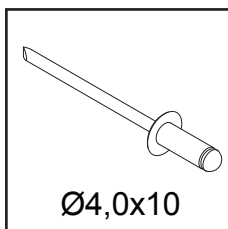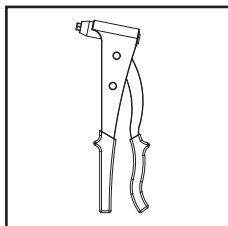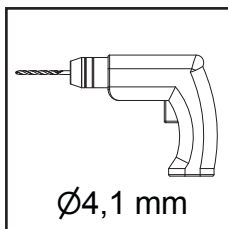

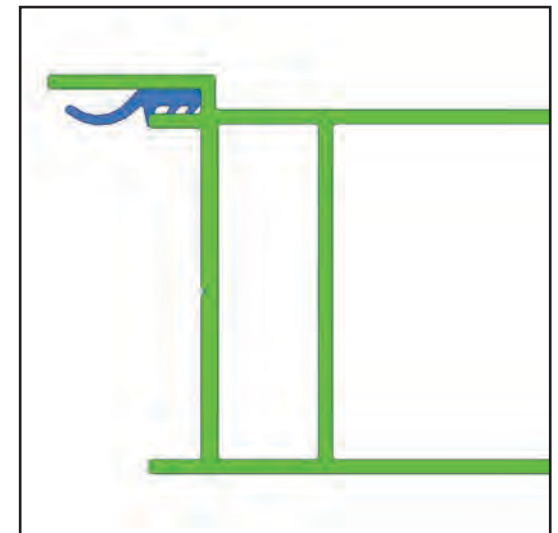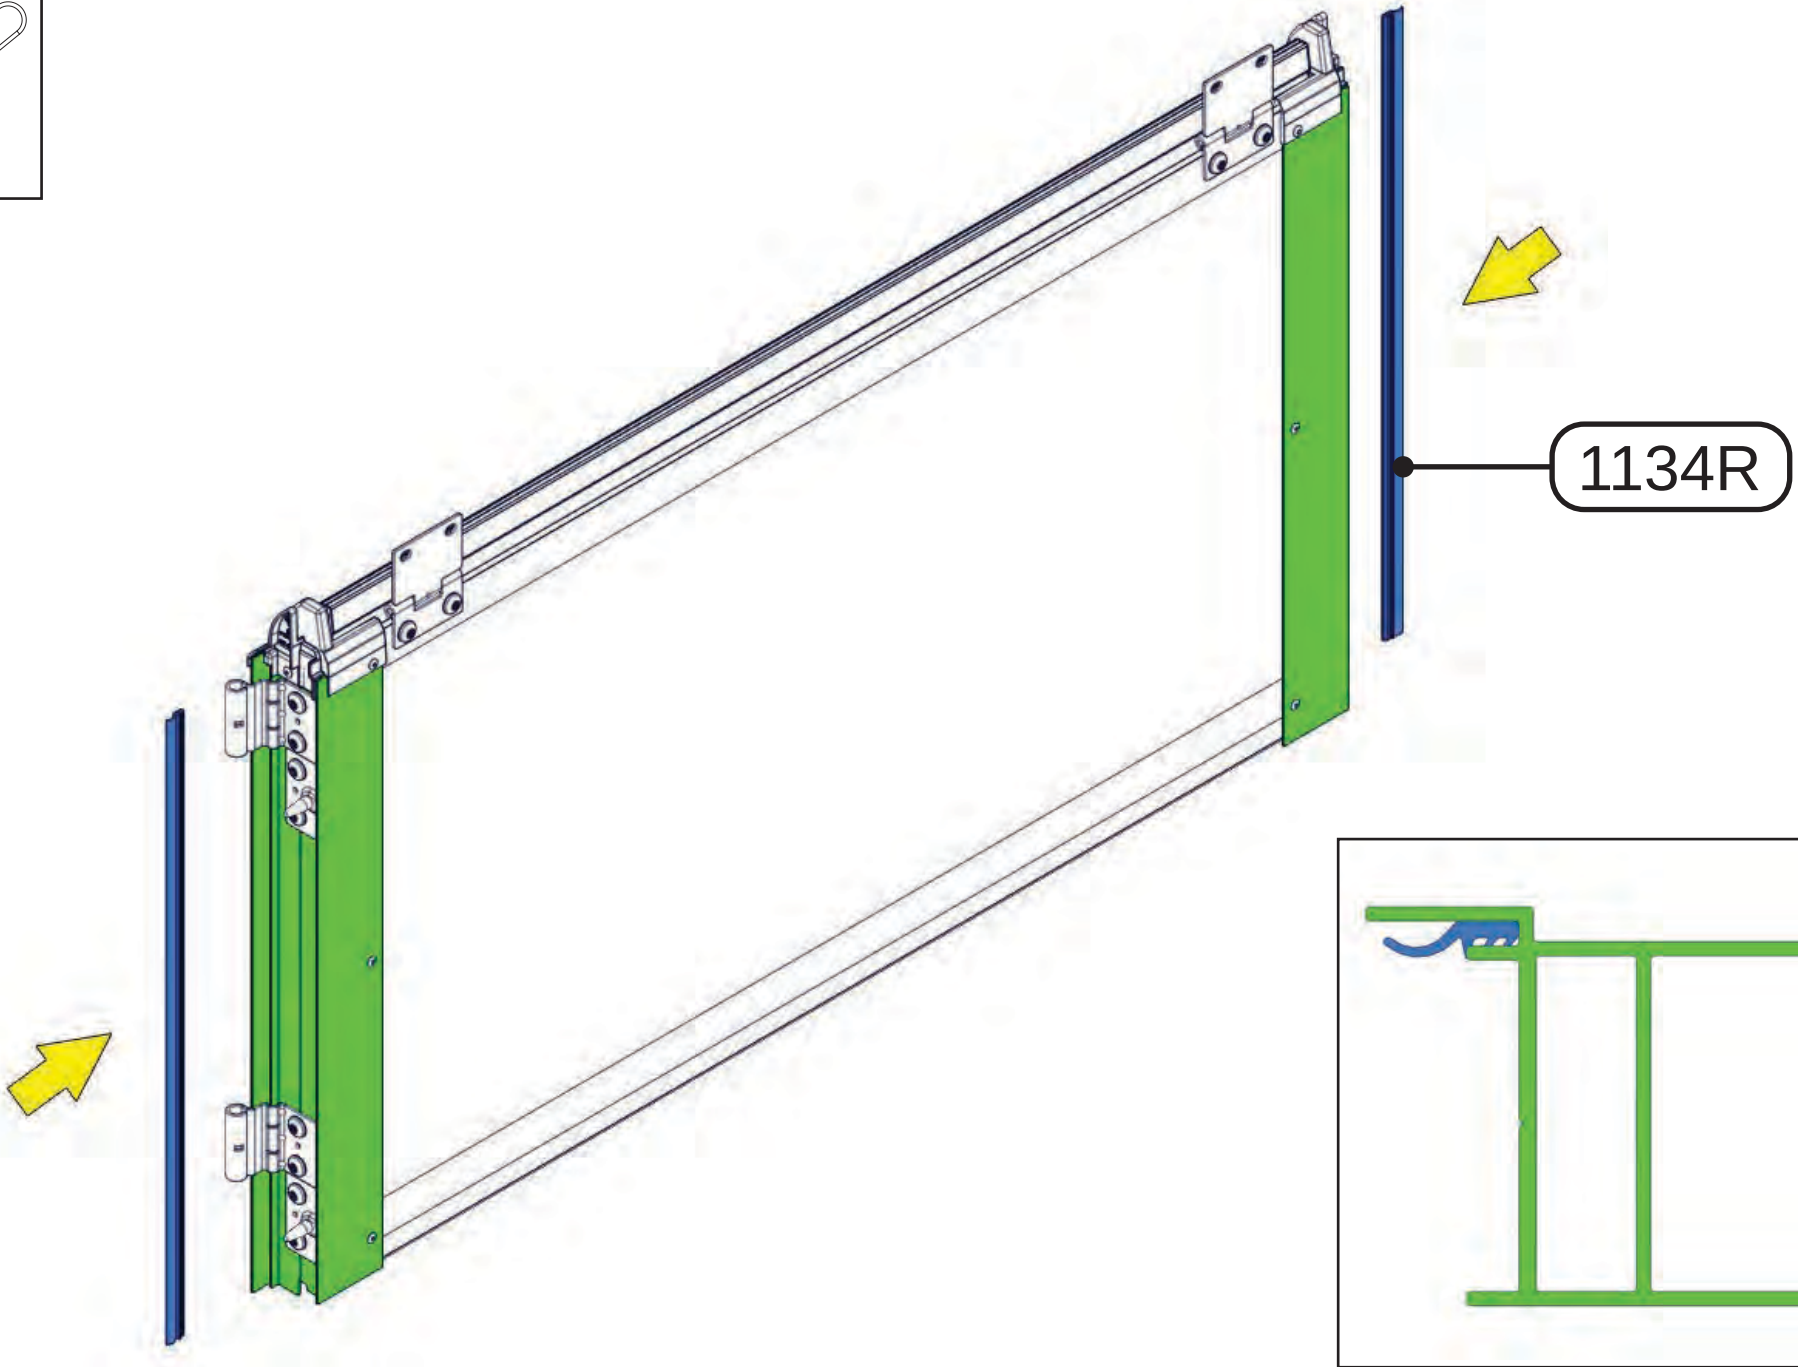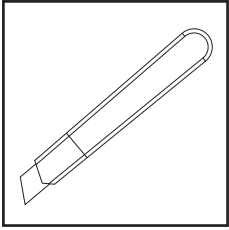


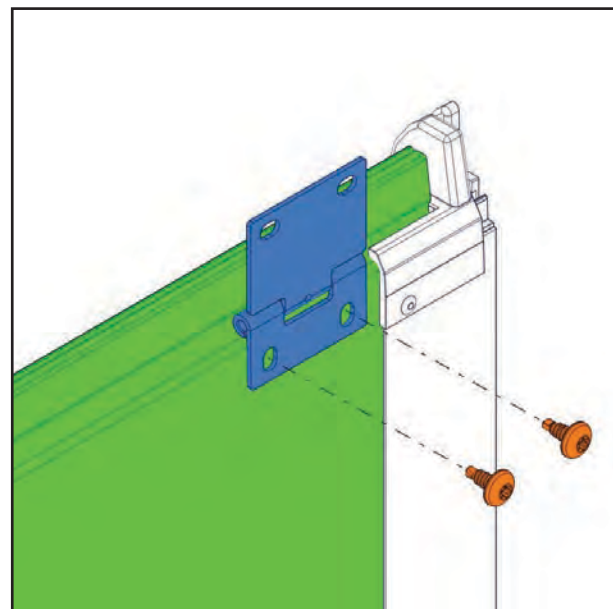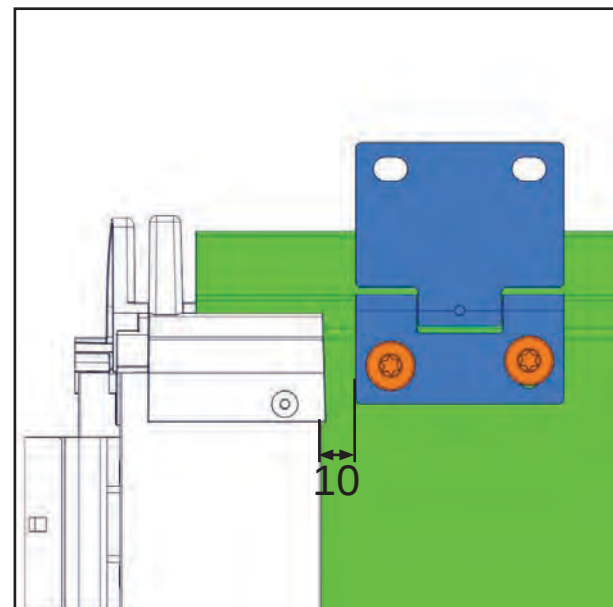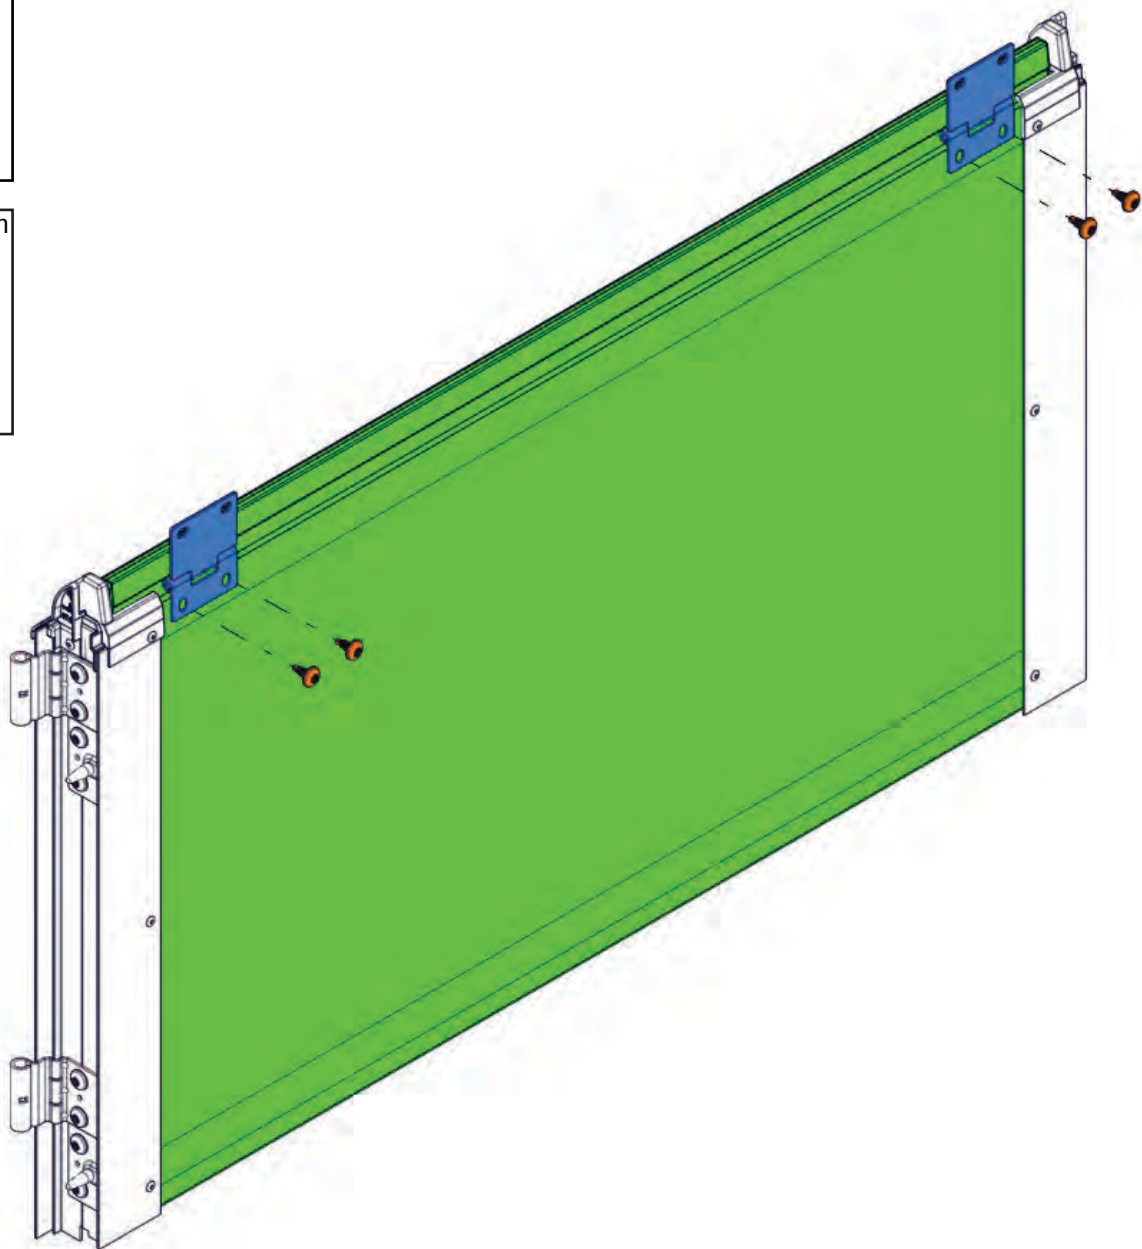
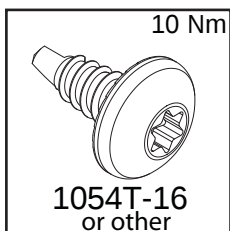
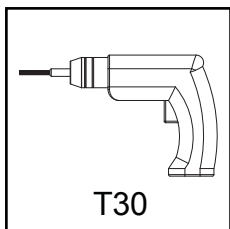



! See optional gauge on page 24






FF Installation manual



Door top section assembly instructions




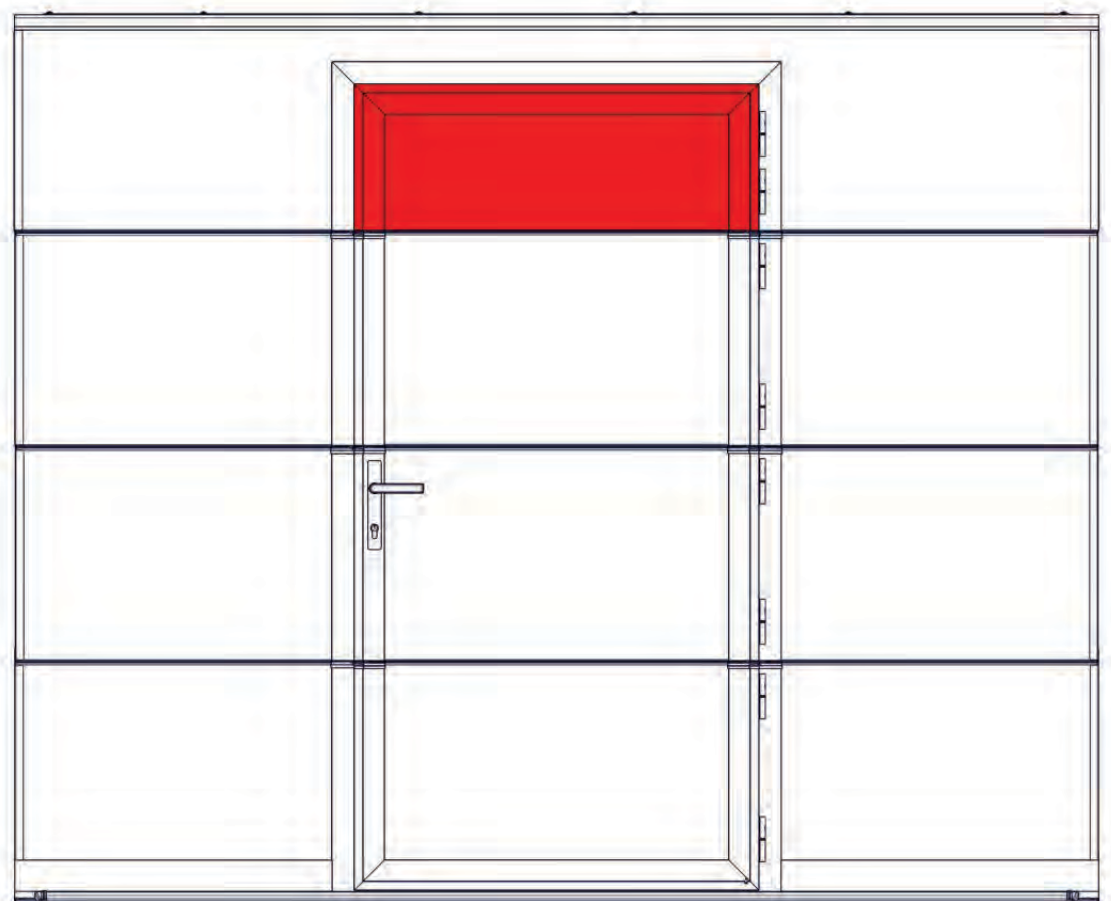


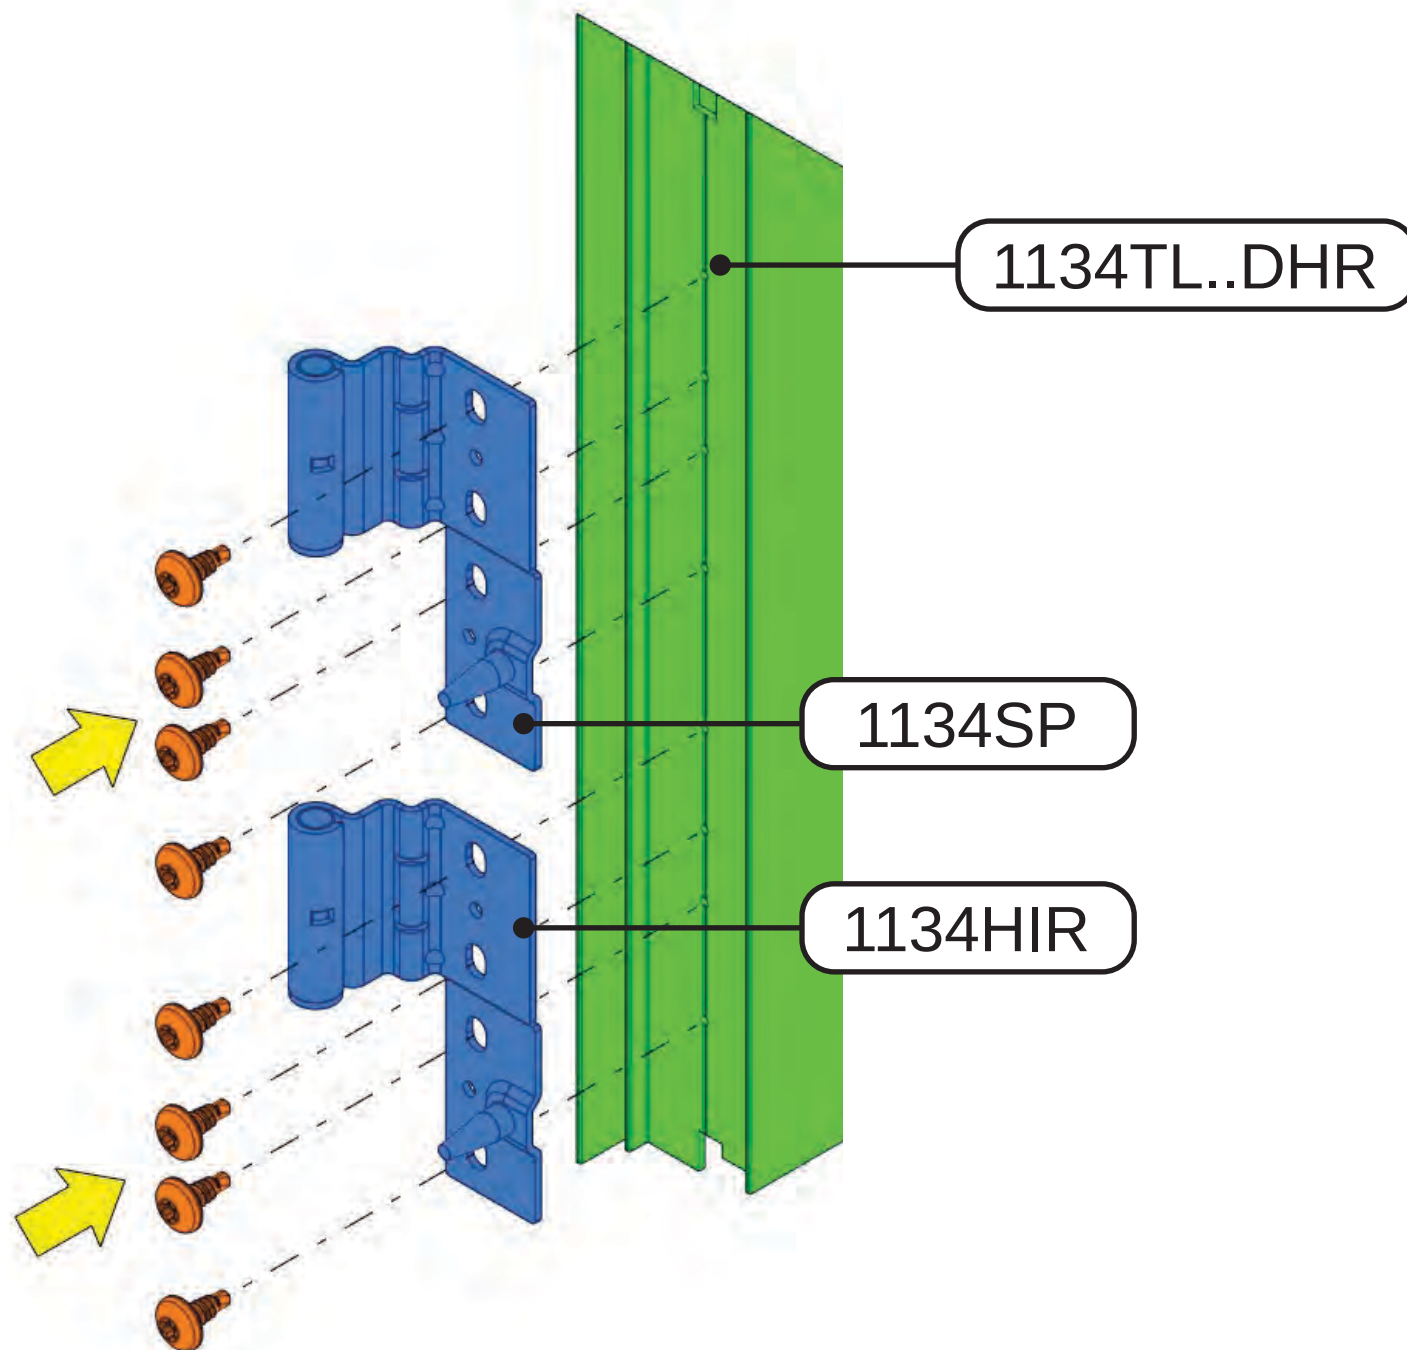
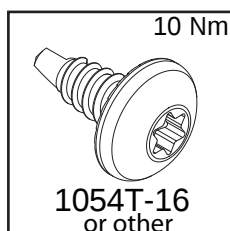
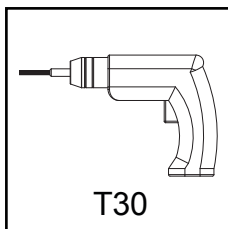


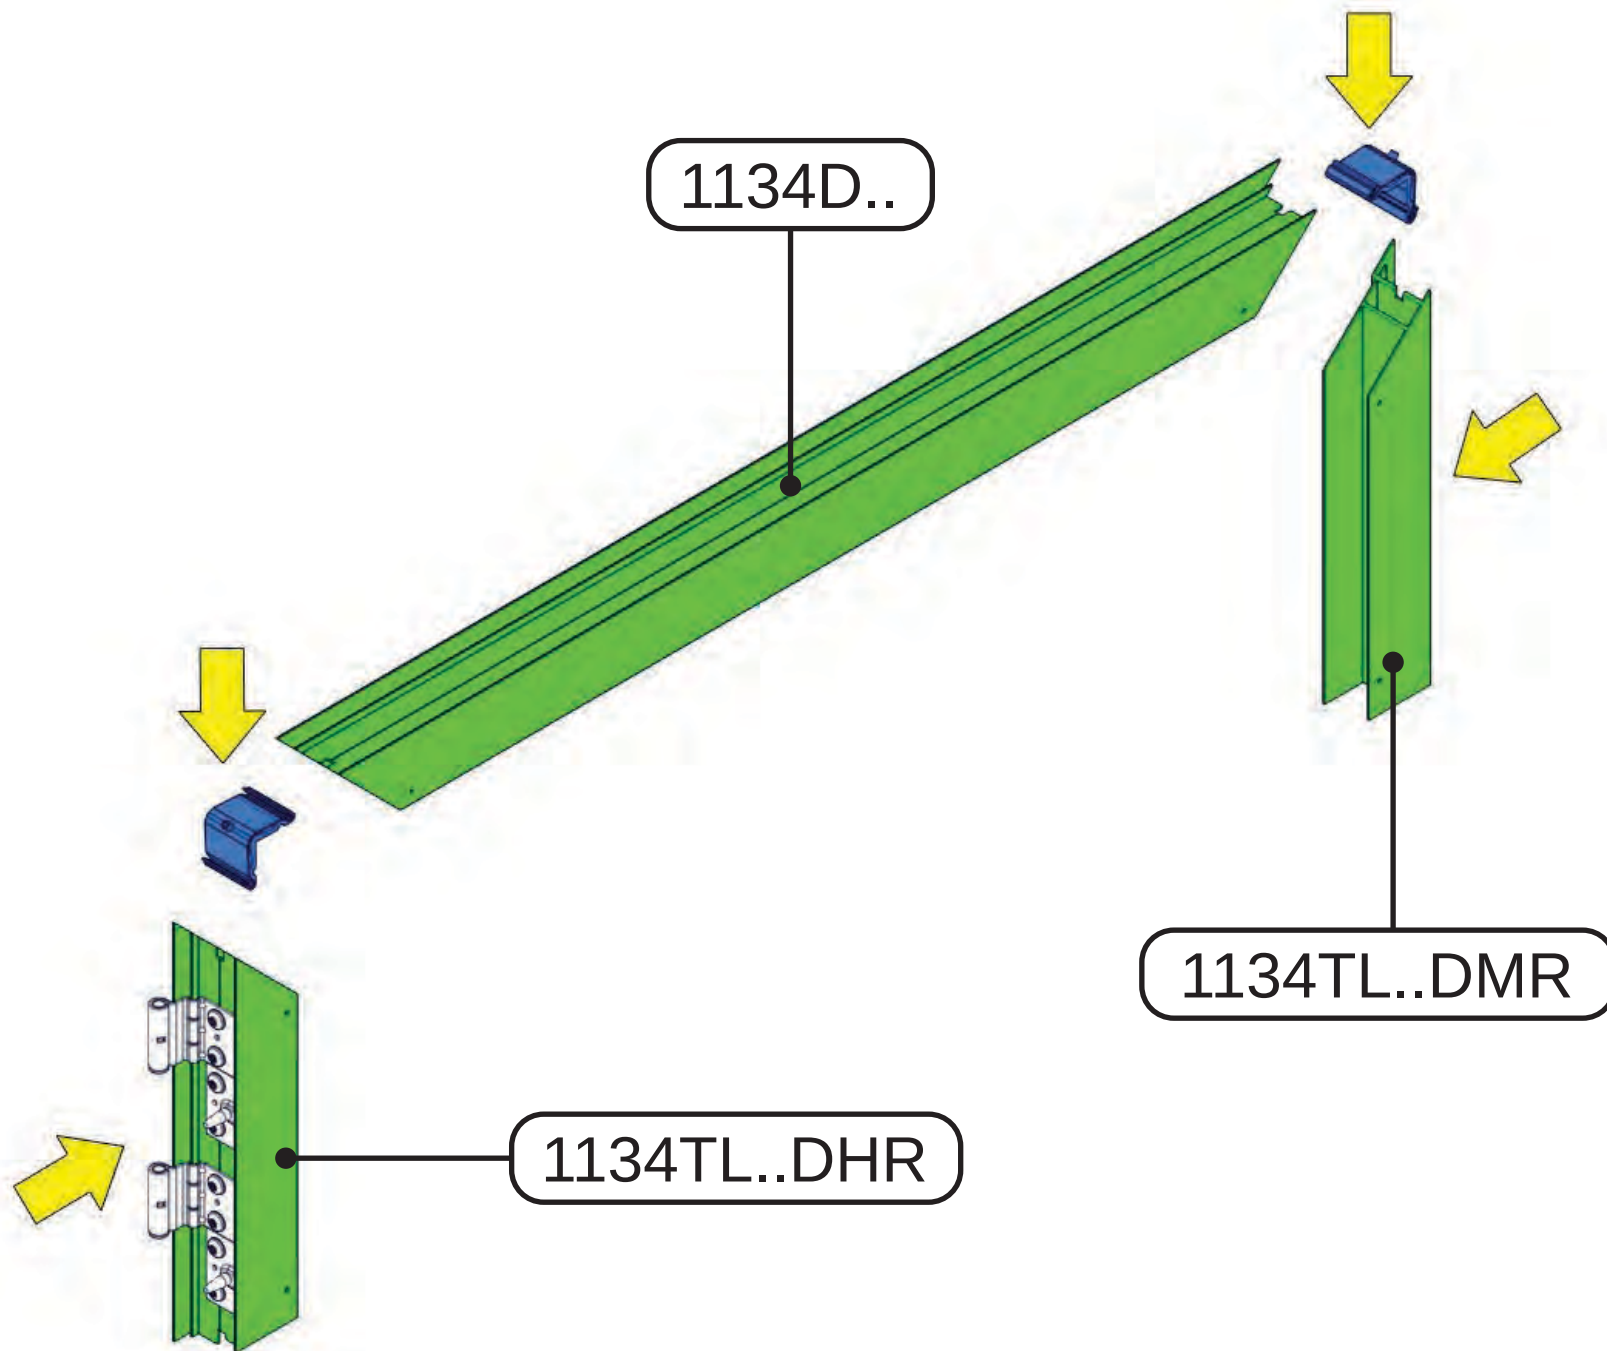

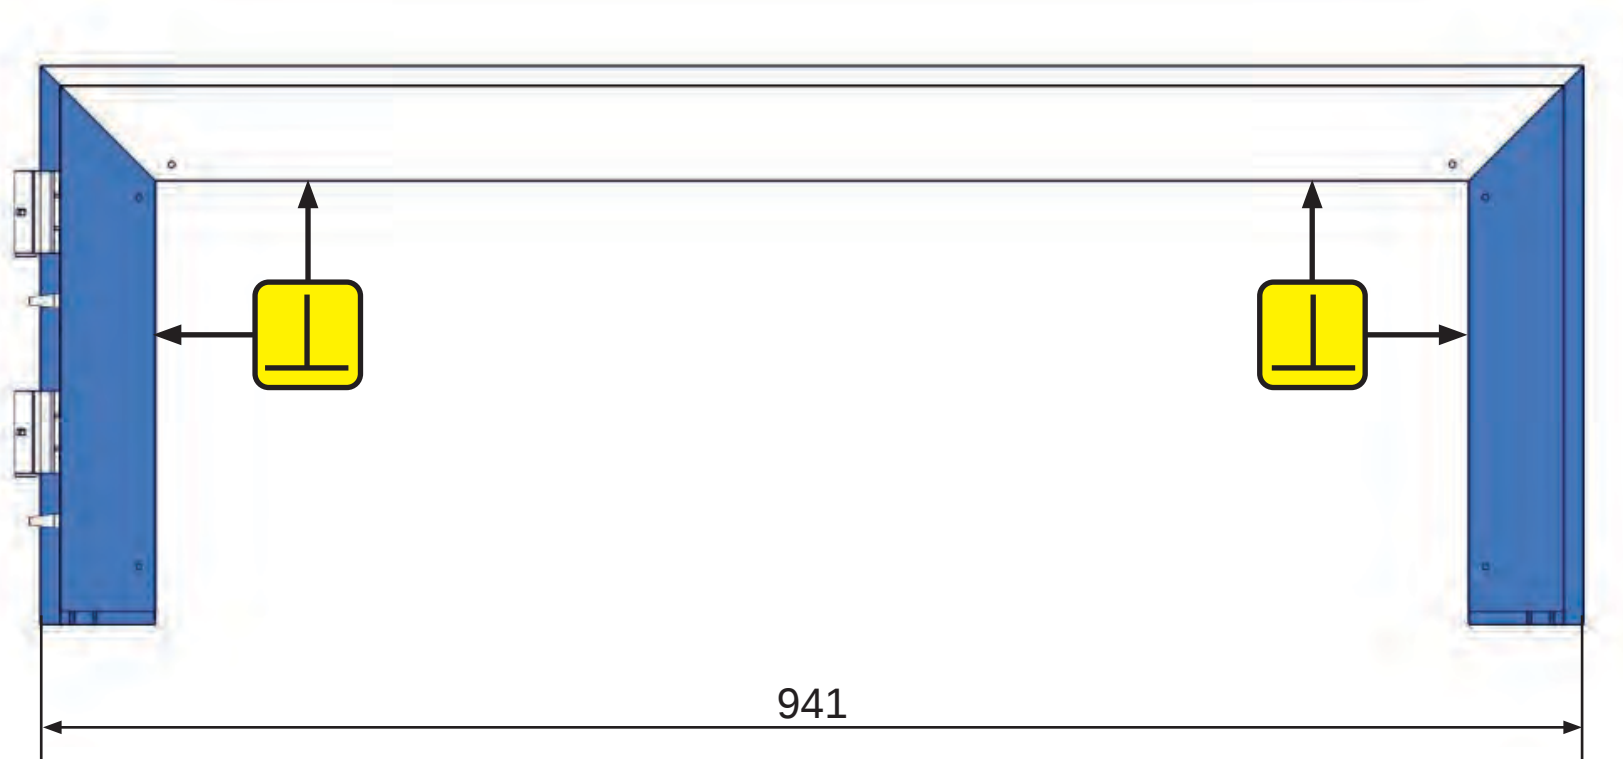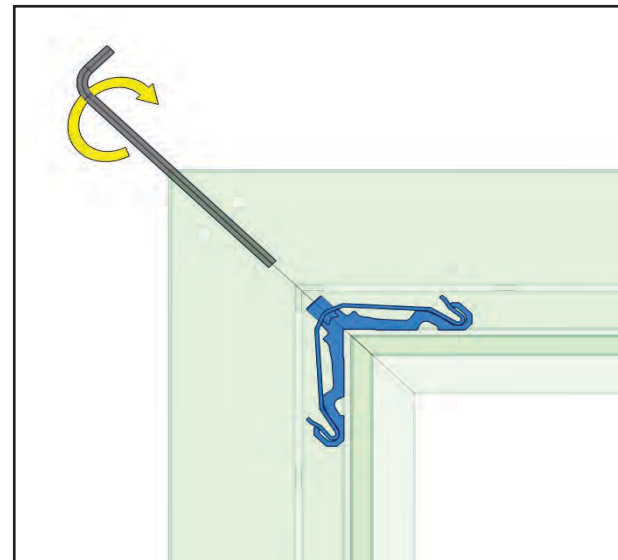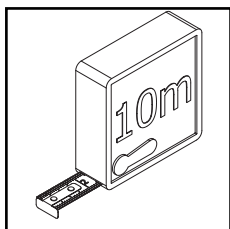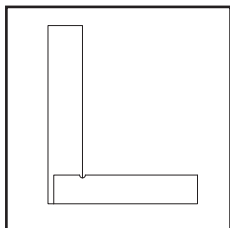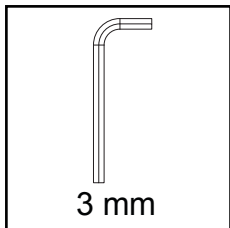

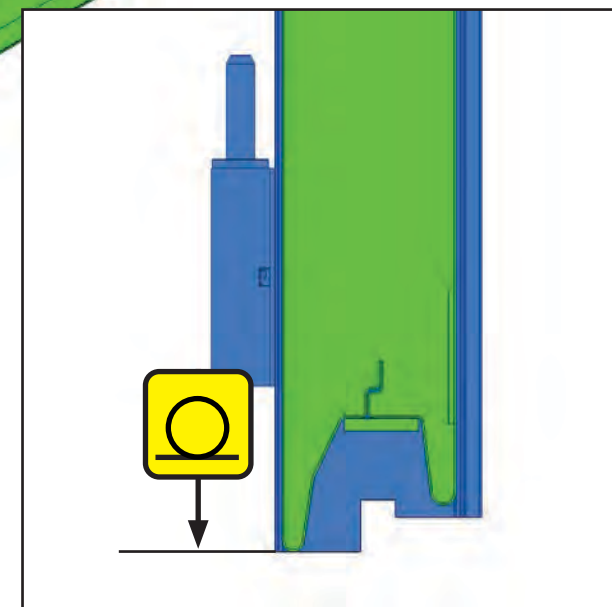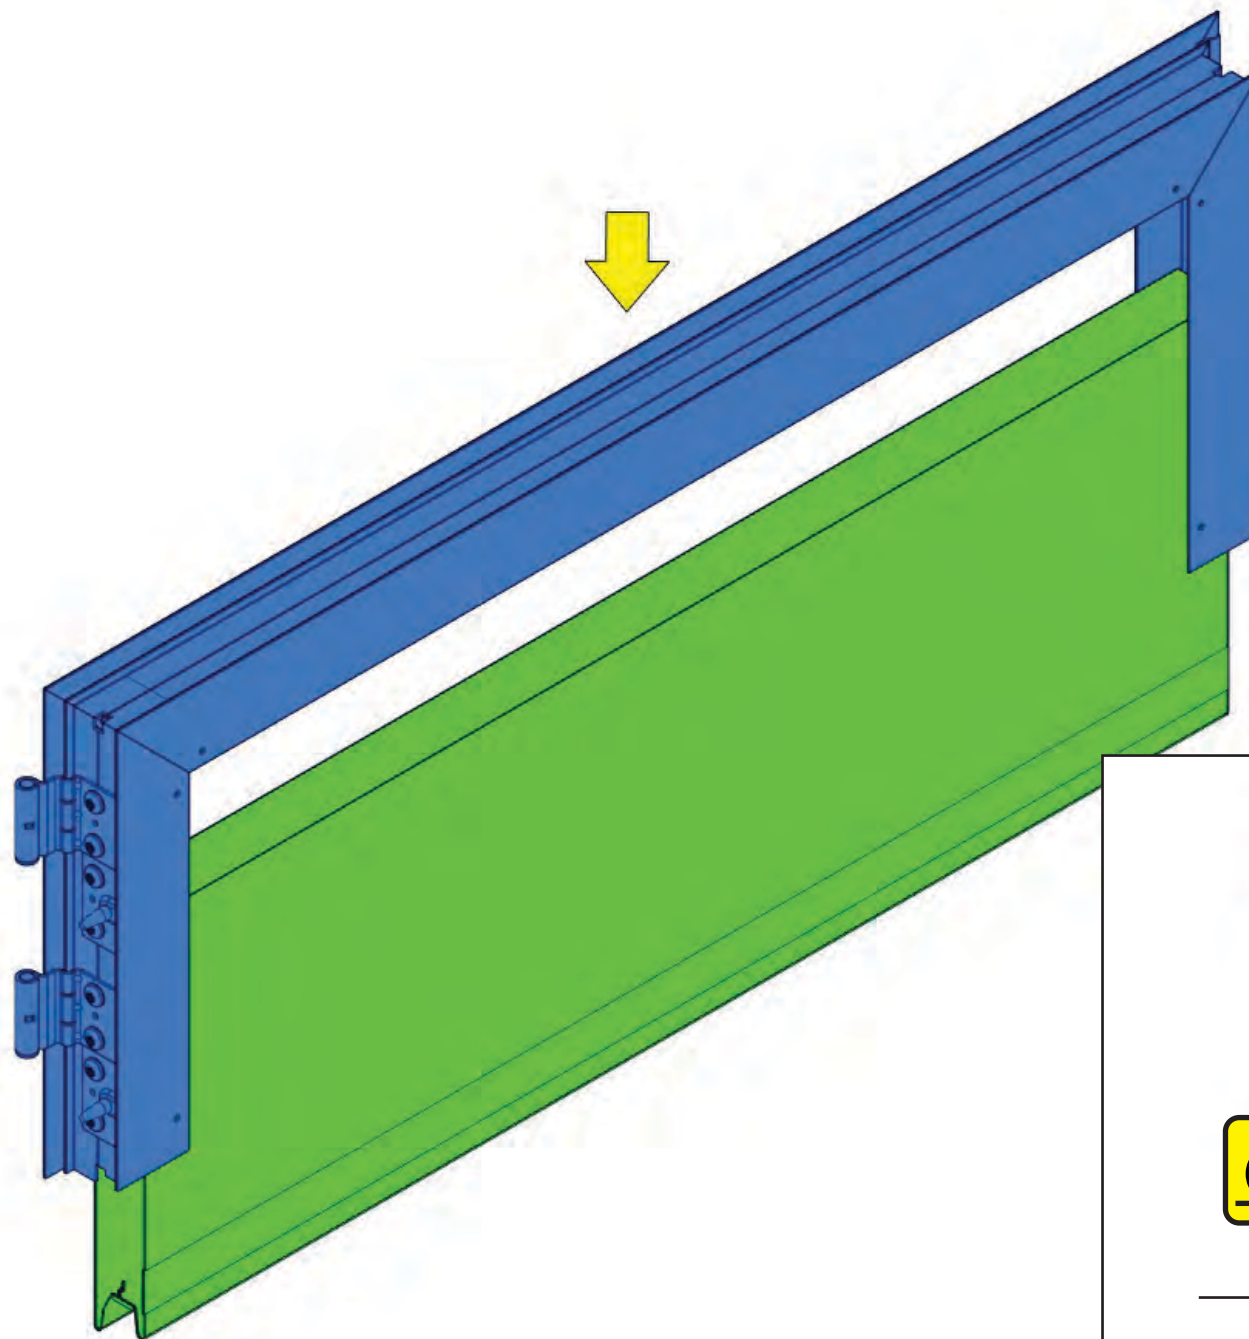


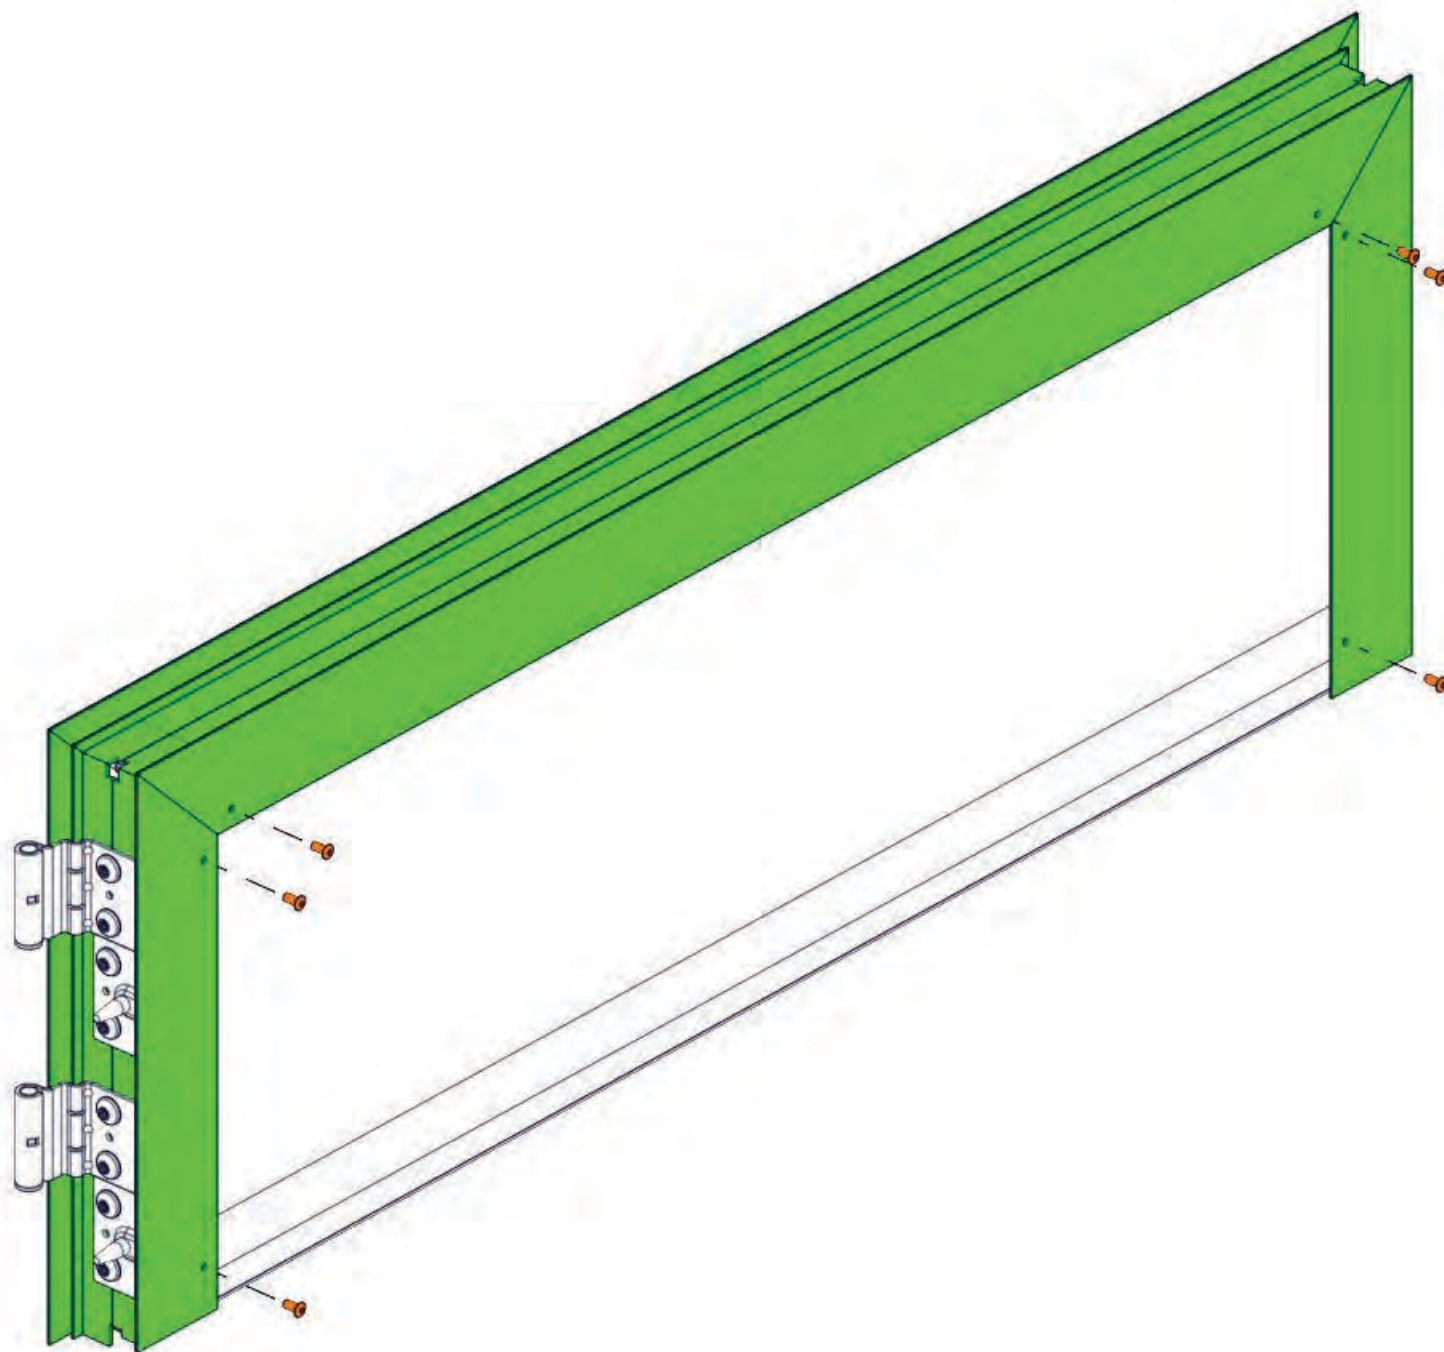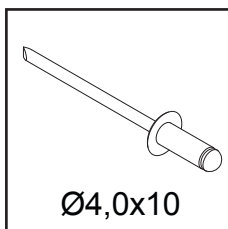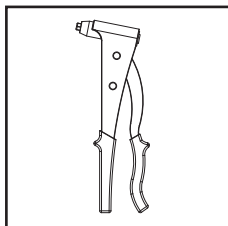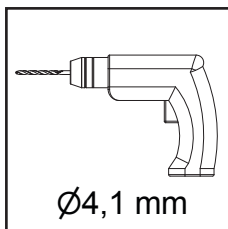


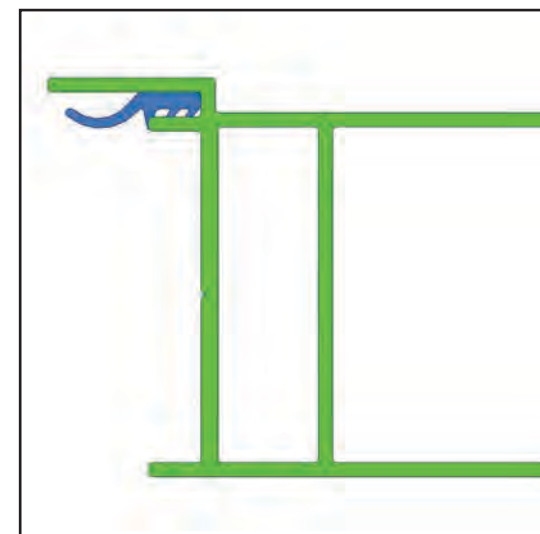
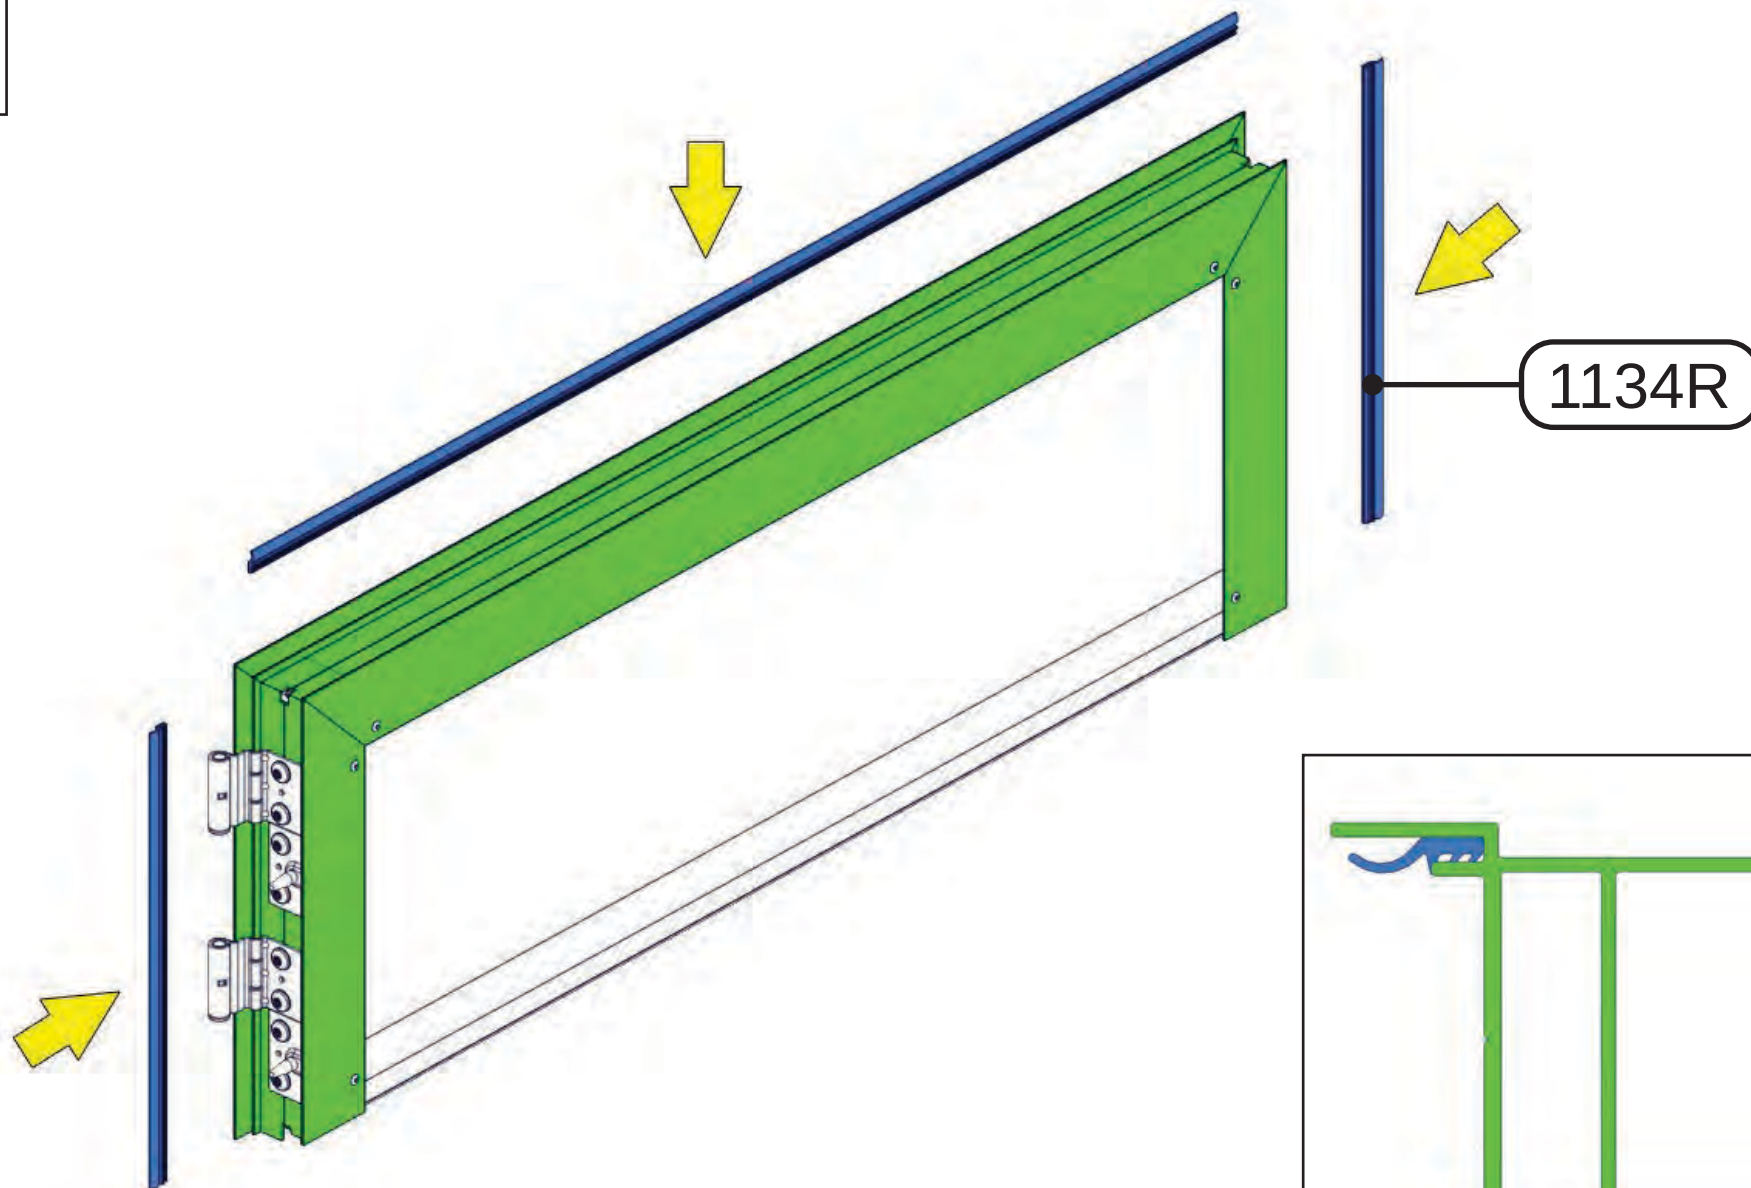
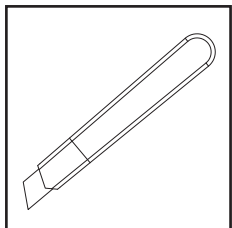






FF Installation manual



Frame assembly instructions

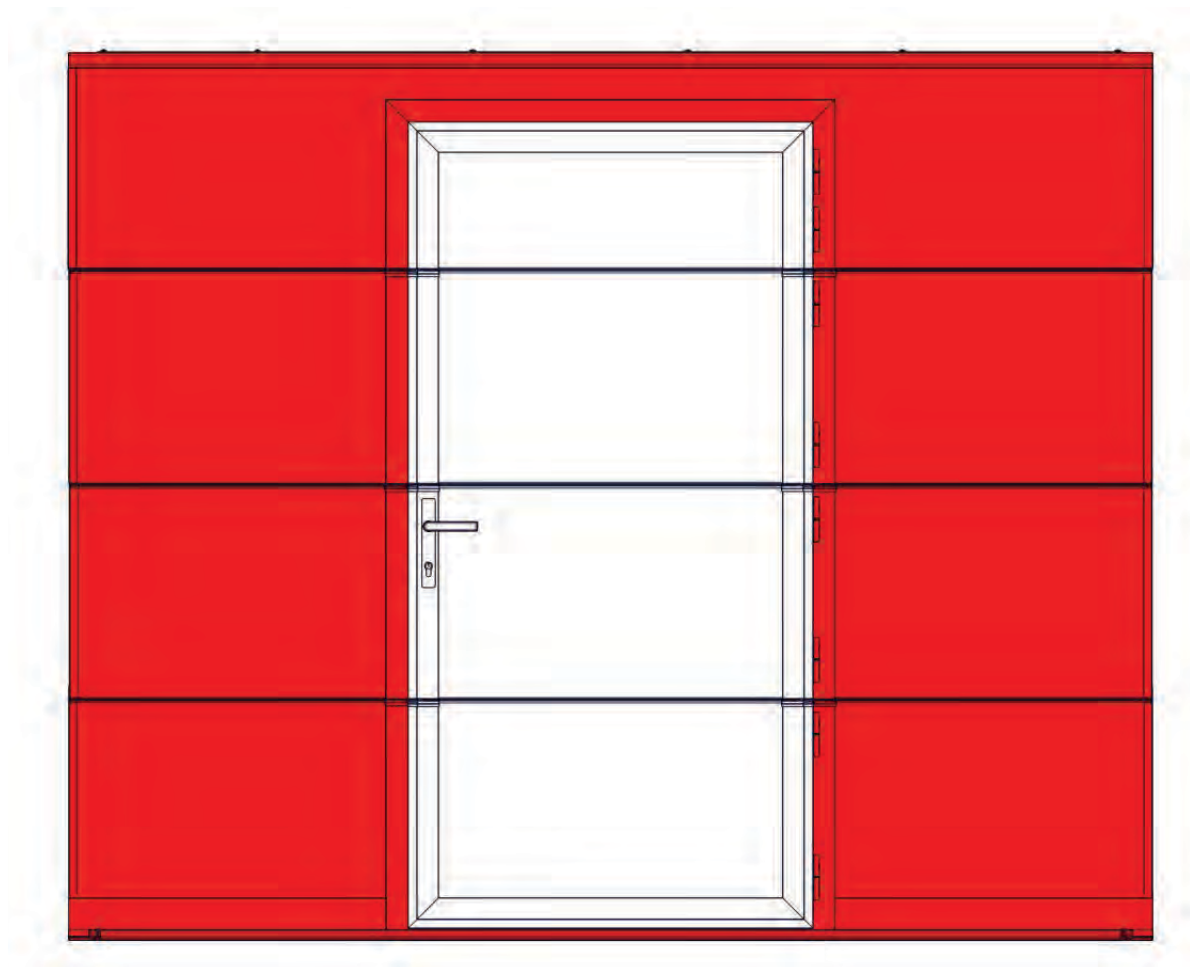


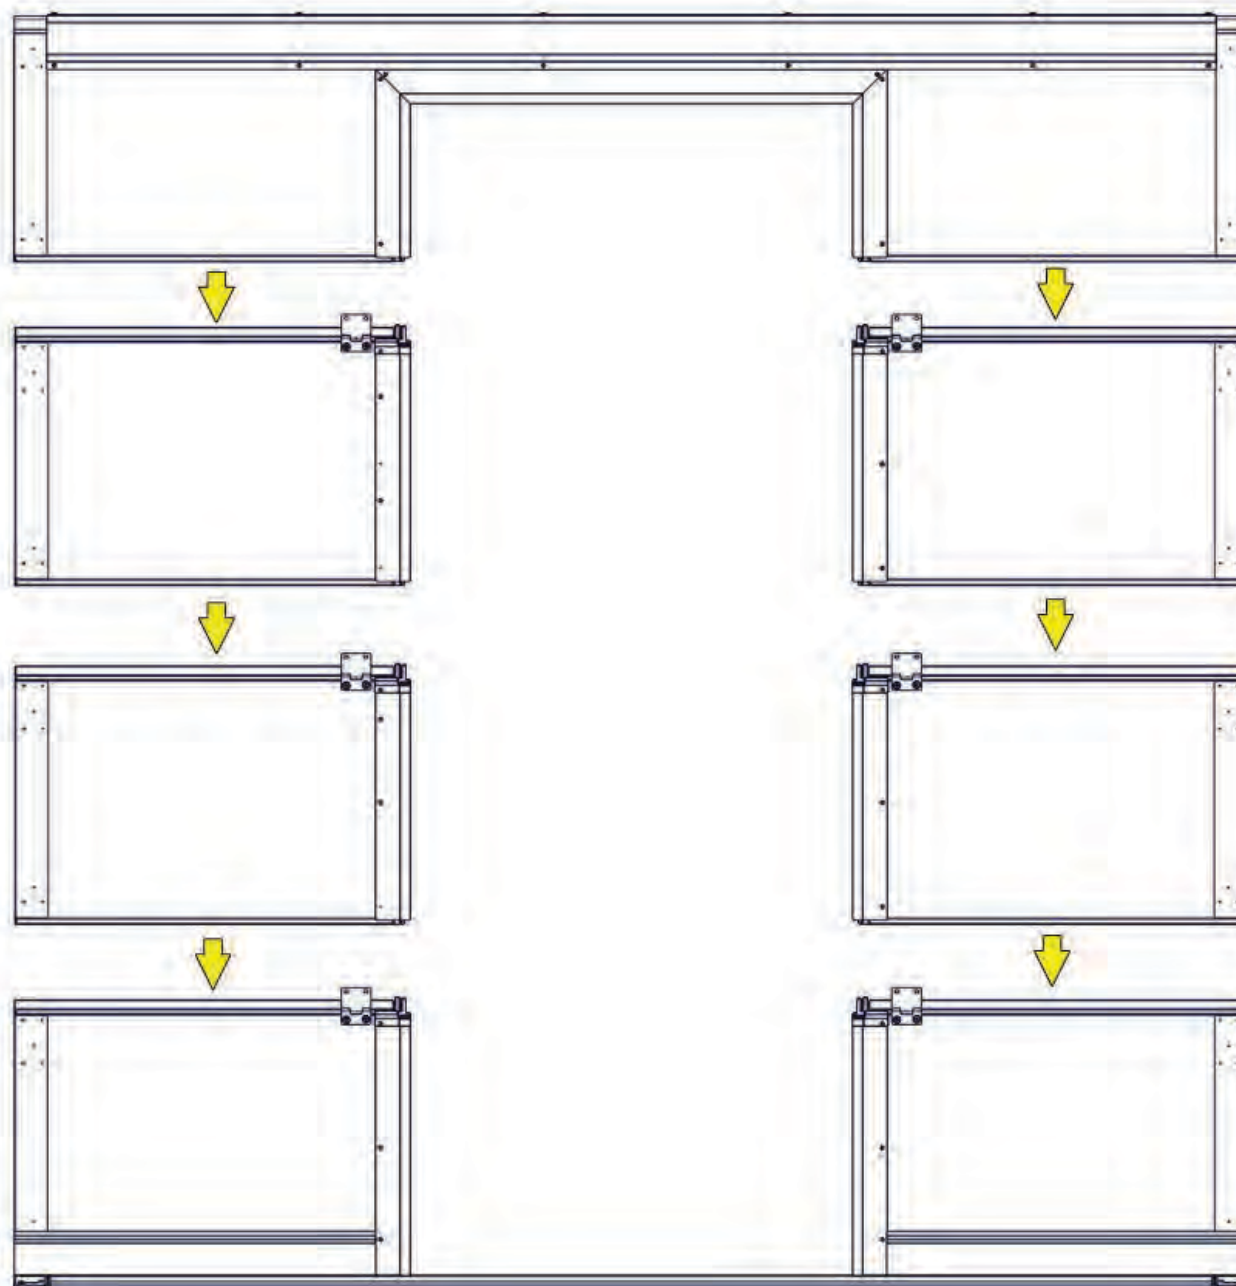

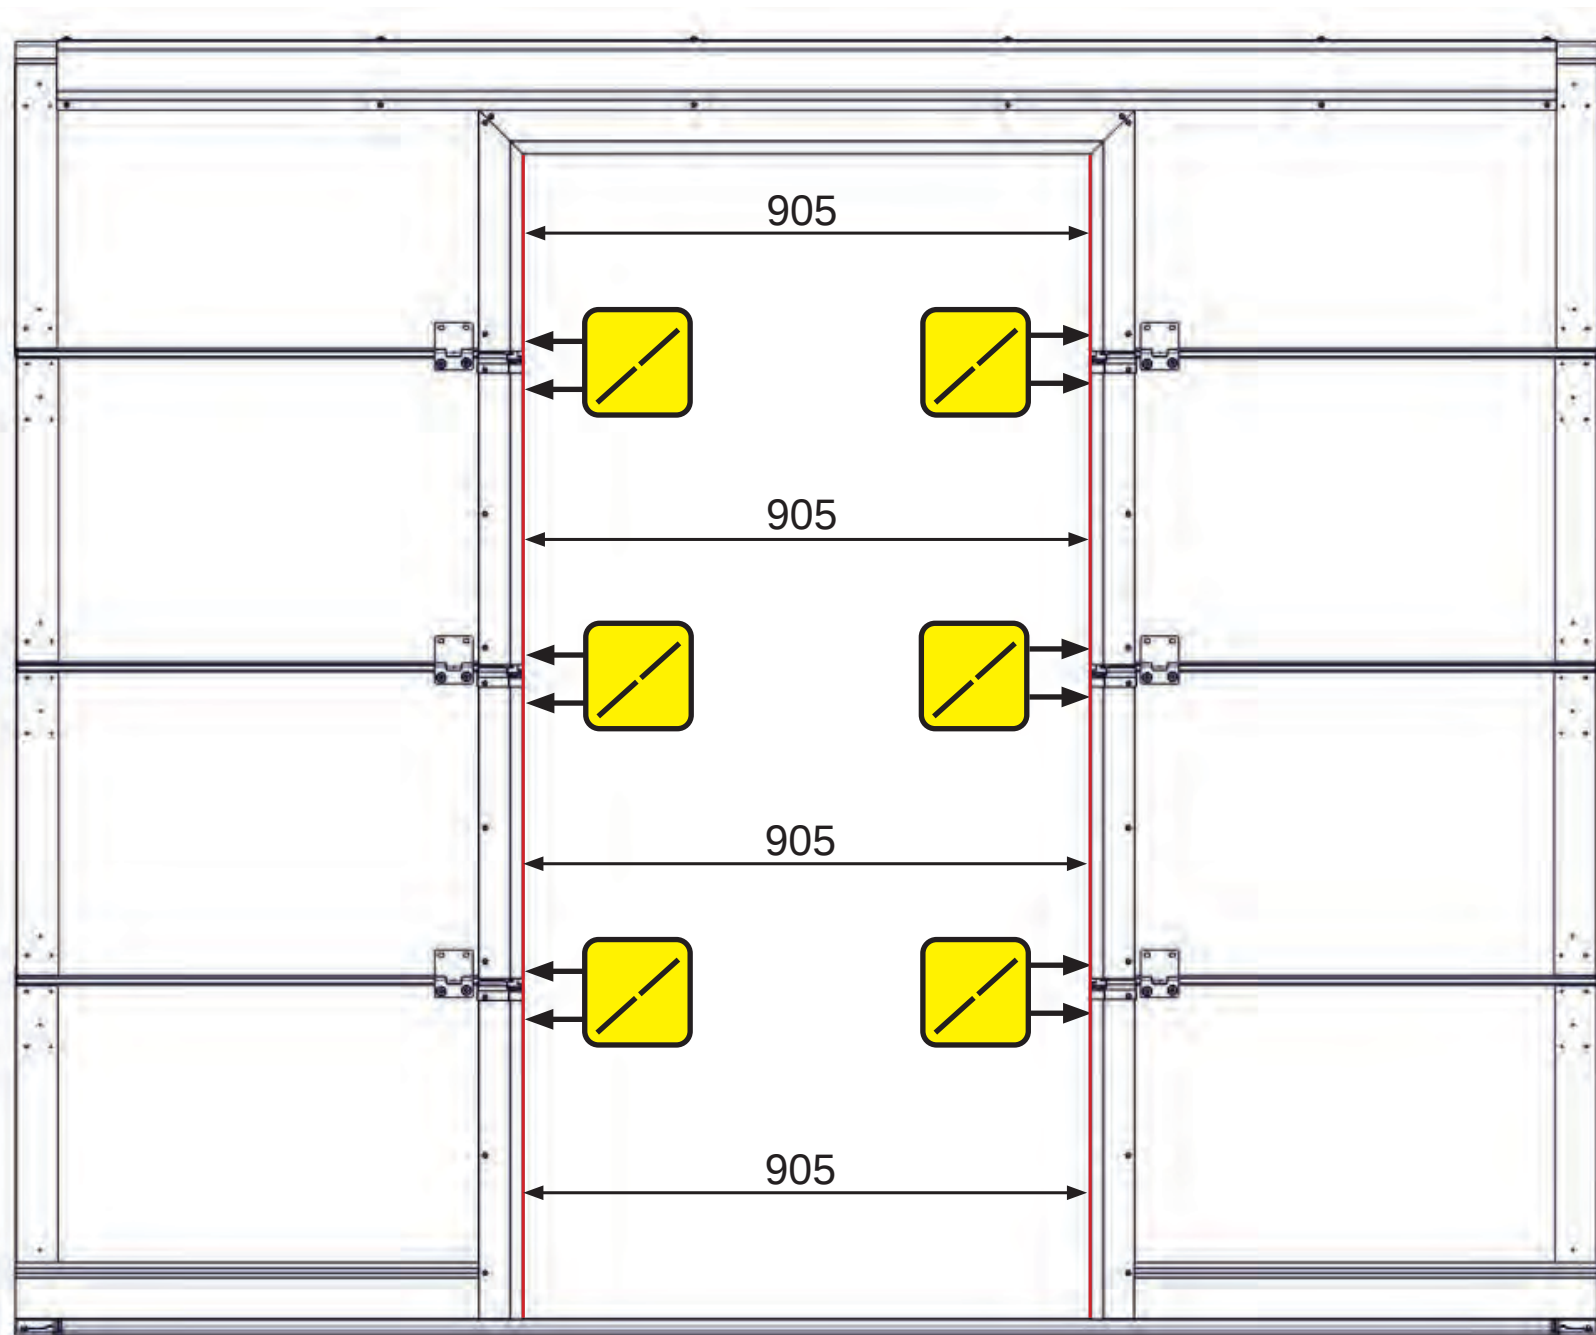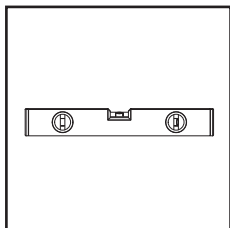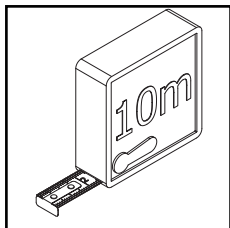

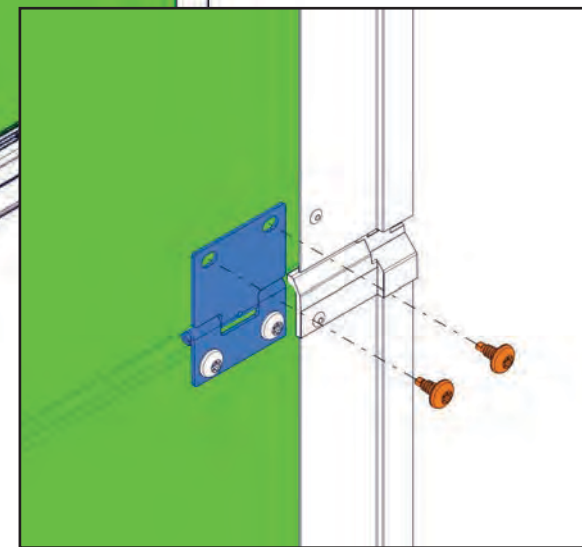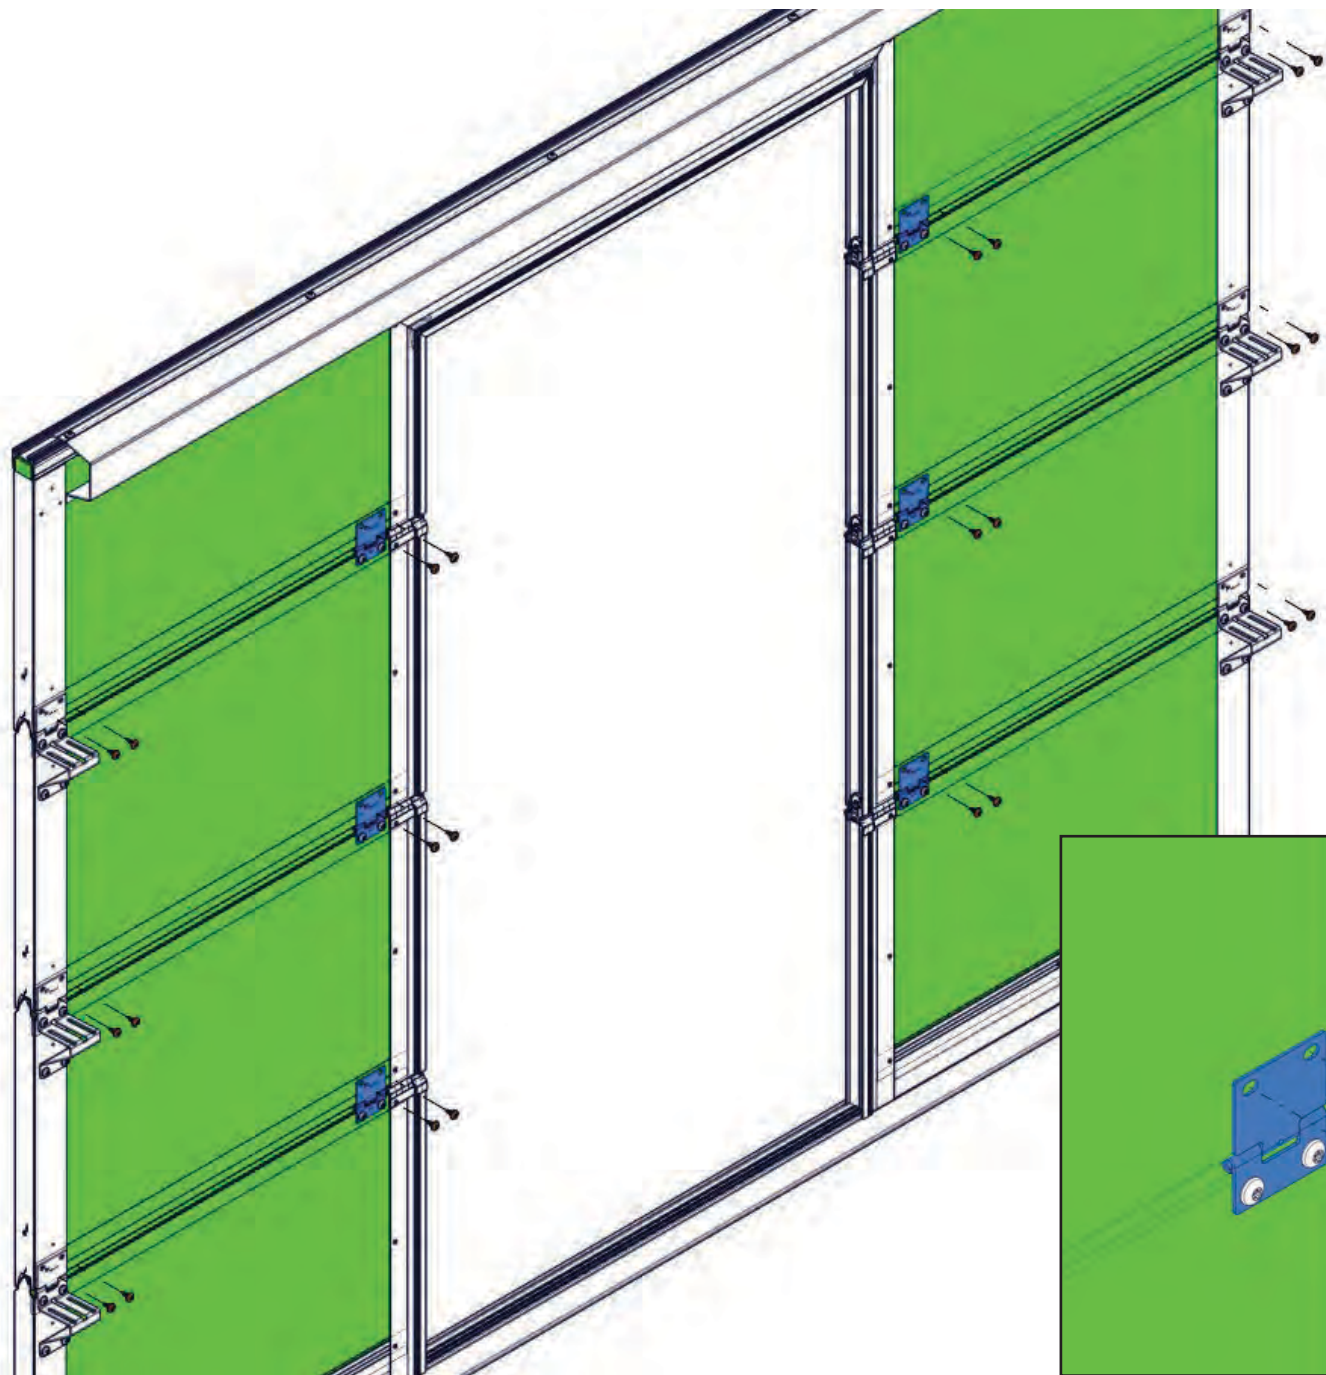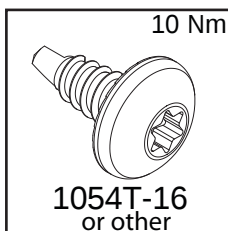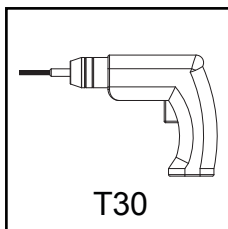


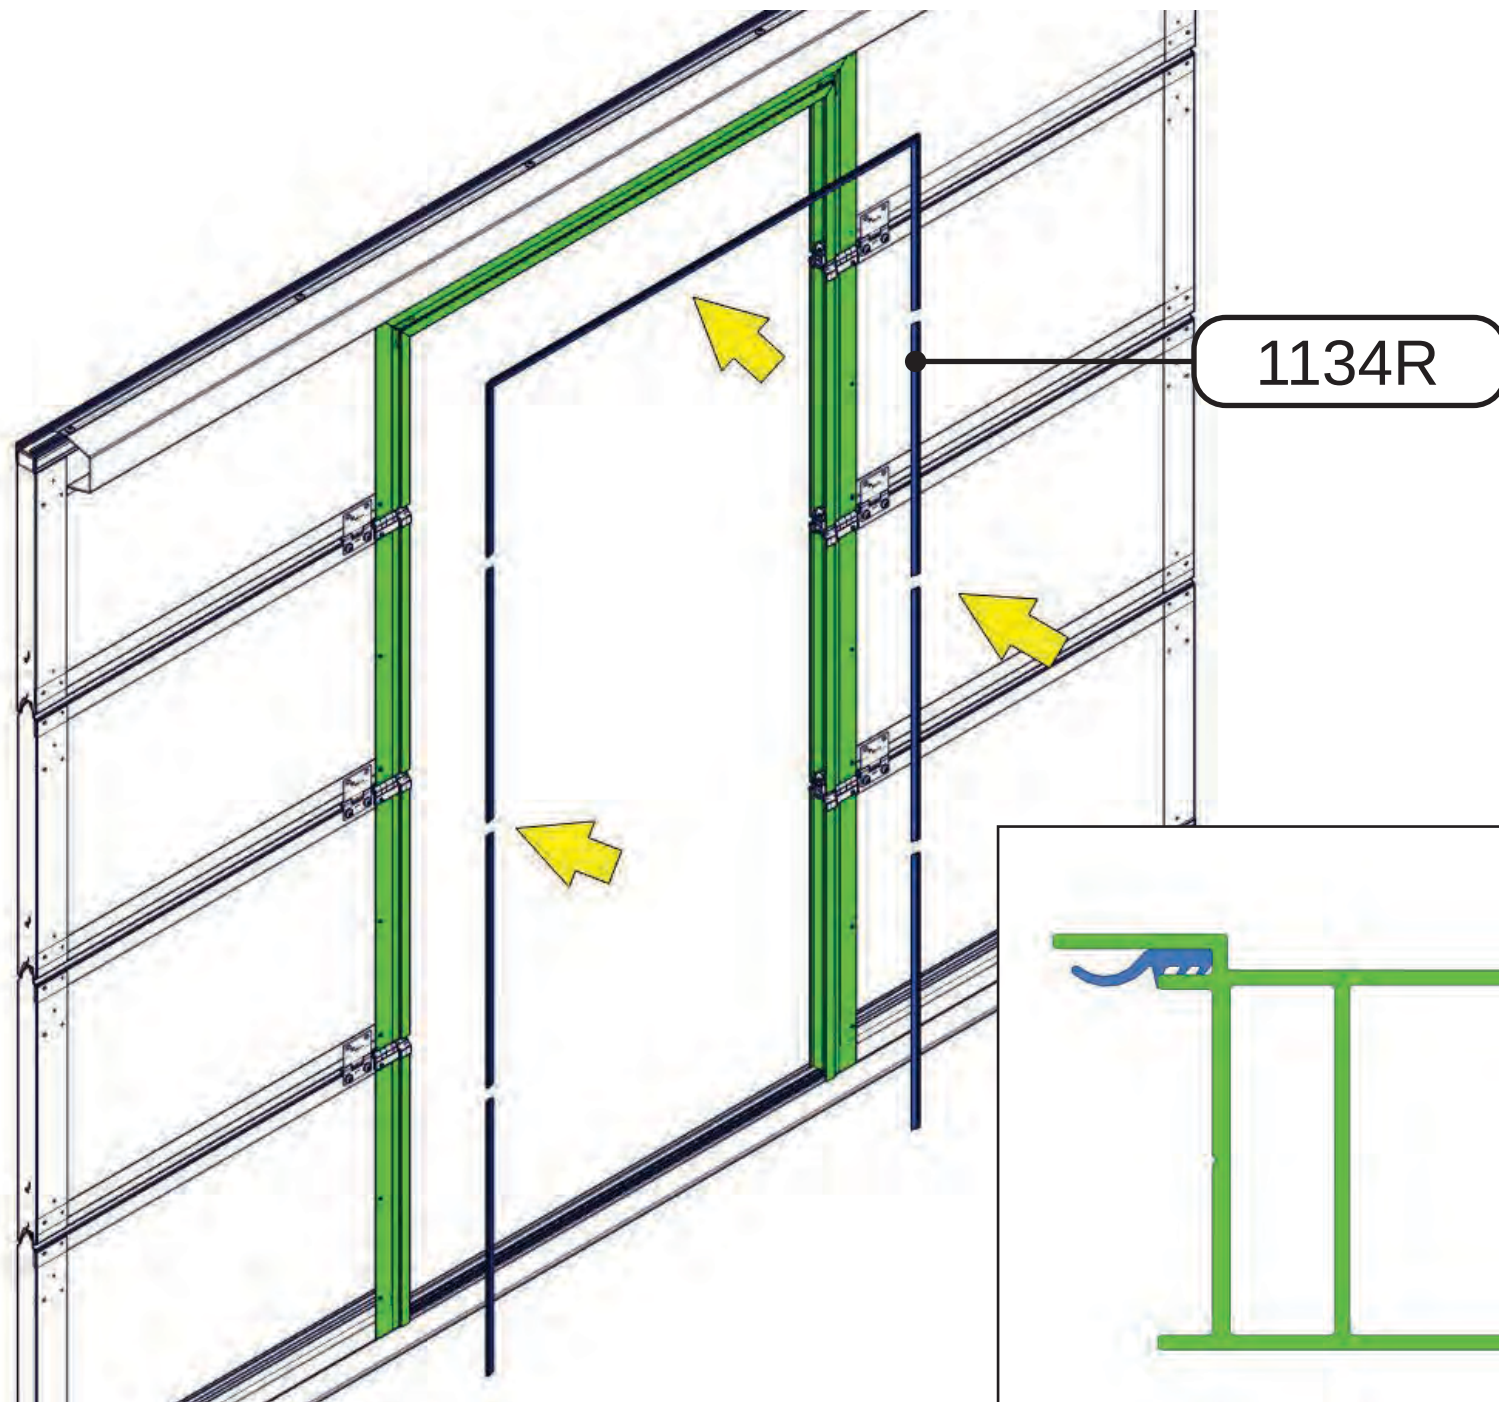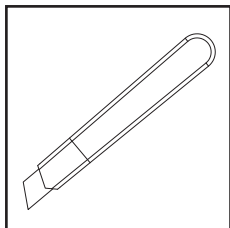


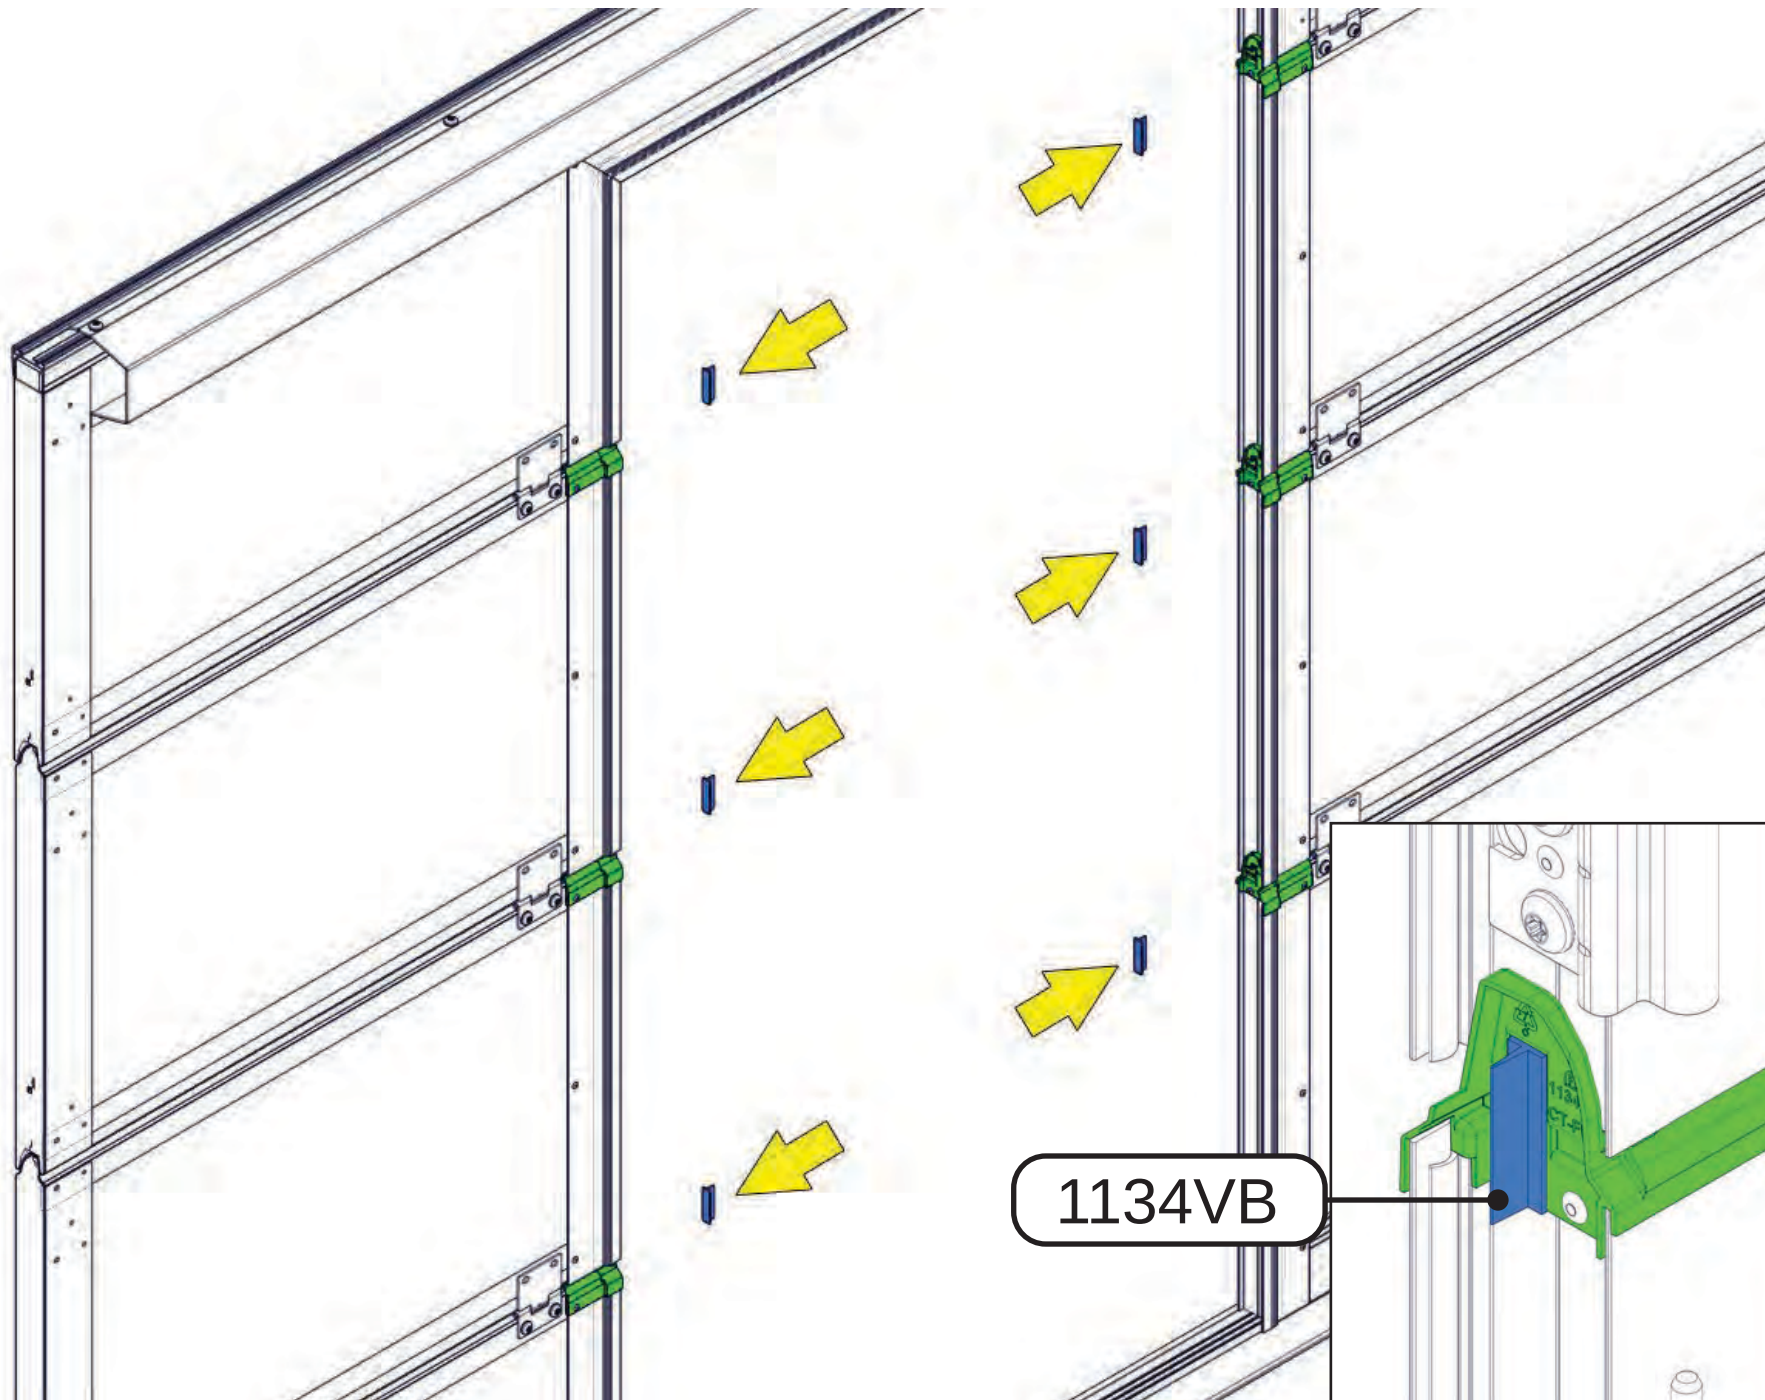




FF Installation manual




Door assembly instructions

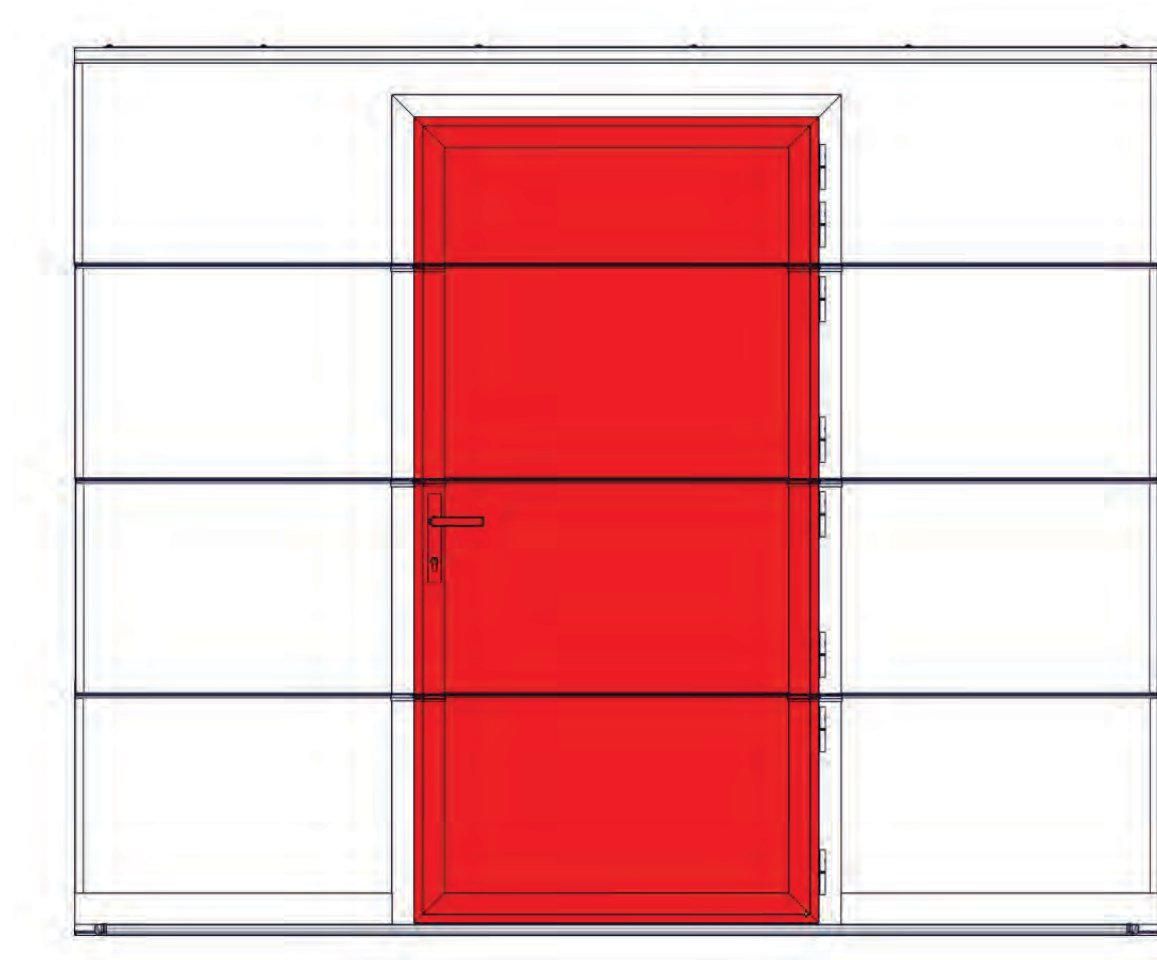

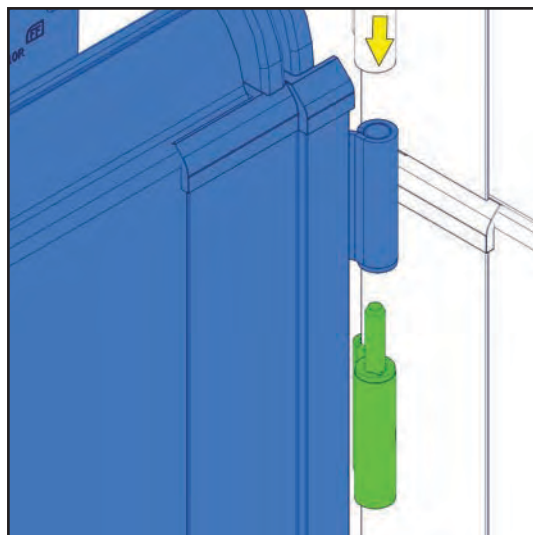





* For hinge fine tuning see page 78

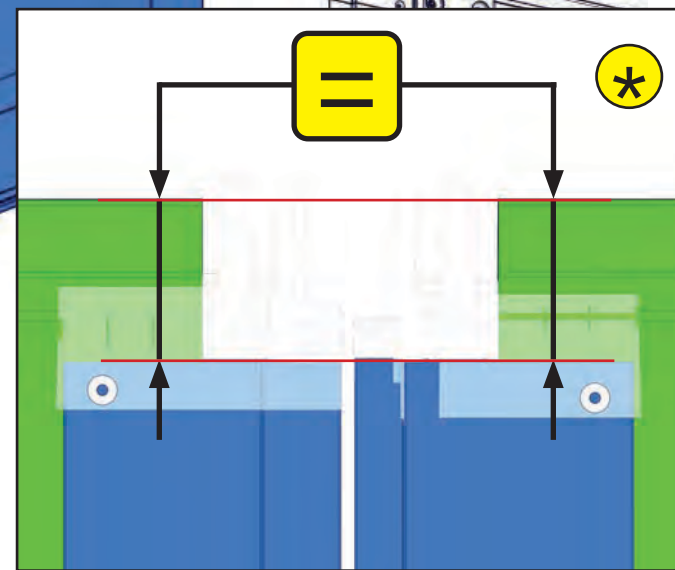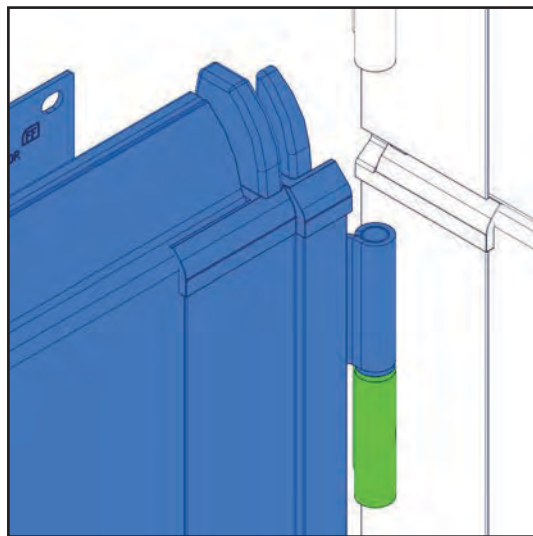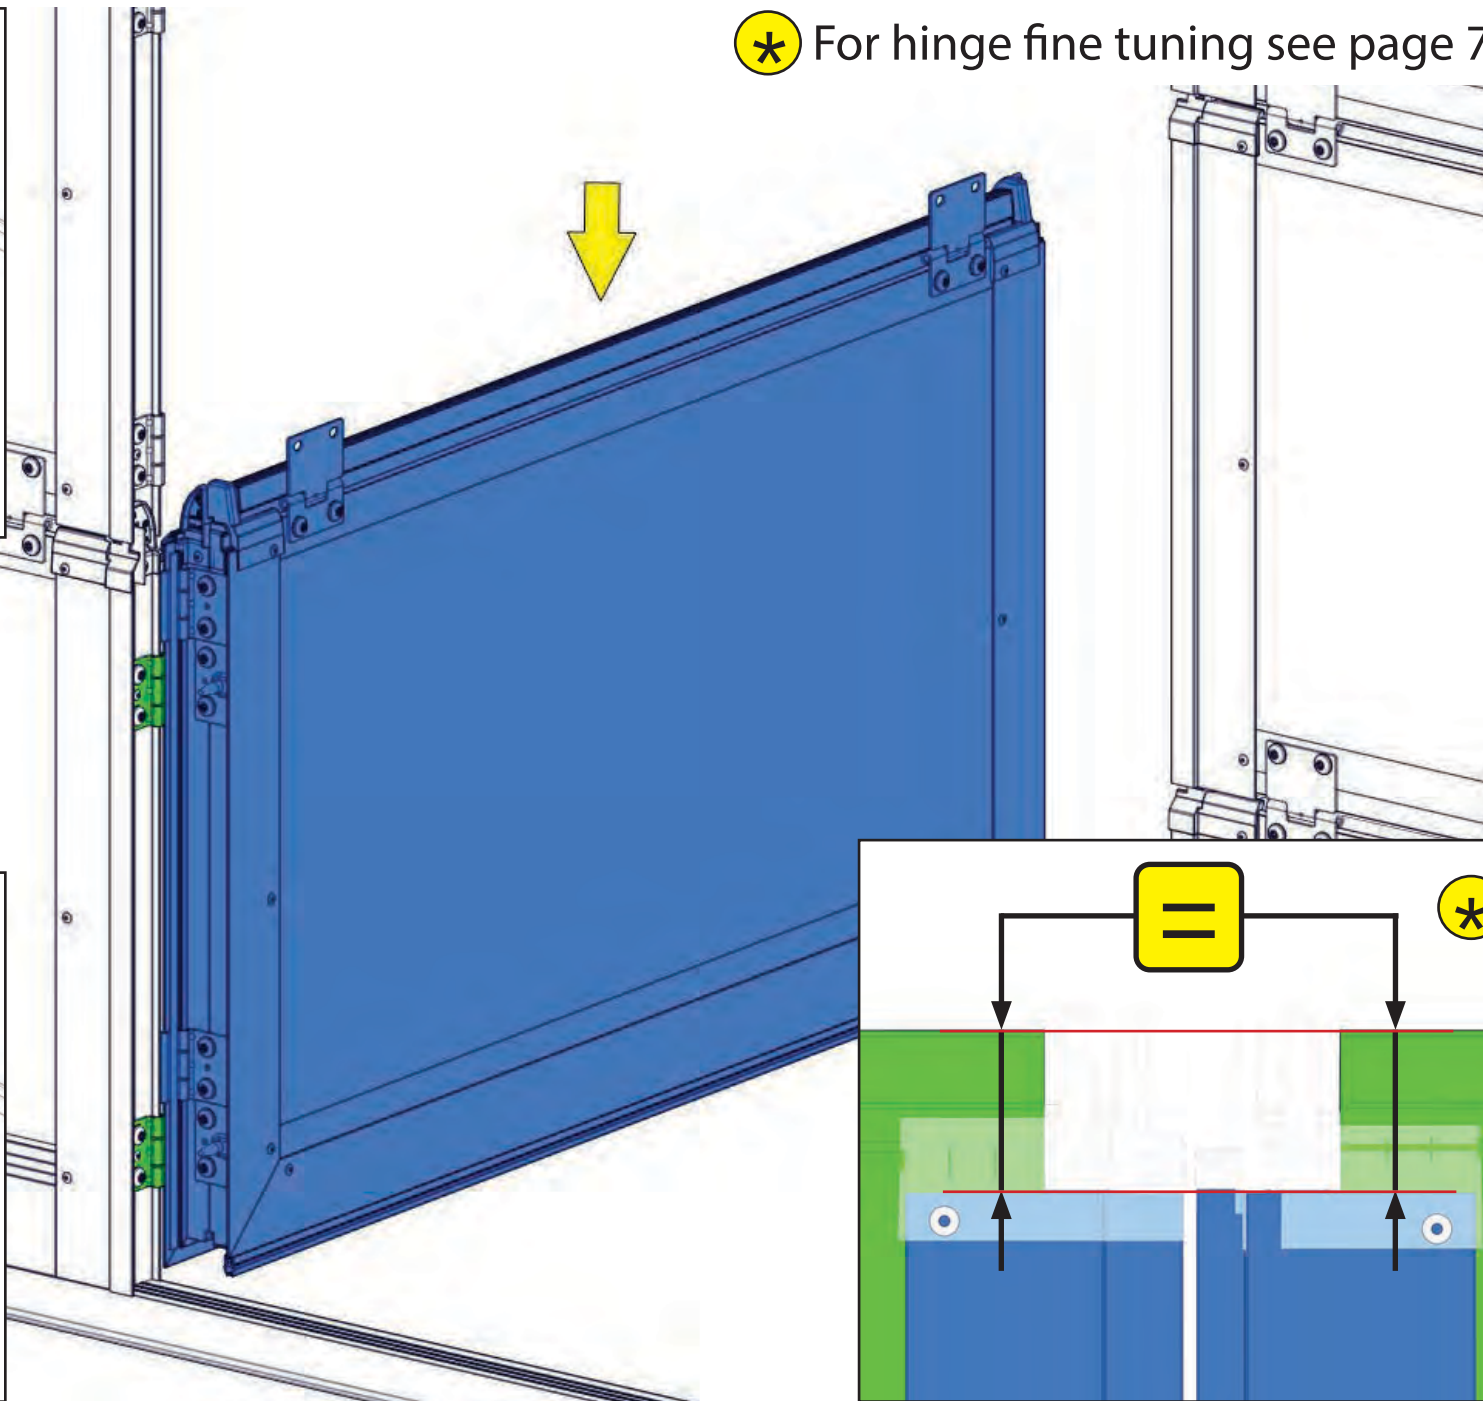

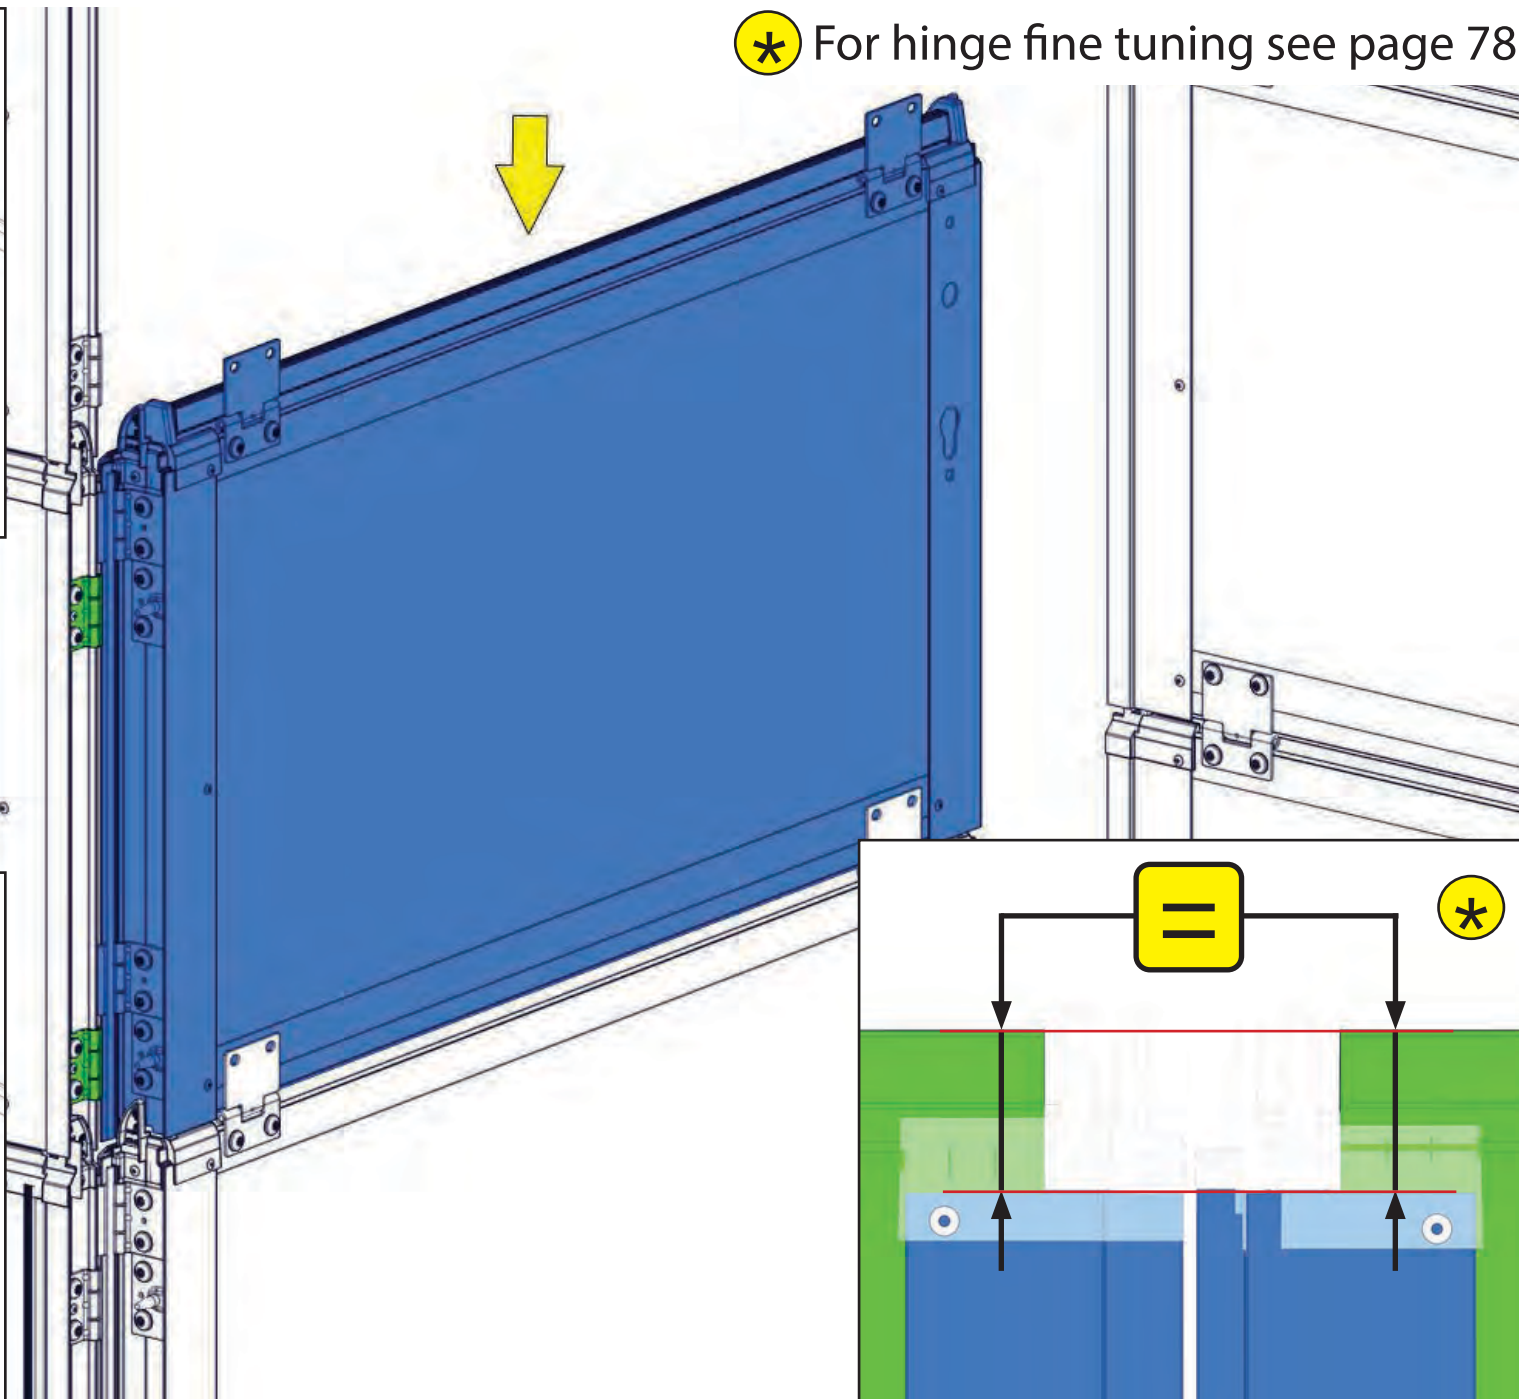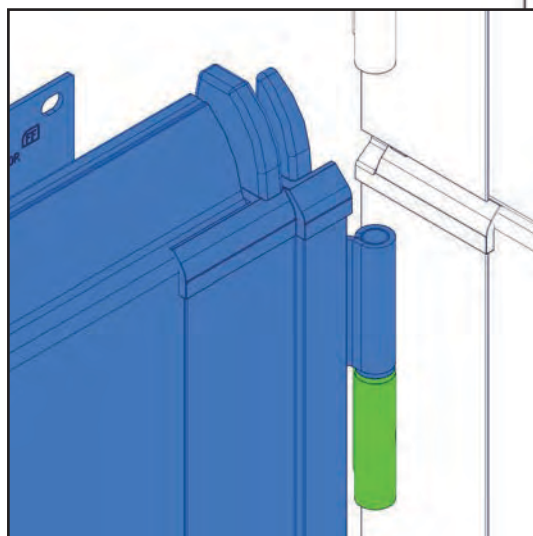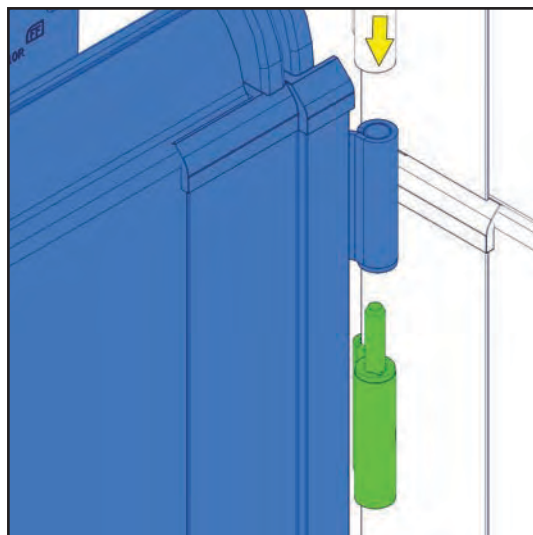



* For hinge fine tuning see page 78

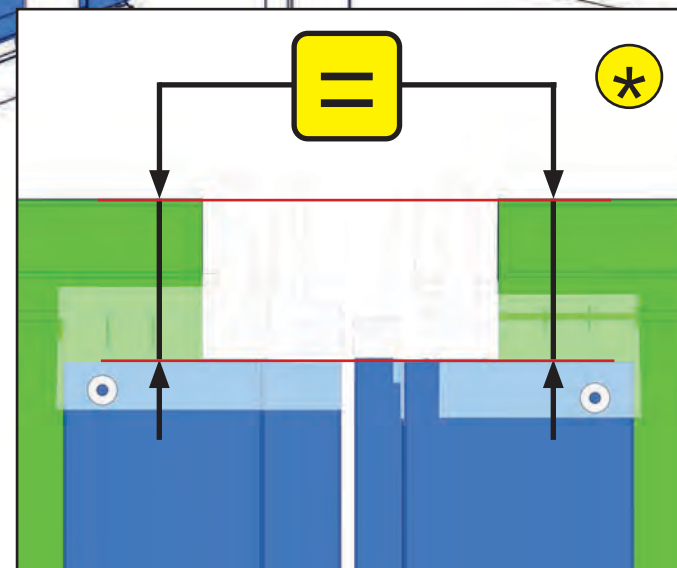

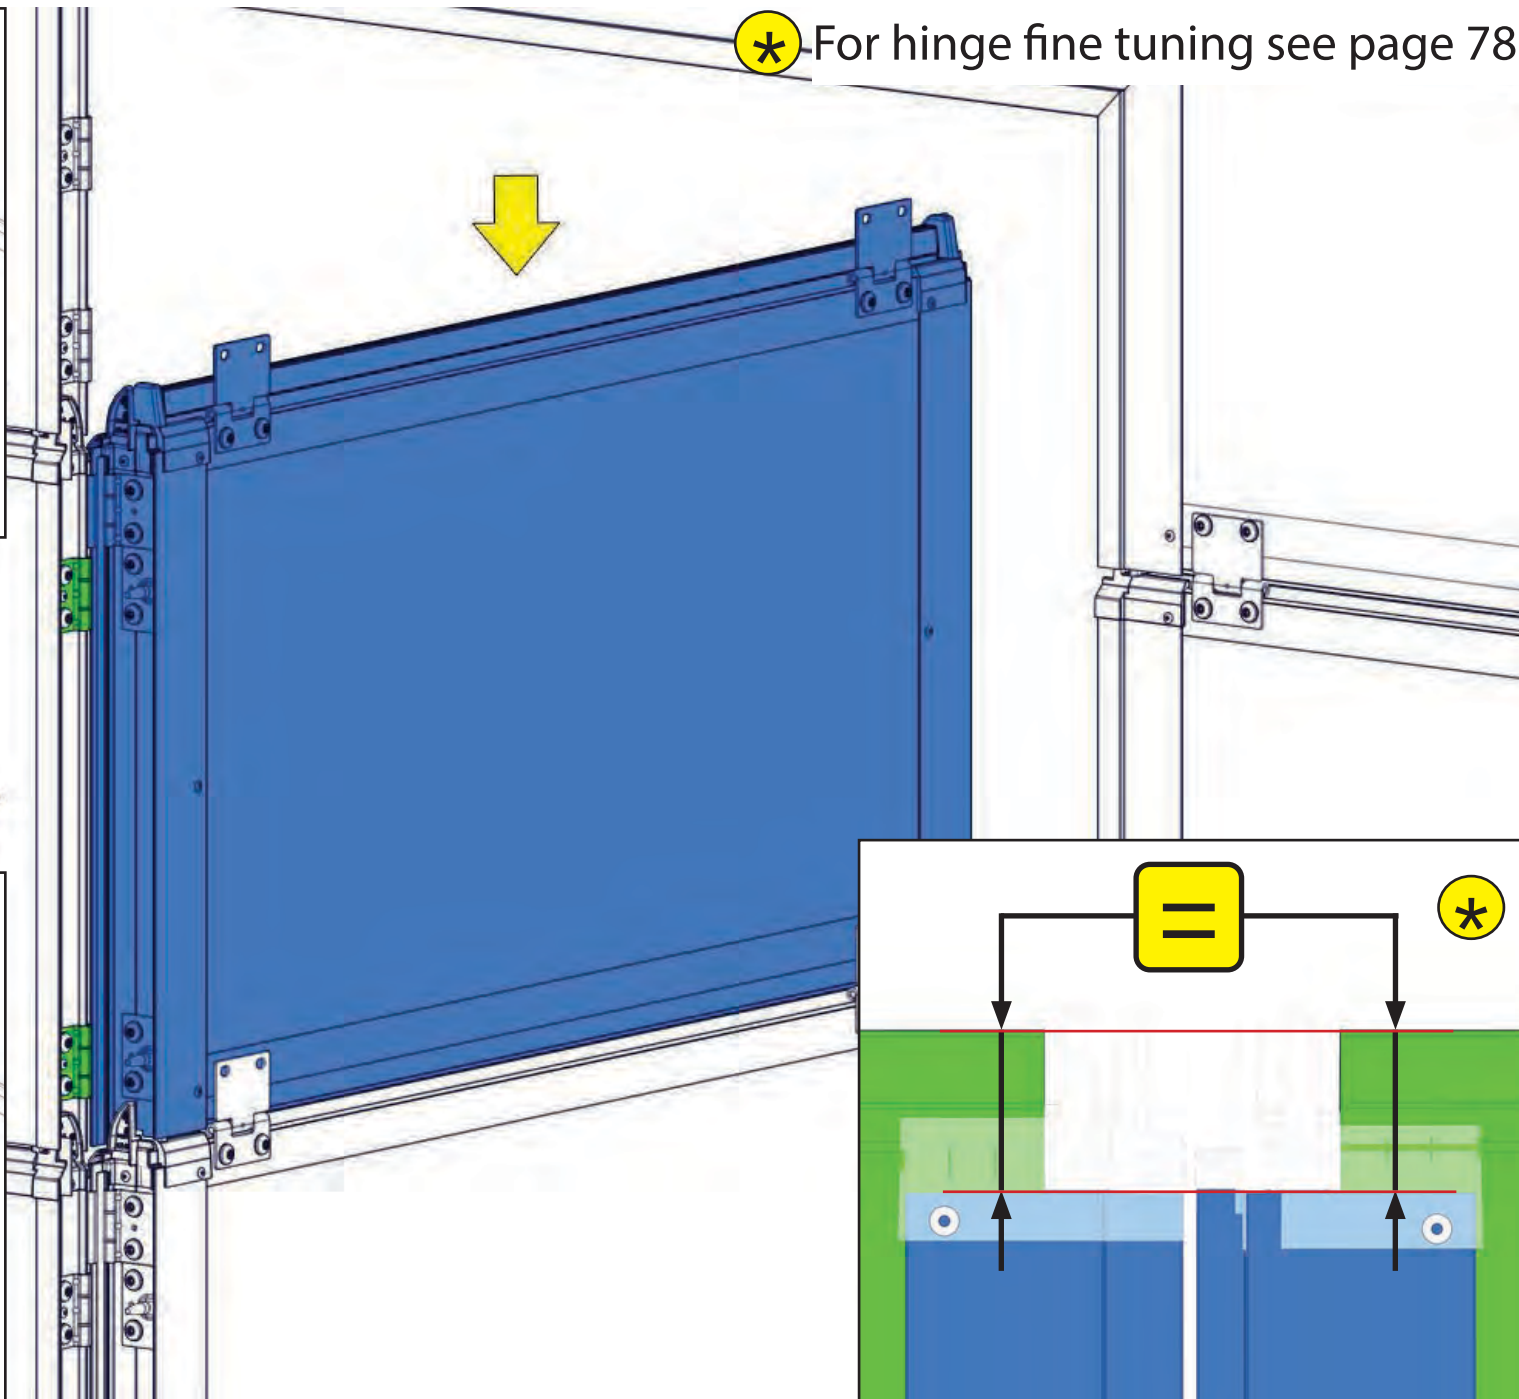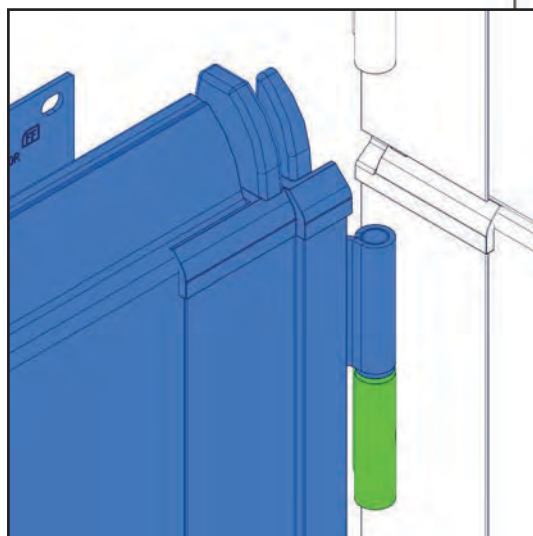
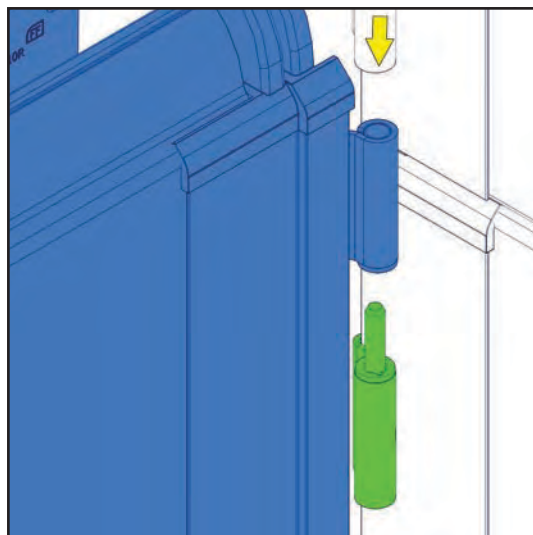




* For hinge fine tuning see page 78




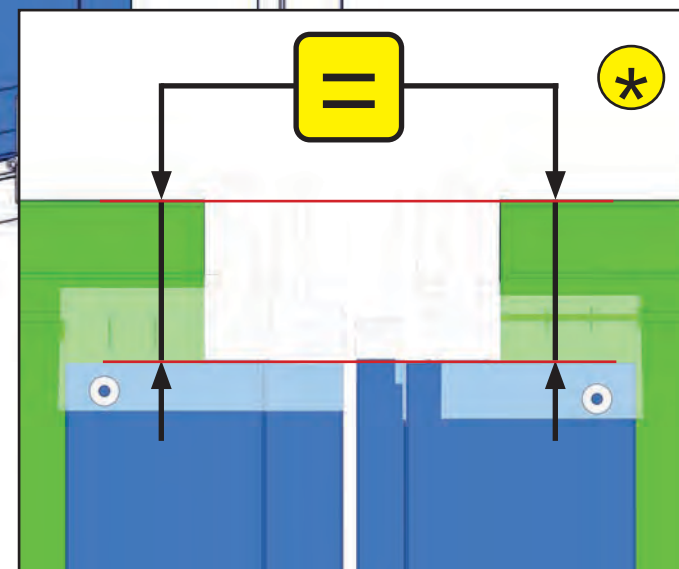


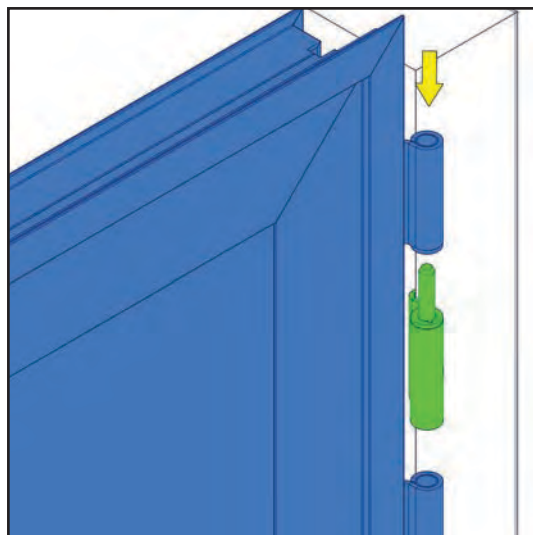

* For hinge fine tuning see page 78

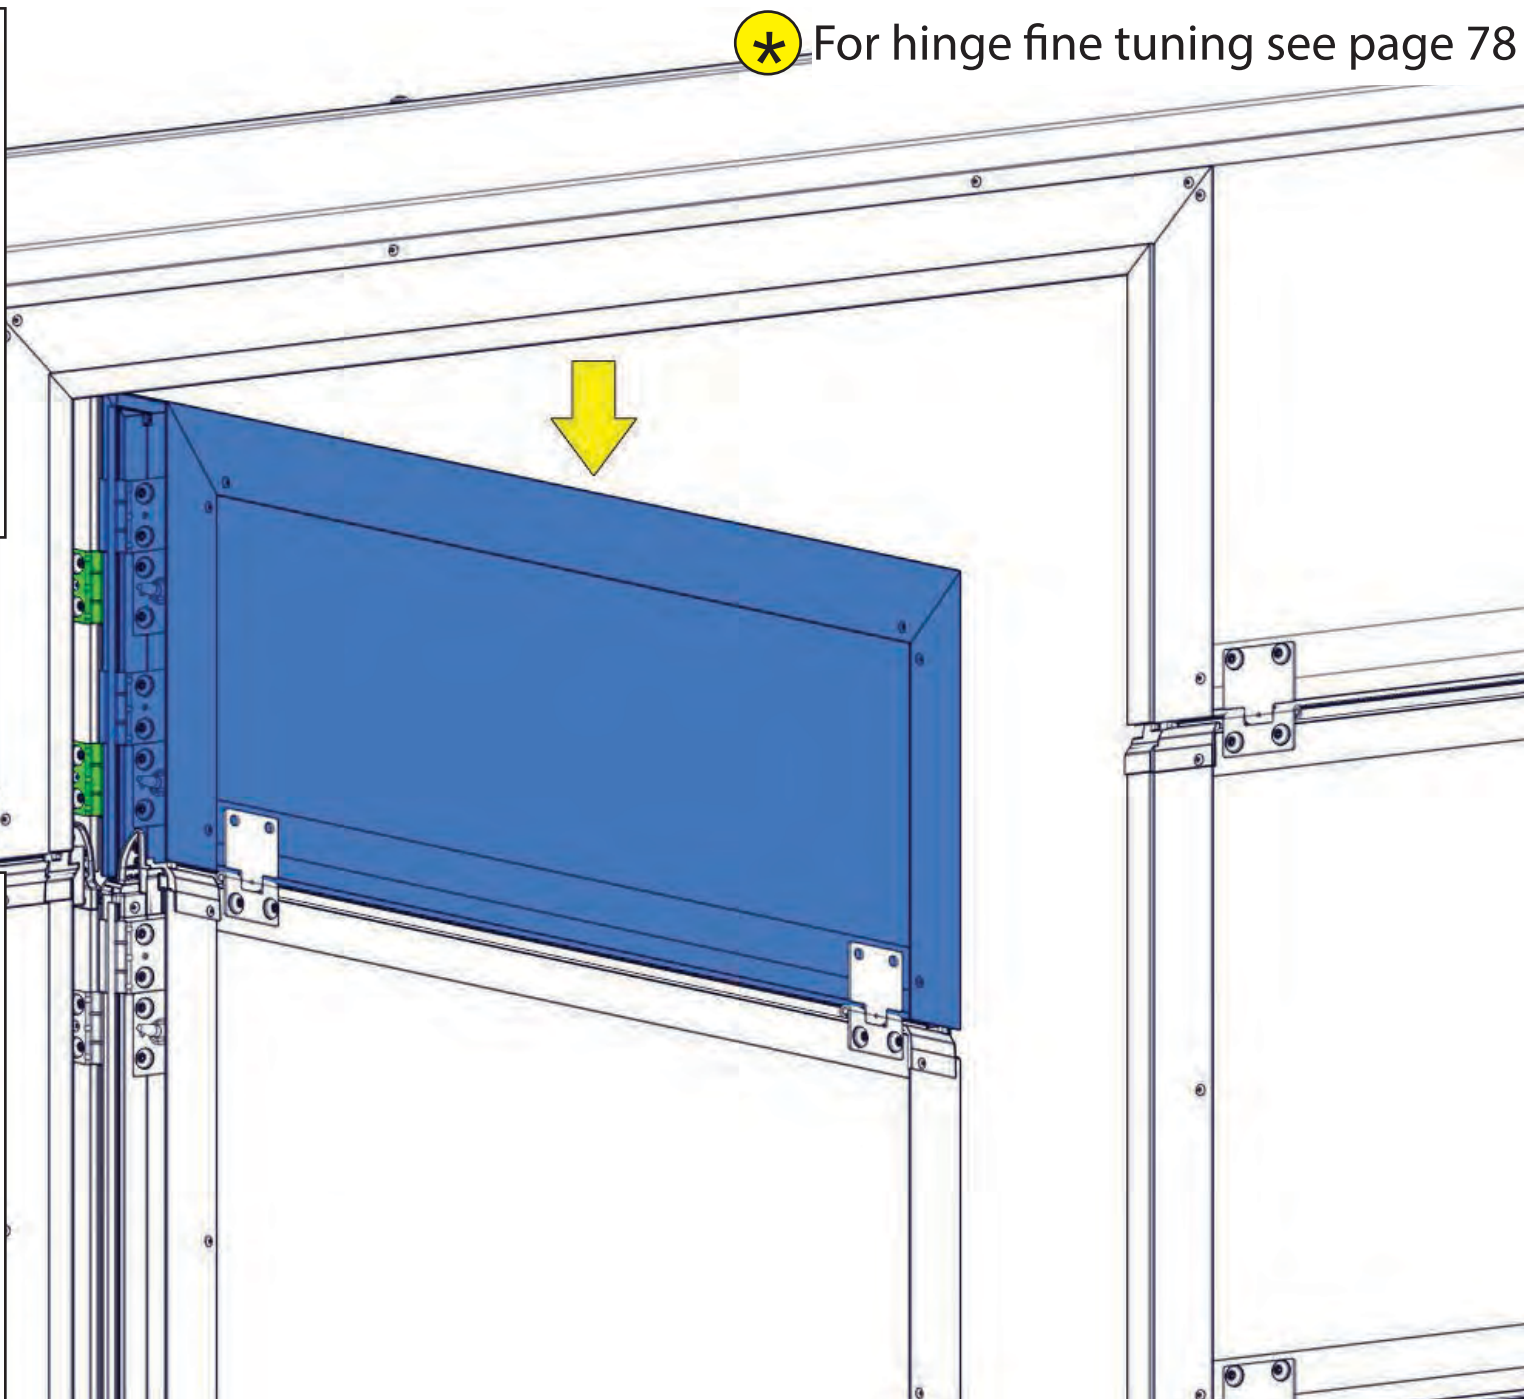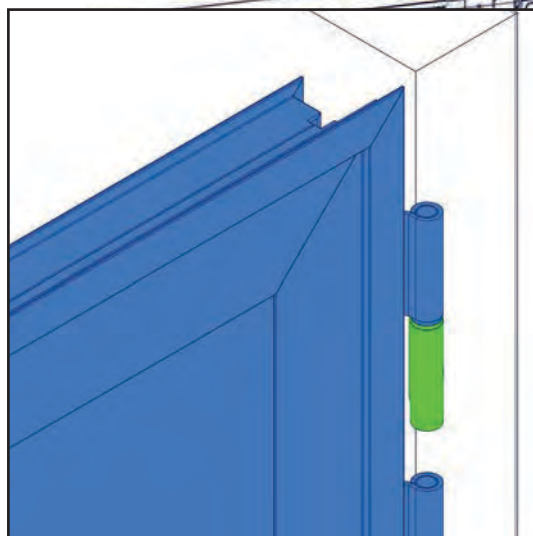

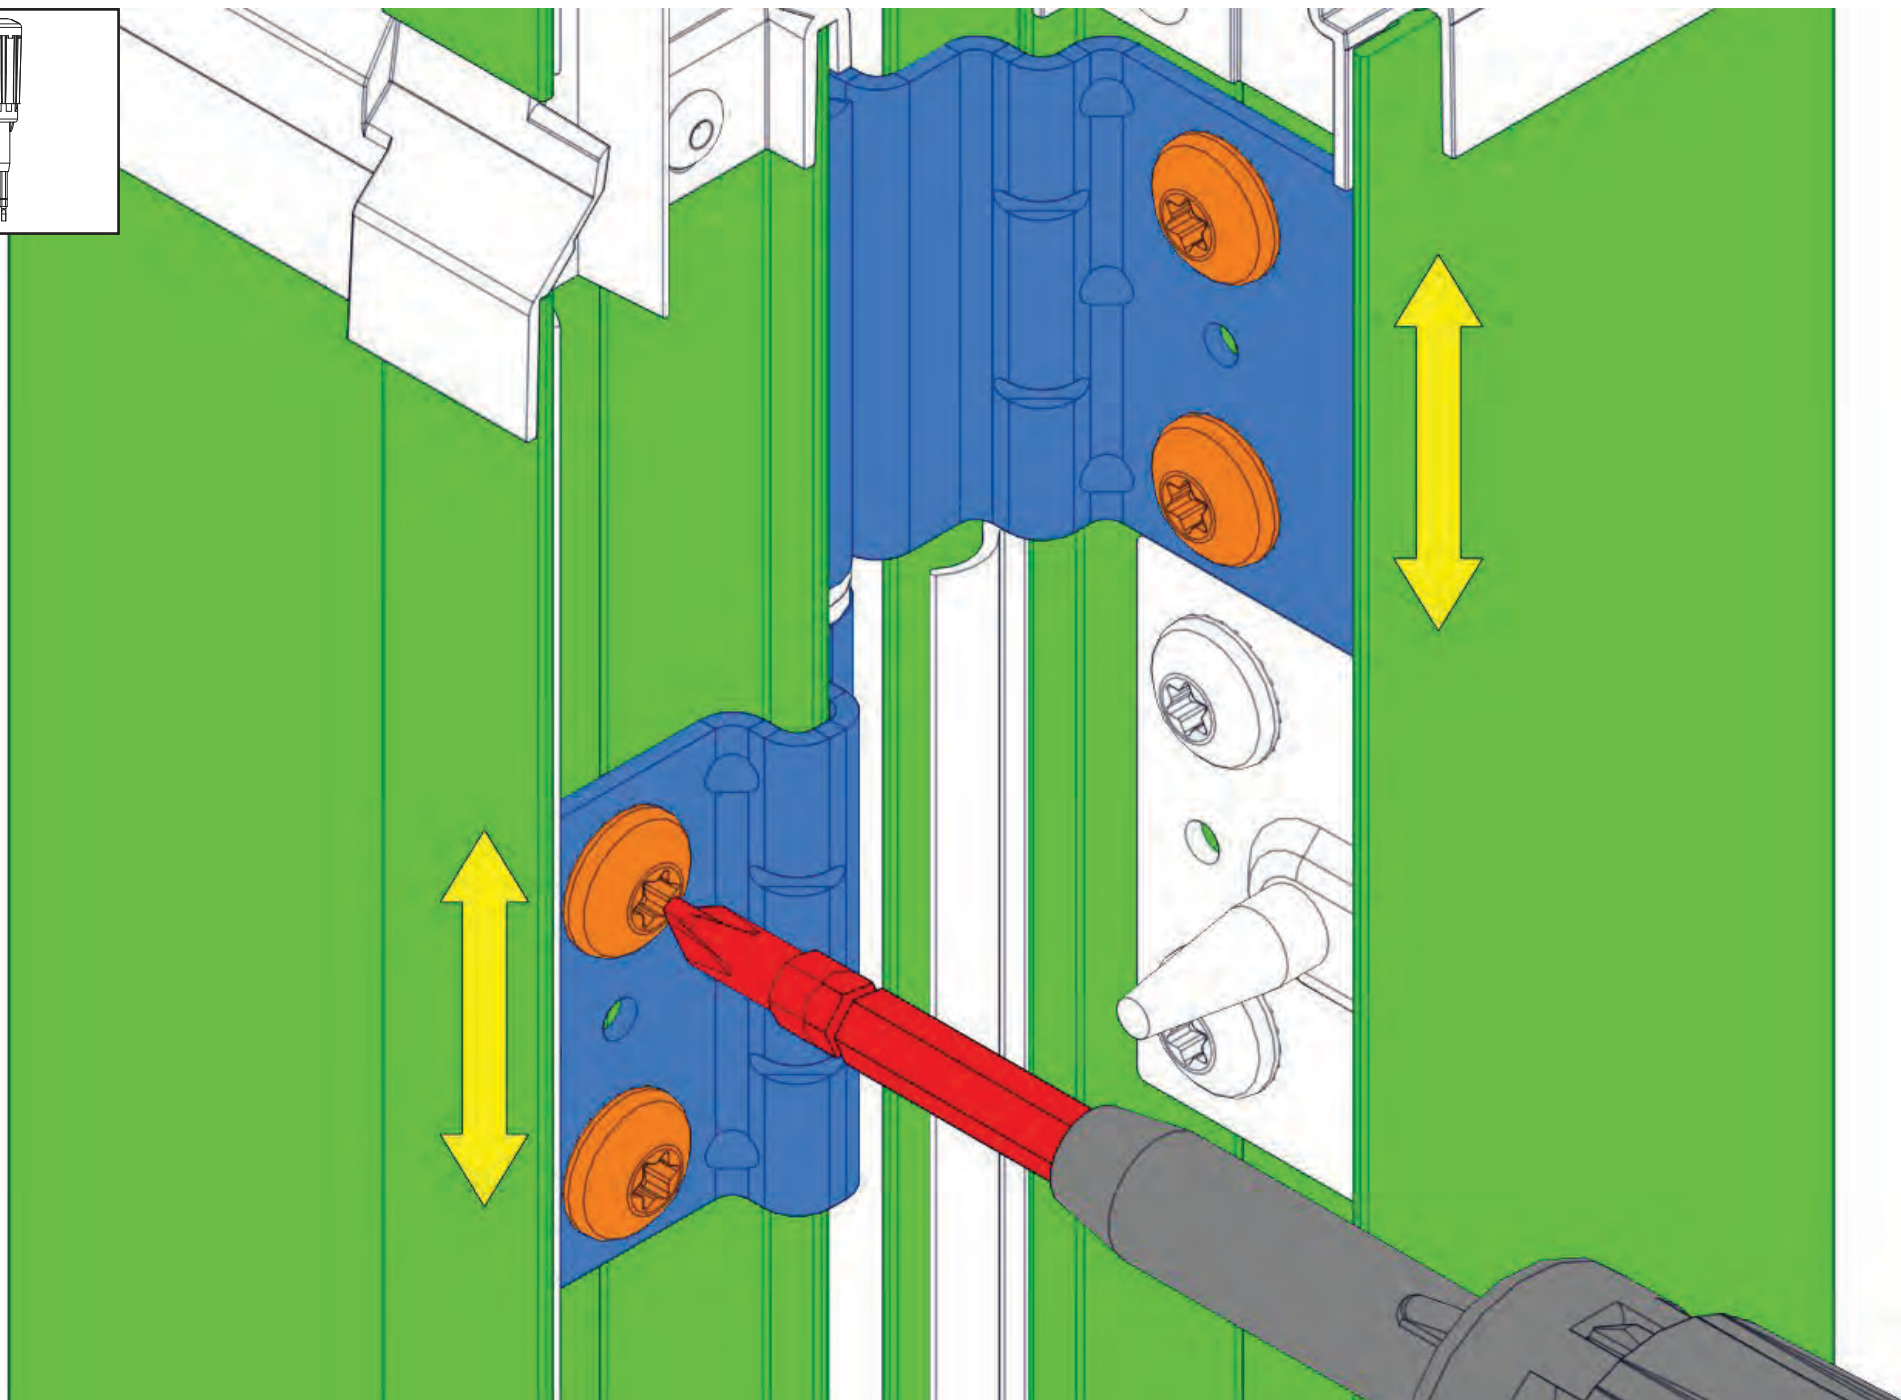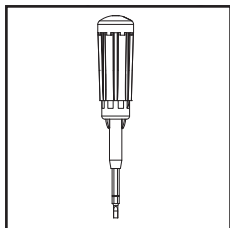

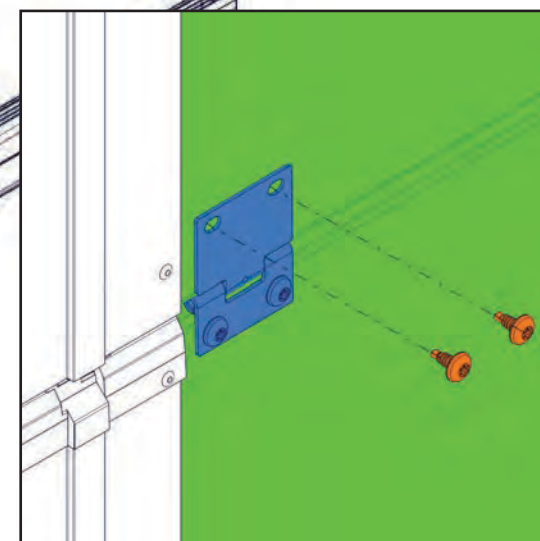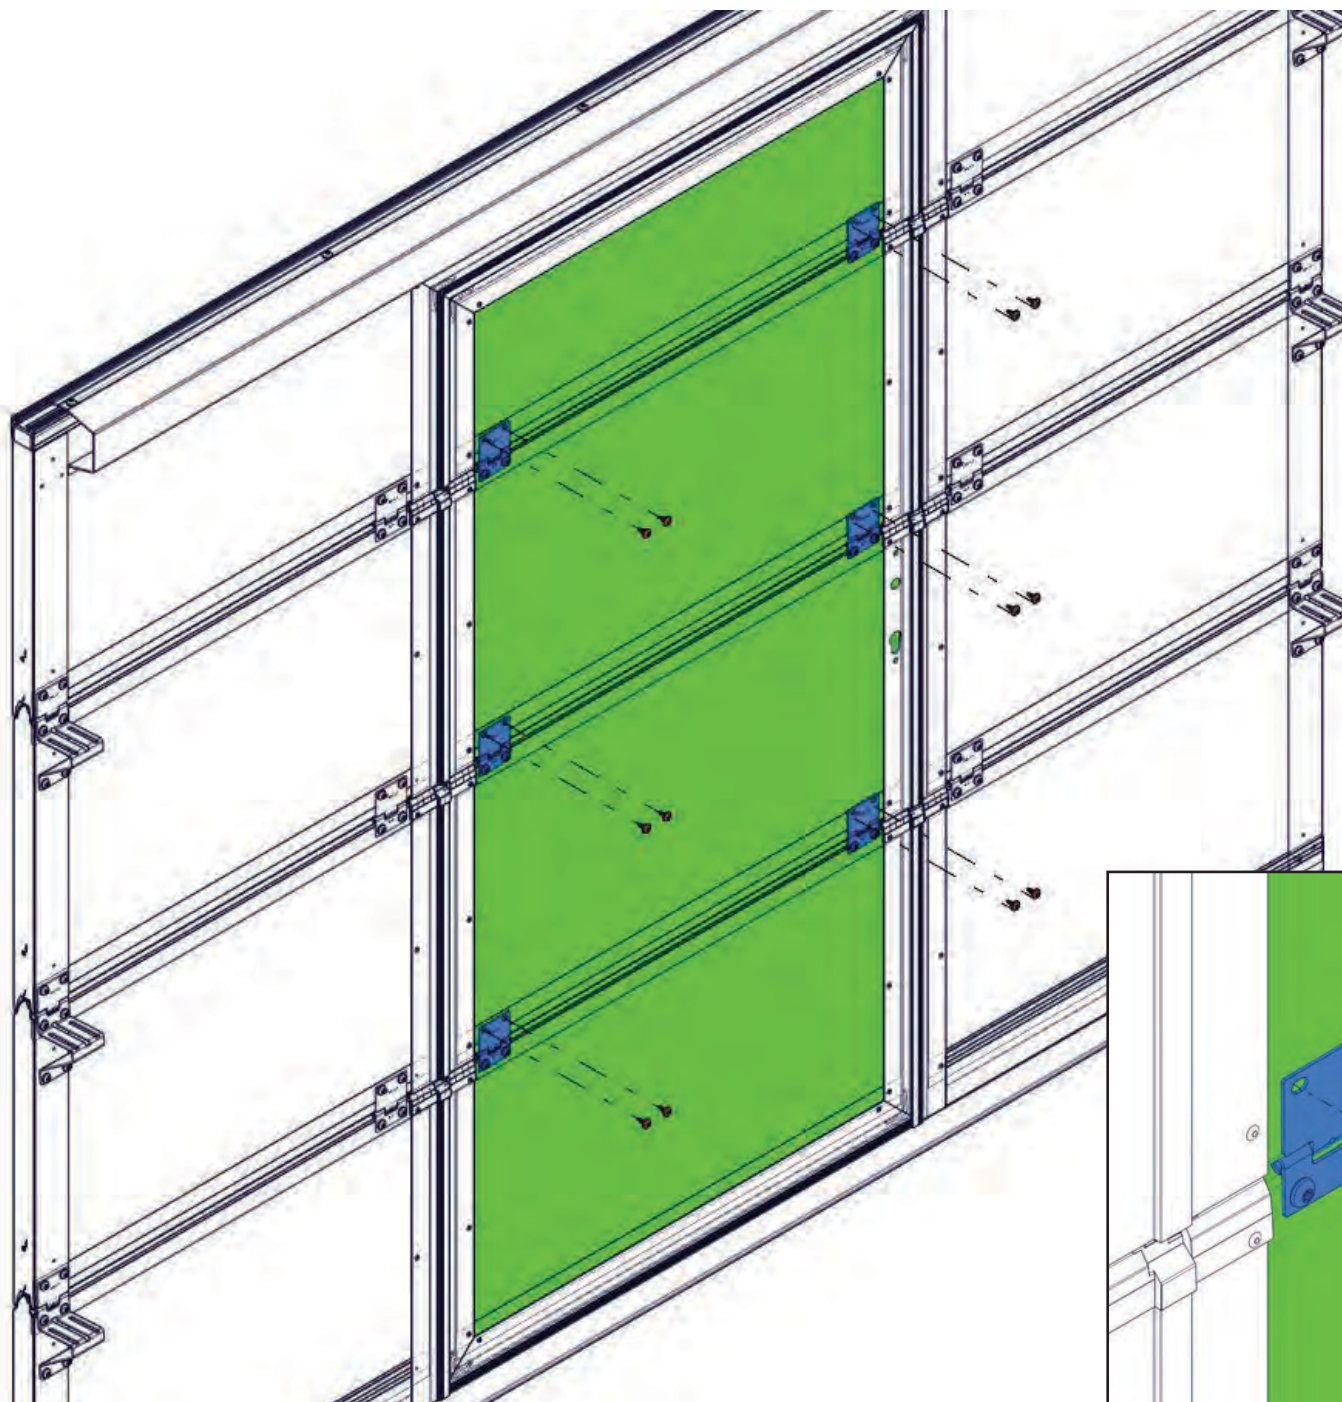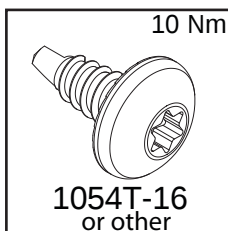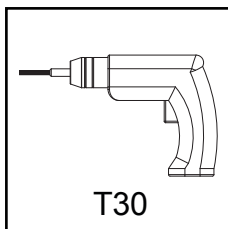

FF Installation manual


Multi Point Lock



assembly instructions




1034MPL Lock



1034PG(H)N Handle



1034MPL-LP Lock plate


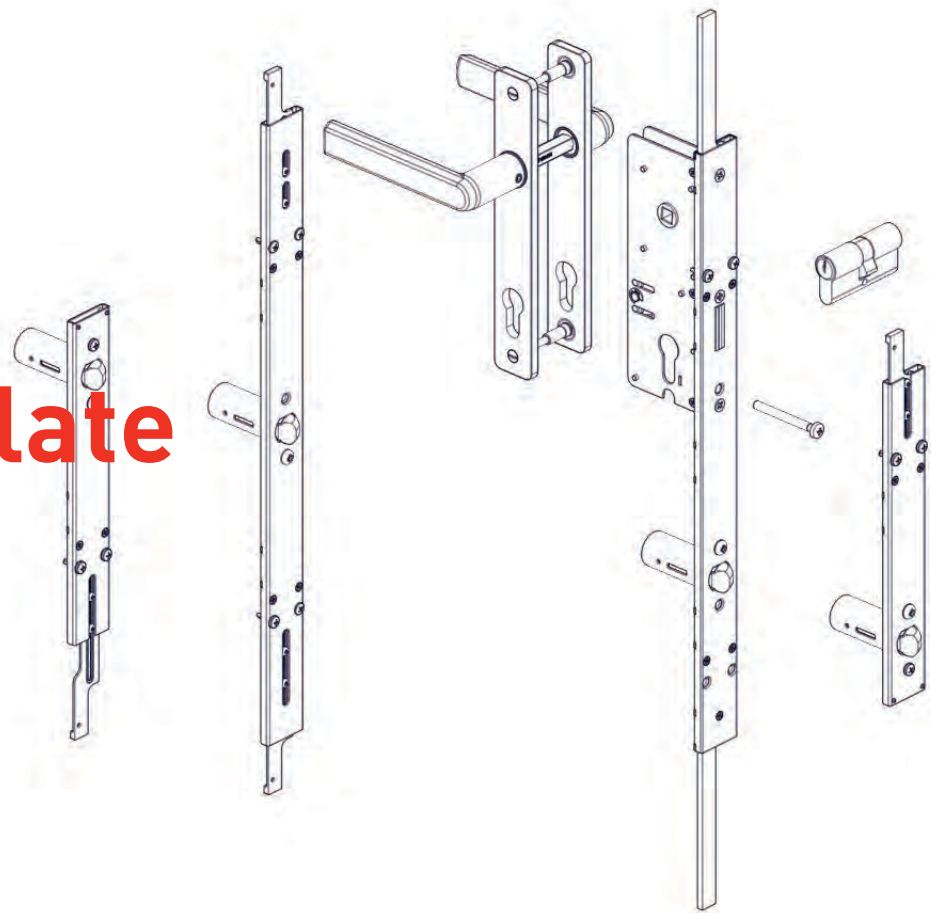


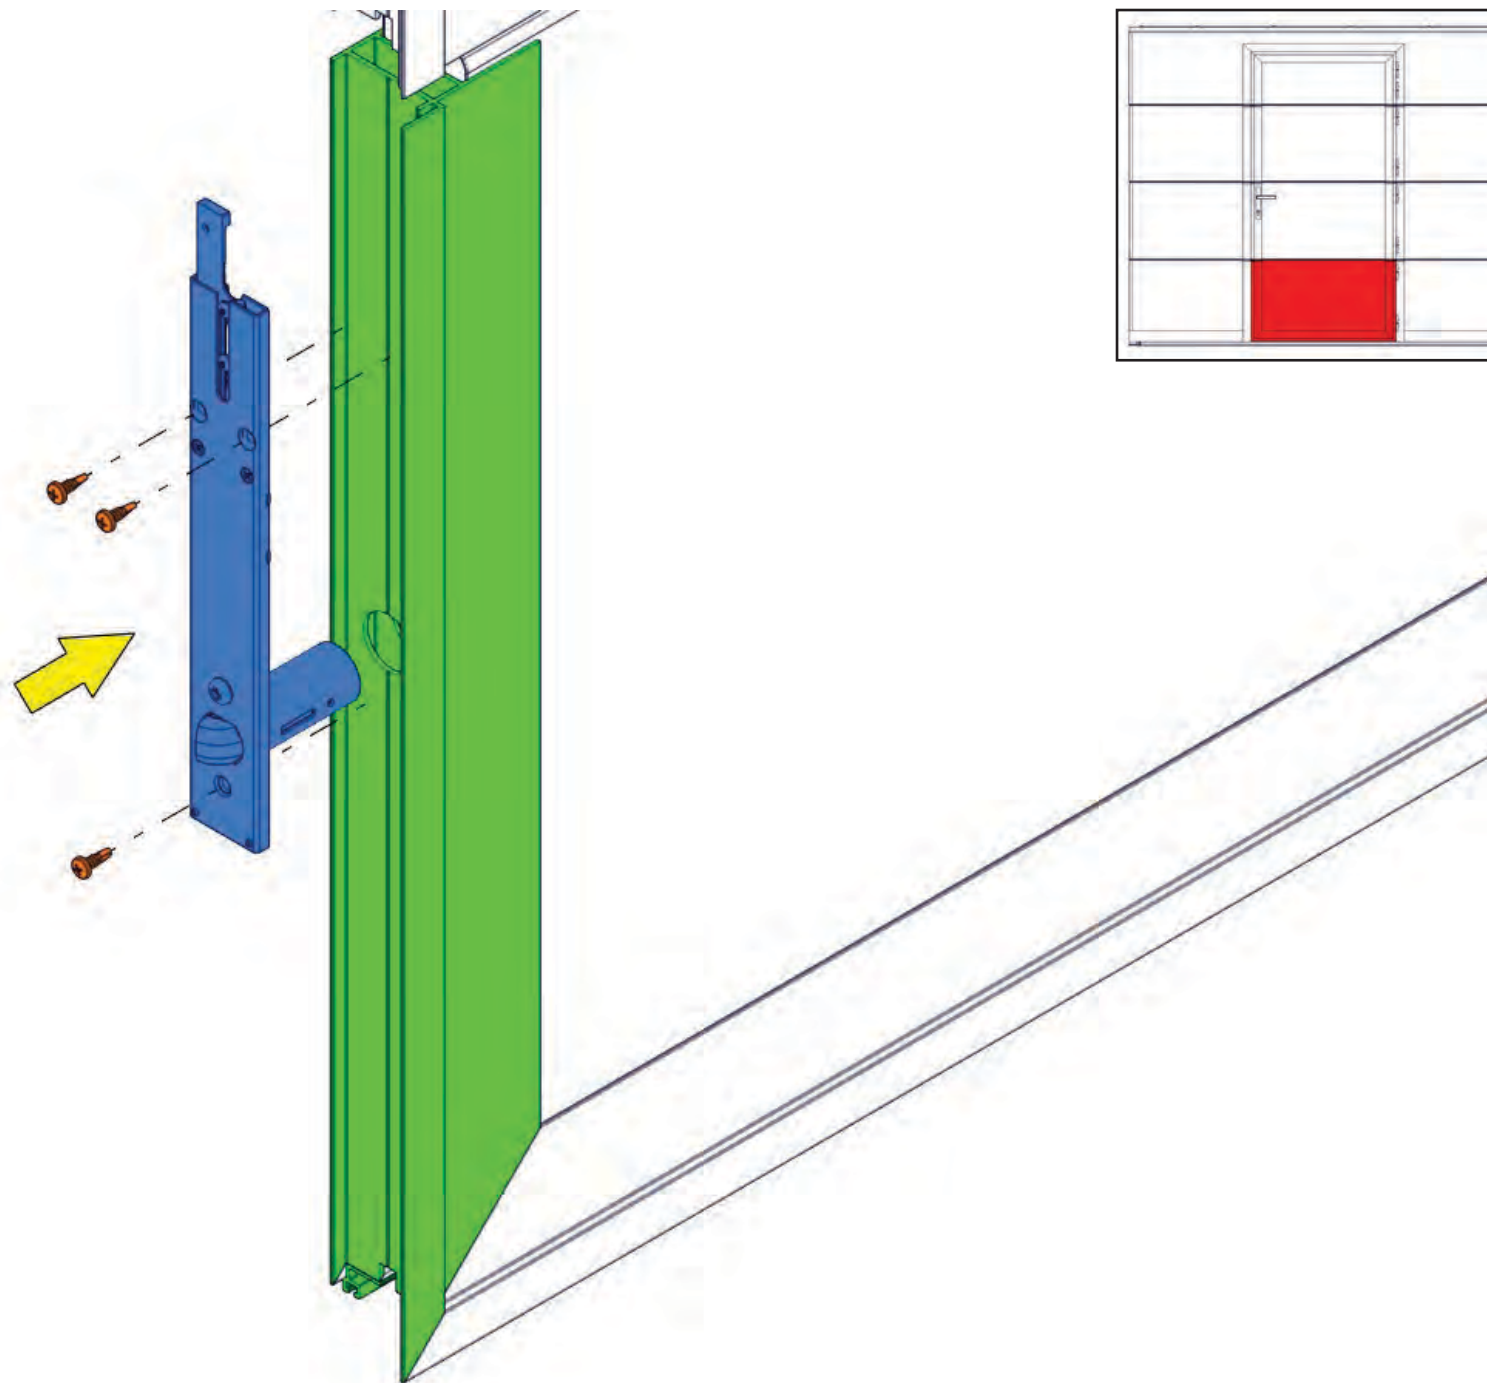
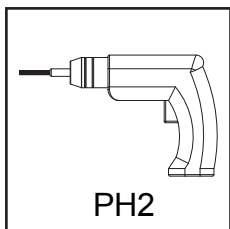


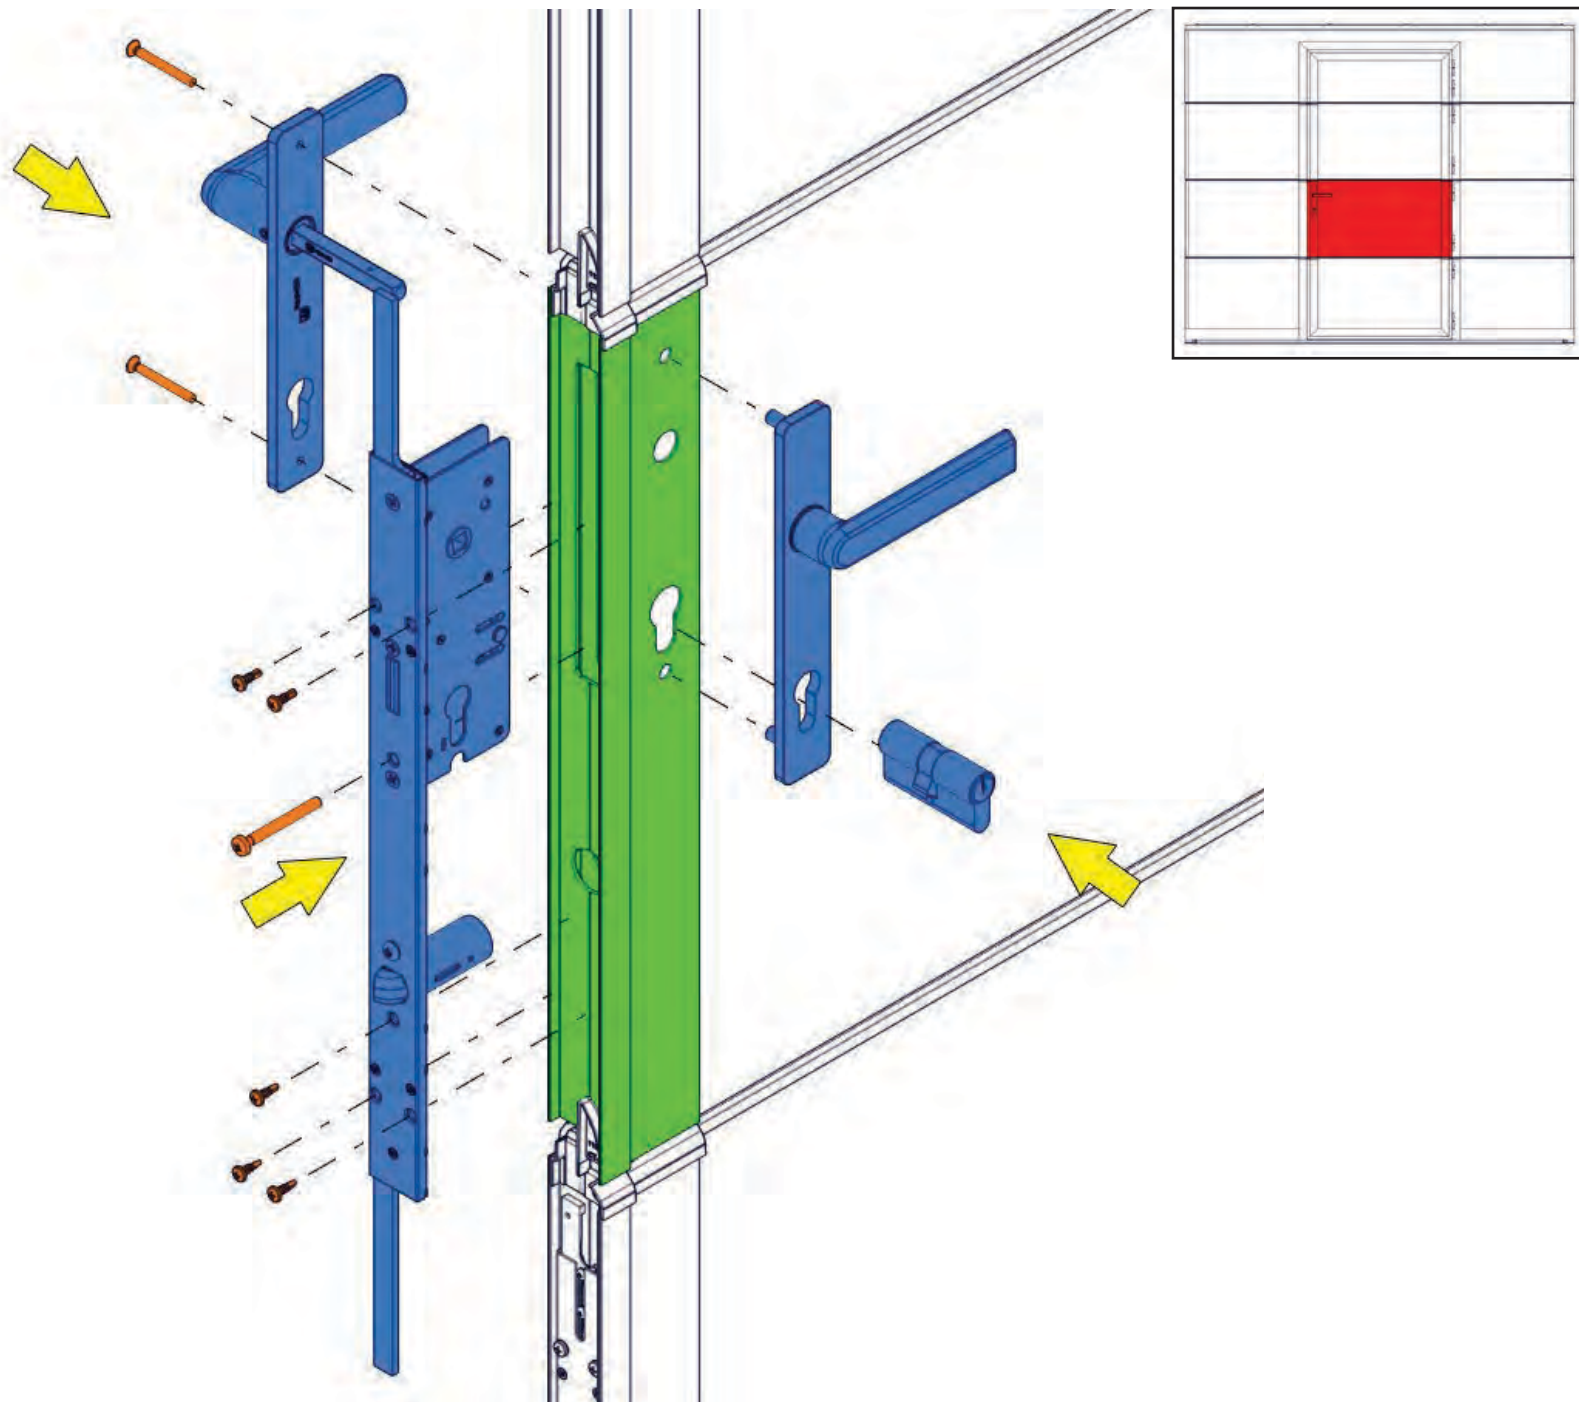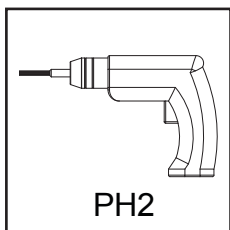
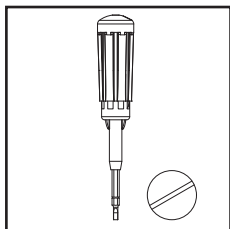


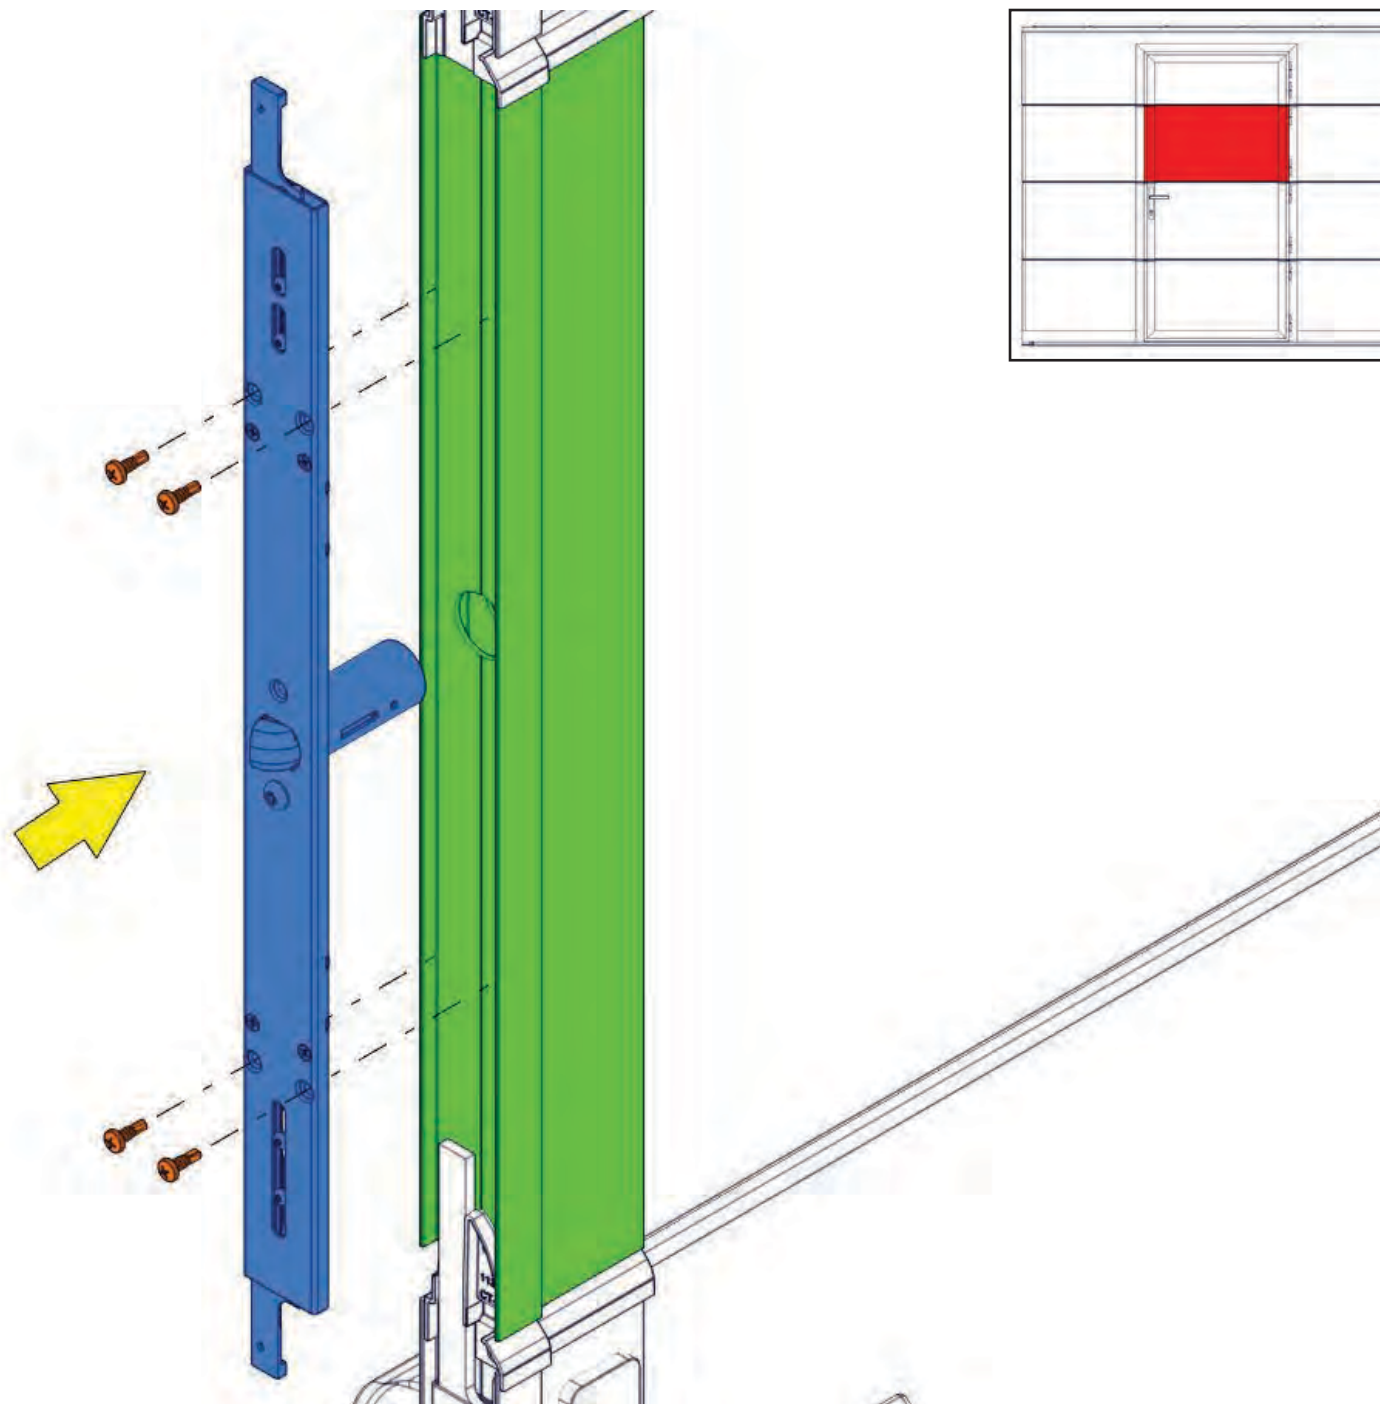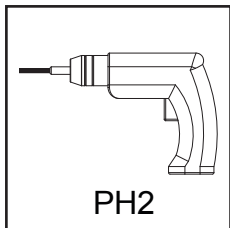

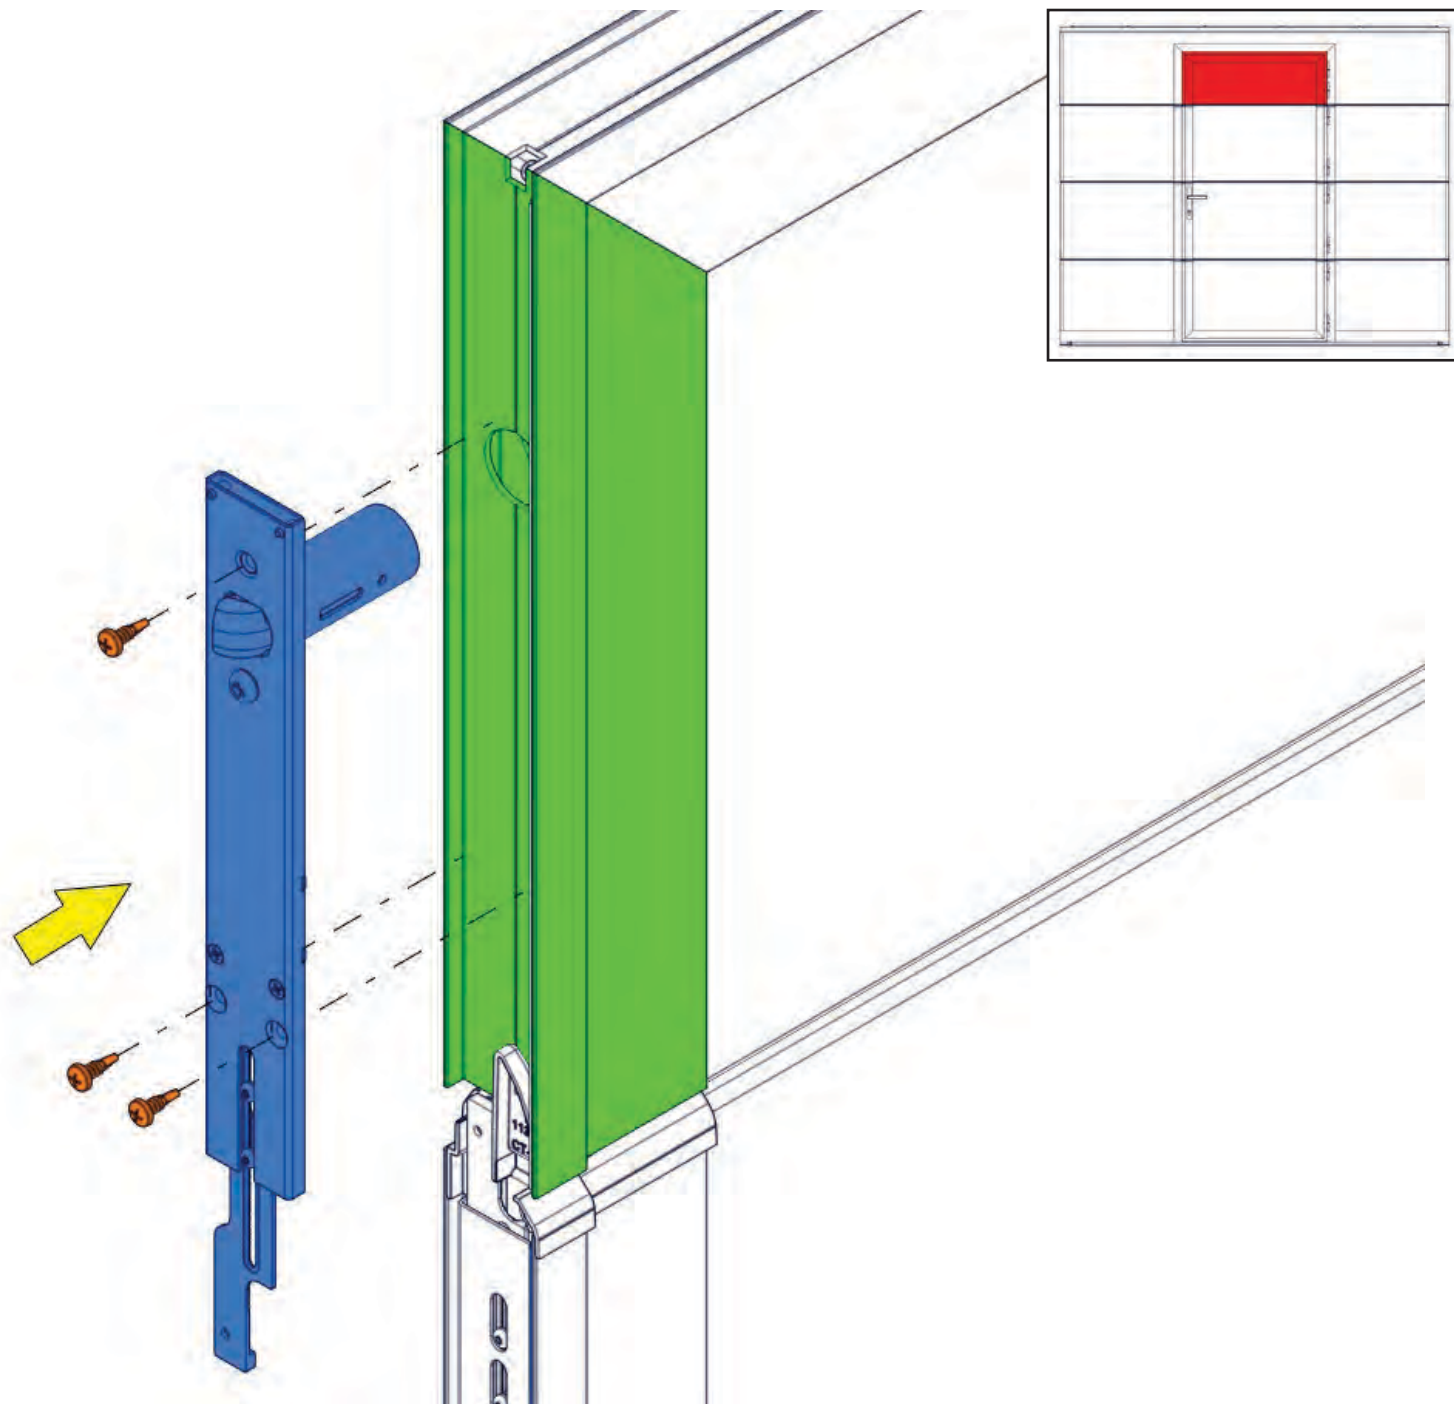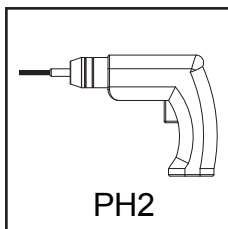

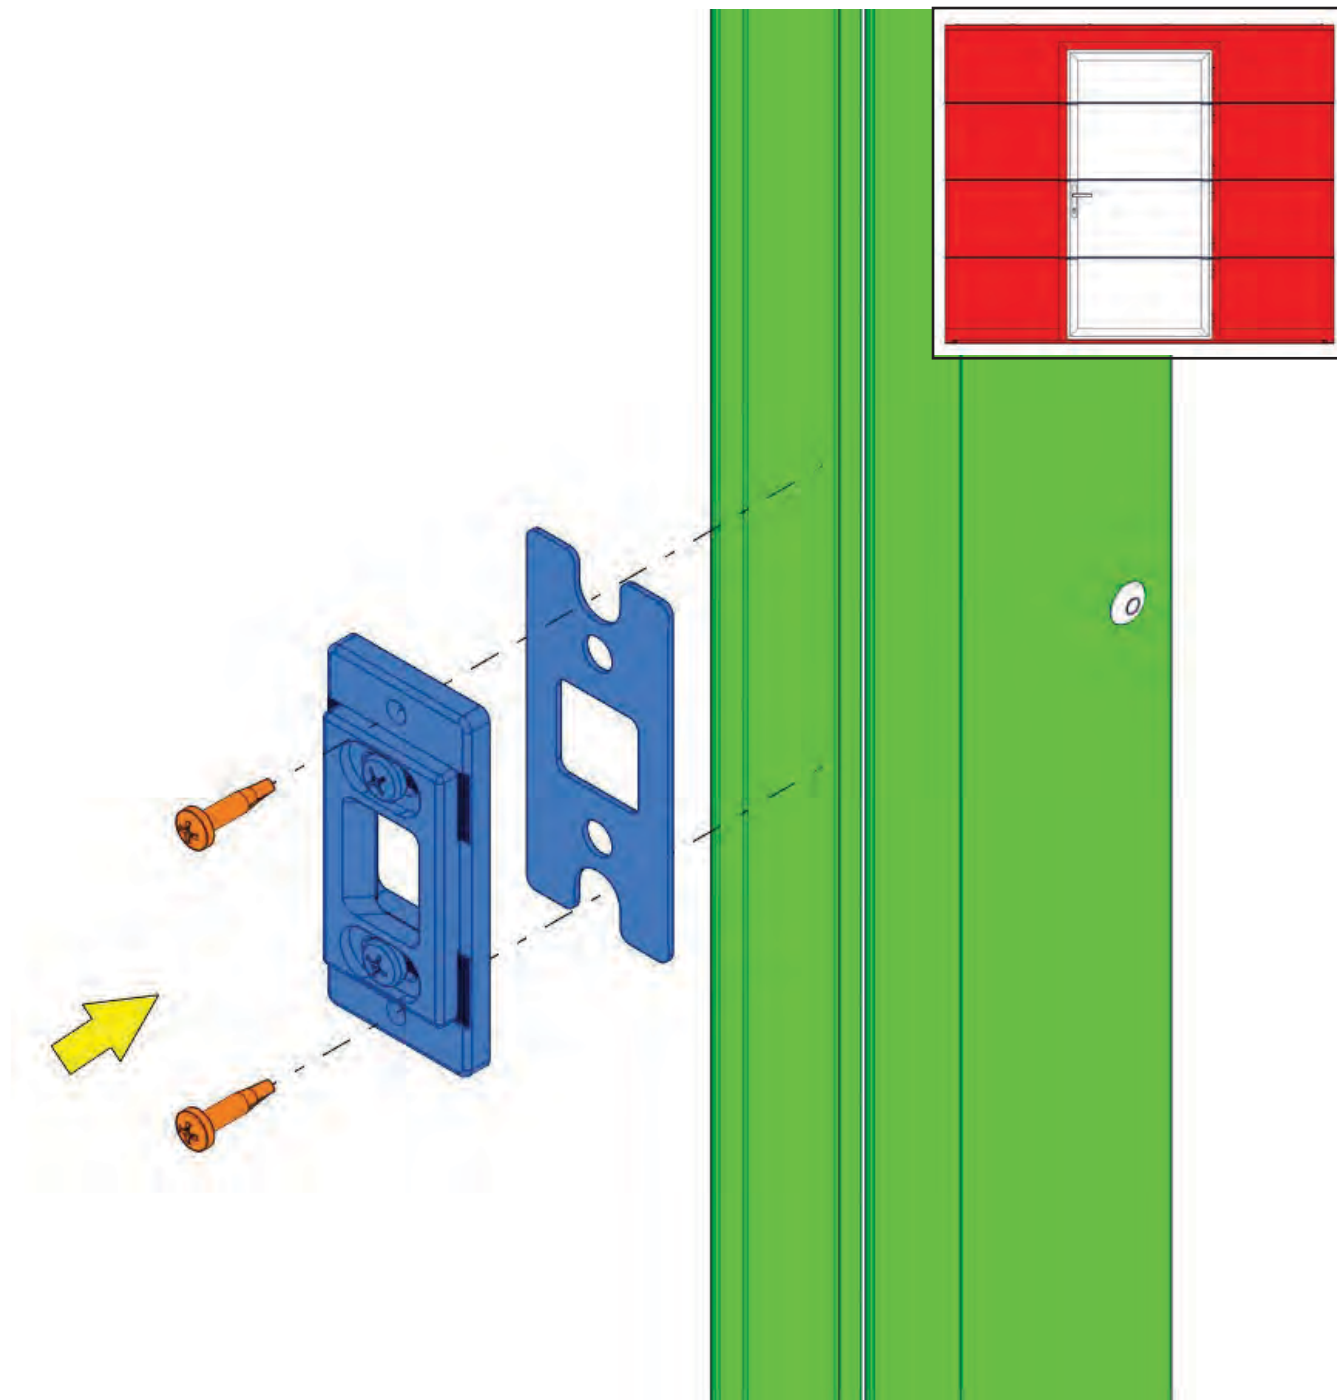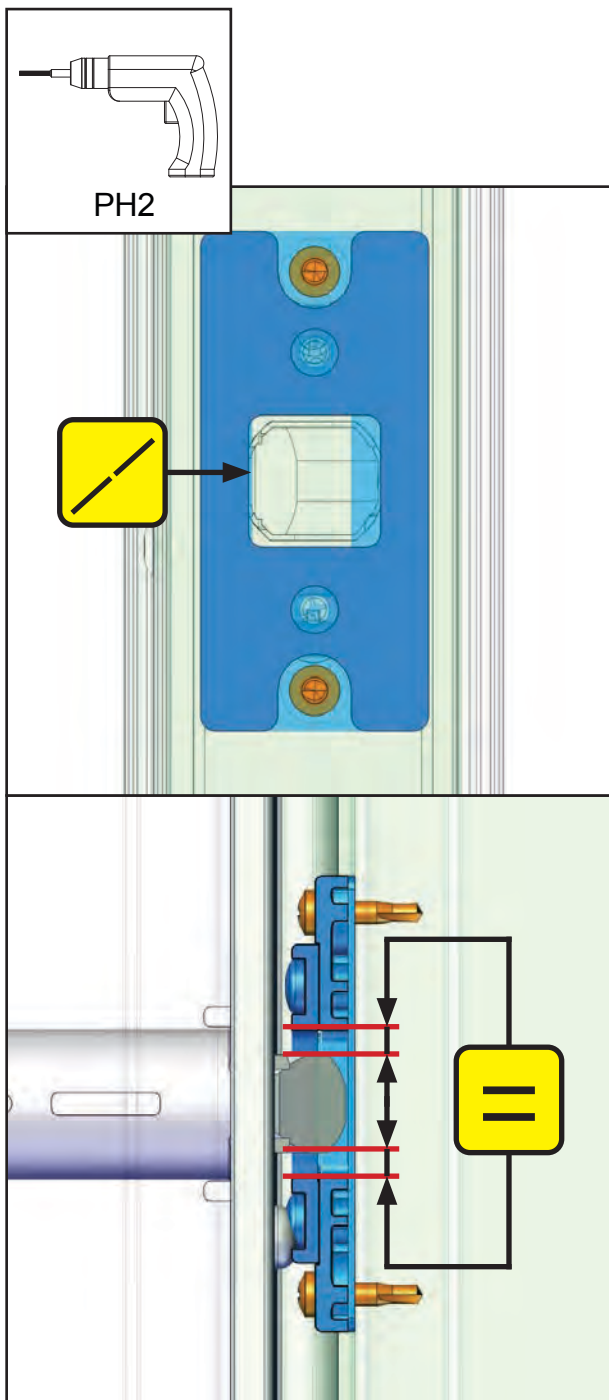

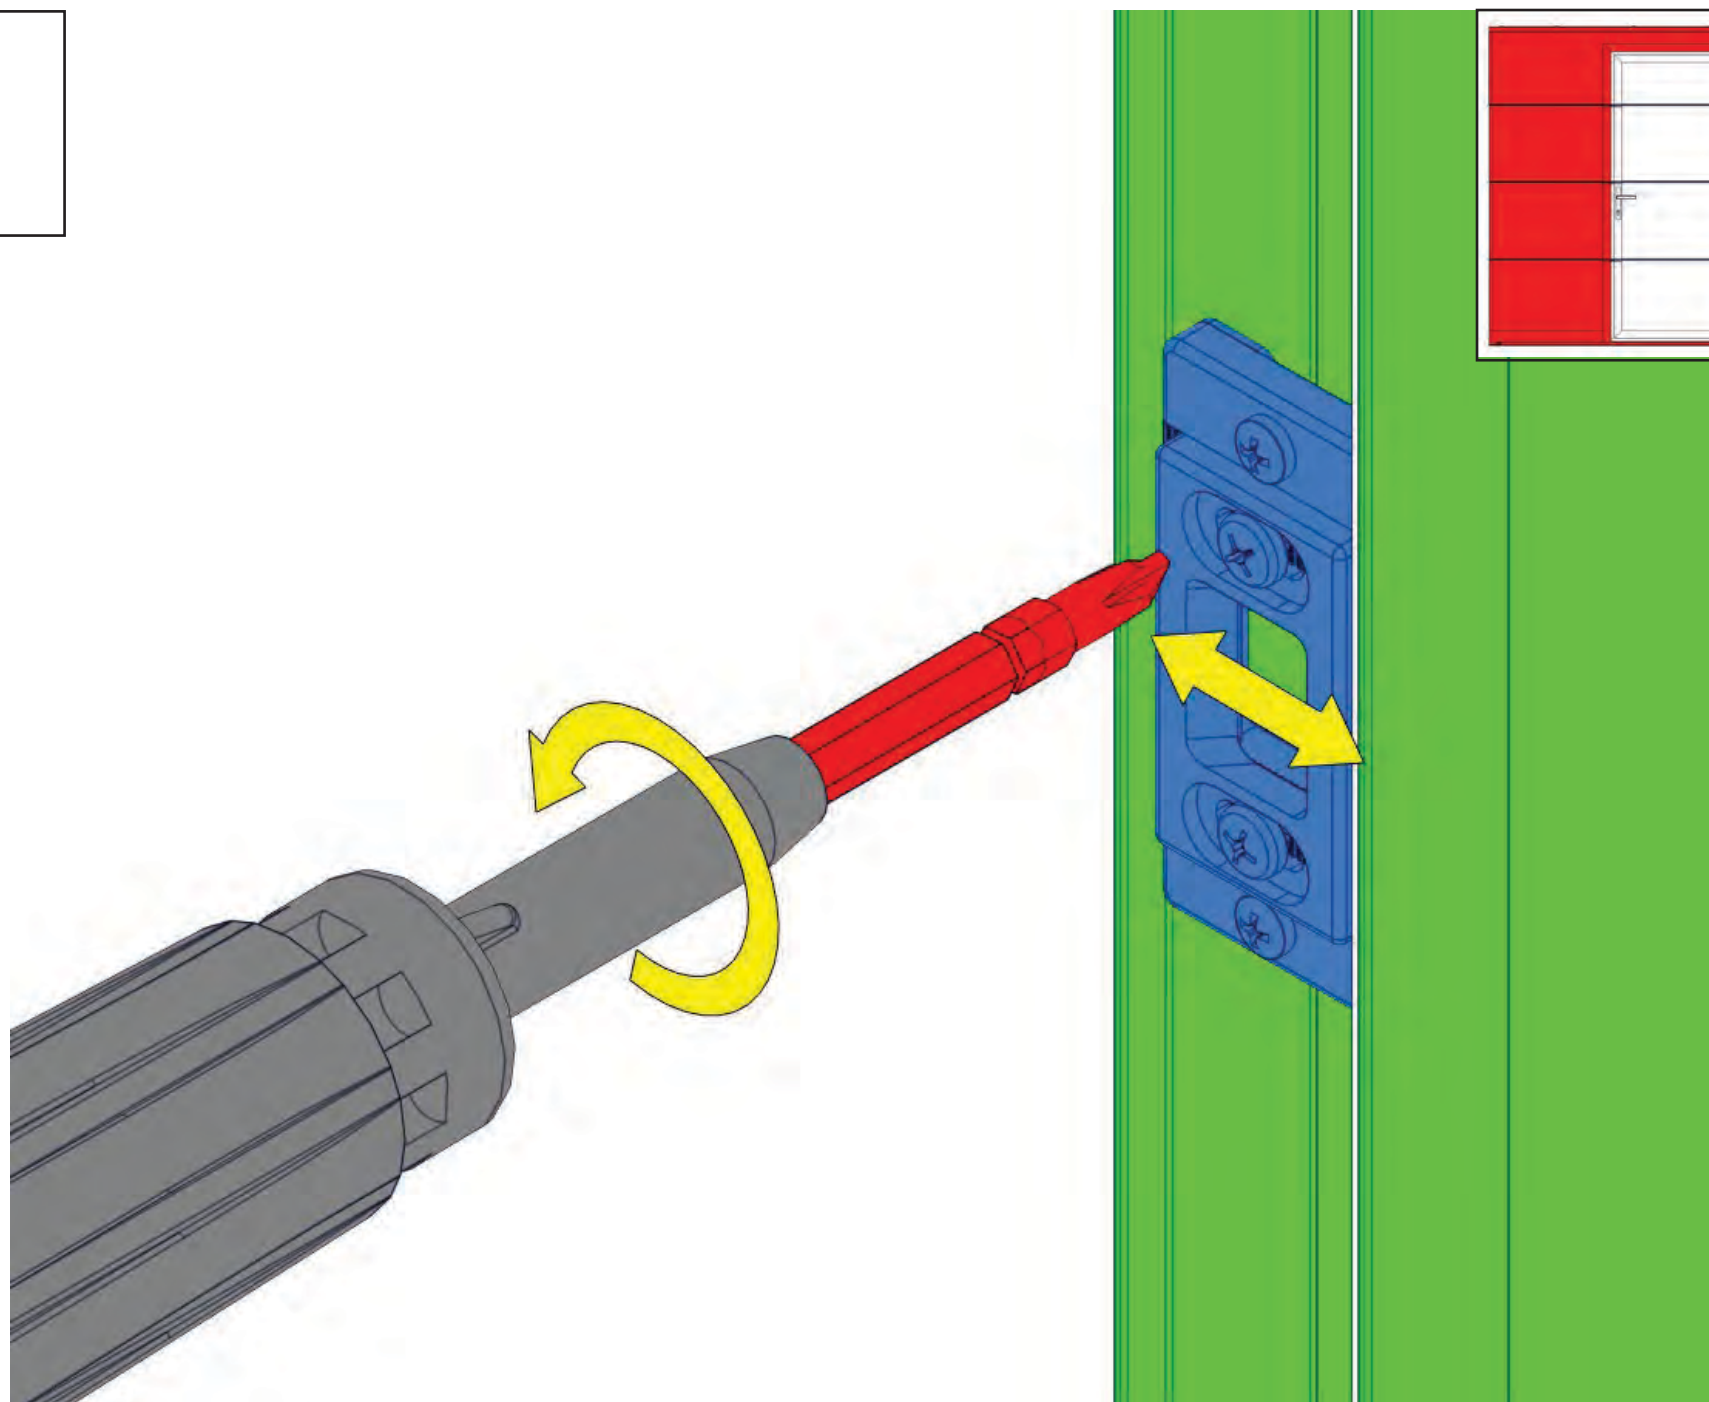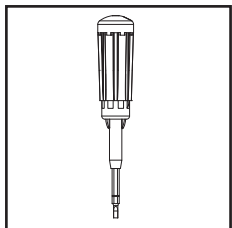

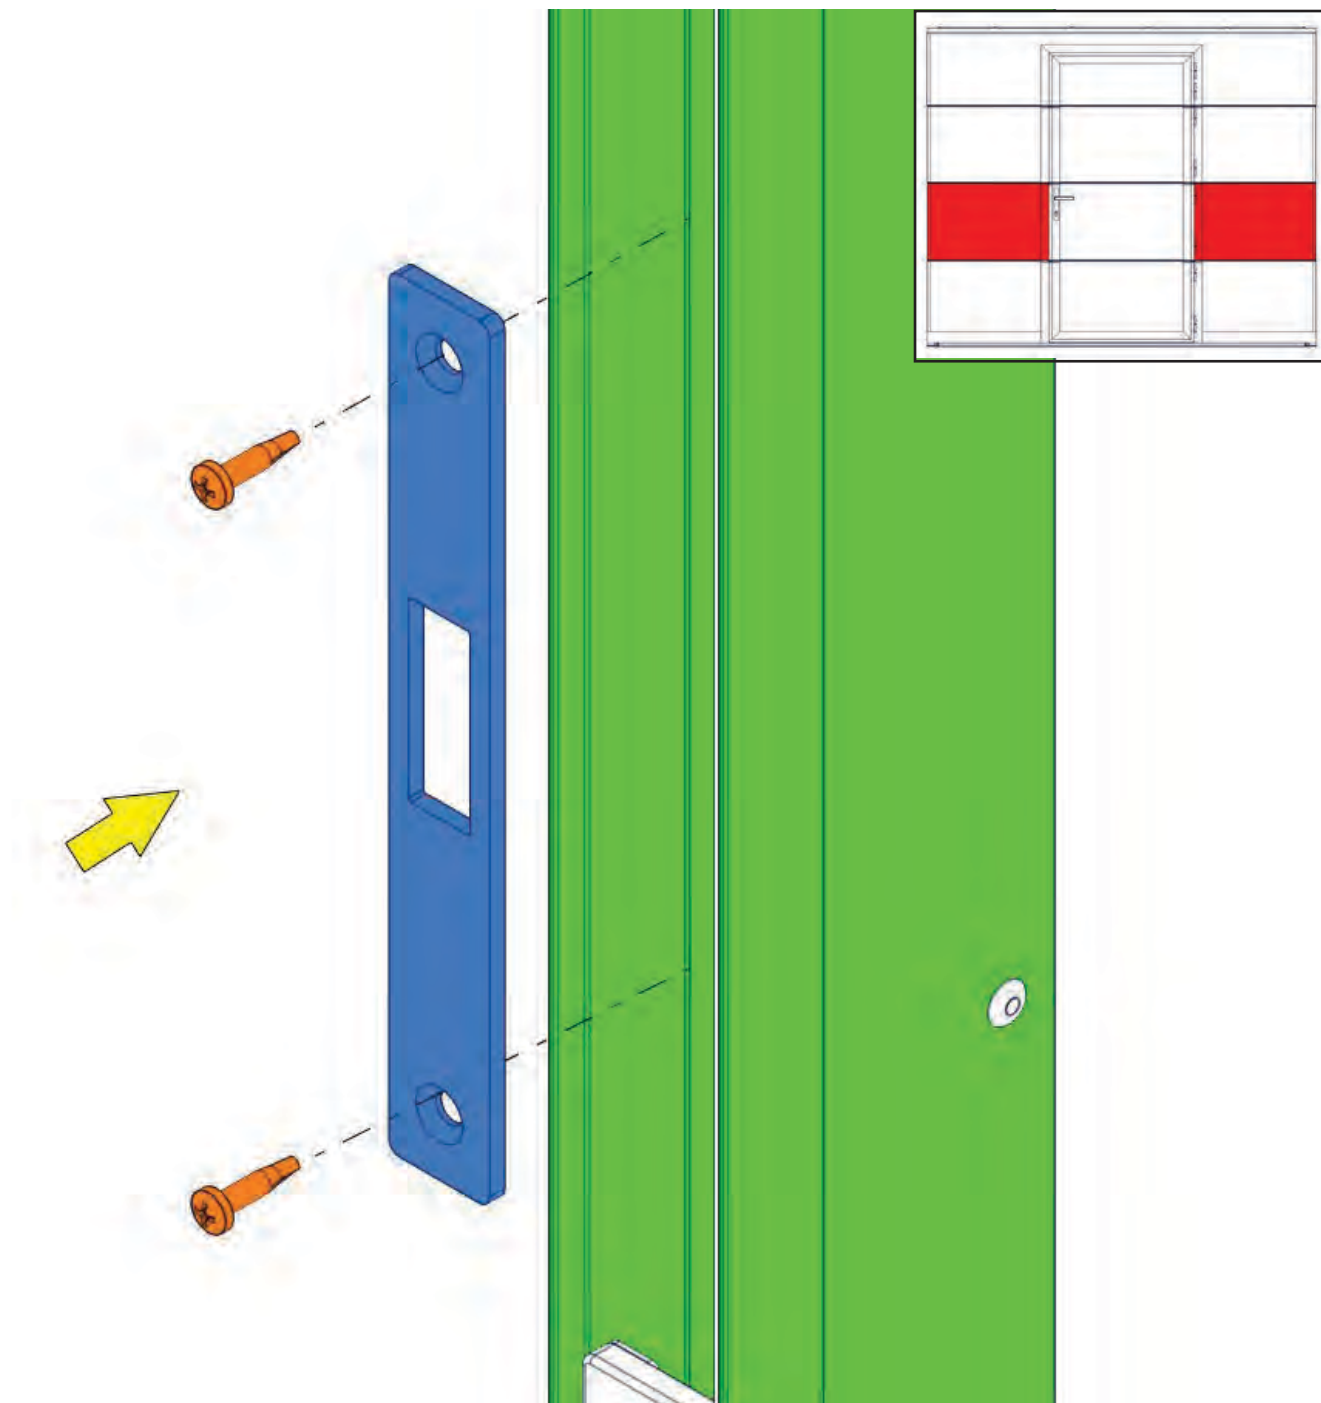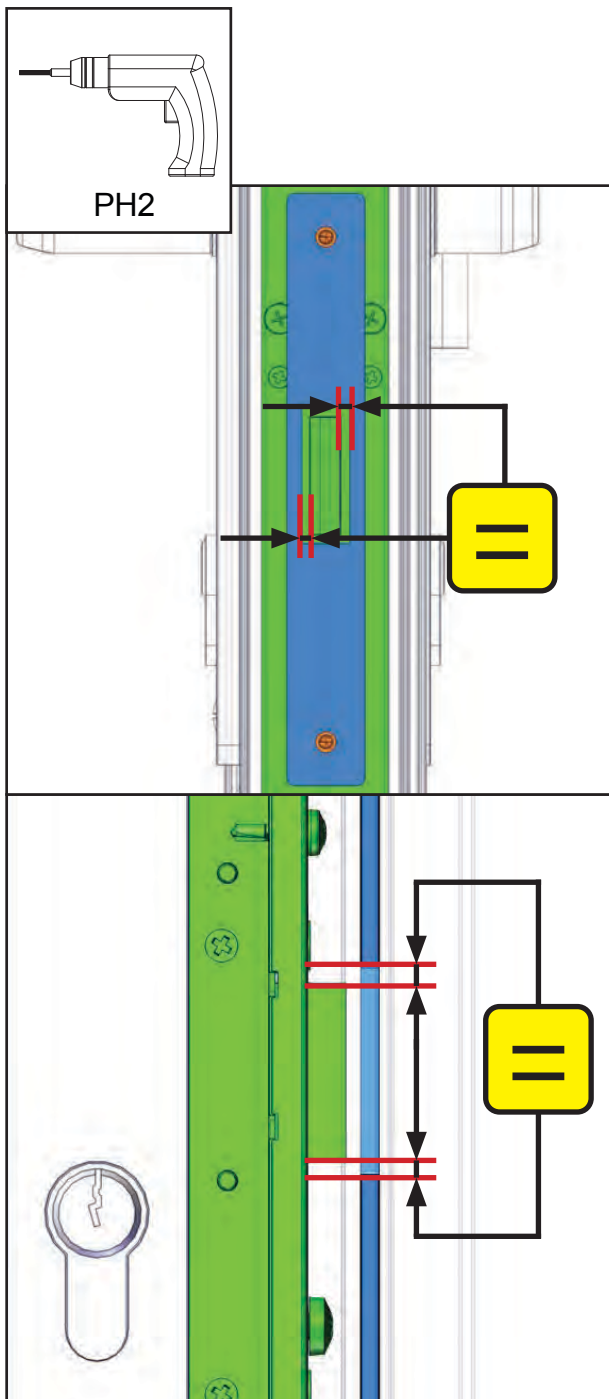

FF Installation manual

Single Point Lock

assembly instructions

1034LOCK Lock

1034PG(H)N Handle

1034SLP Lock plate 2x

C60-2525-.. Cylinder

